



# UNICA T QUICK GUIDE



Scan for the full version

This document includes only essential installation information. The complete version of the User Manual is available on Powersoft's website and accessible by scanning the included QR code.

## Regulatory Compliance Statements

### Europe

If the time arises to dispose of your product, please recycle all possible component. This symbol indicates that when the end-user wishes to discard this product, it must be sent to separate collection facilities for recovery and recycling. By separating this product from other household-type waste, the volume of waste sent to incinerators or land-fills will be reduced and natural resources will thus be conserved.



The Waste Electrical and Electronic Equipment Directive (WEEE Directive) aims to minimise the impact of electrical and electronic goods on the environment. Powersoft S.p.A. comply with the Directive 2012/19/EU of the European Parliament on waste electrical and electronic equipment (WEEE) in order to reduce the amount of WEEE that is being disposed of in land-fill site. All of our products are marked with the WEEE symbol; this indicates that this product must NOT be disposed of with other waste. Instead it is the user's responsibility to dispose of their waste electrical and electronic equipment by handing it over to an approved reprocessor, or by returning it to Powersoft S.p.A. for reprocessing. For more information about where you can send your waste equipment for recycling, please contact Powersoft S.p.A. or one of your local distributors.

### USA

#### FCC Supplier's Declaration of Conformity

Responsible Party:  
Powersoft S.p.A.  
Via Enrico Conti, 5  
50018 Scandicci (FI) – Italy  
Phone: +39 055 735 0230  
Fax: +39 055 735 6235

#### FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit
- Different from that to which the receiver is connected.

WARNING: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures

### Canada

#### Canadian Caution

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1) This device may not cause interference.
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

WARNING: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures

#### ICES-003 Class A Notice

This Class A digital apparatus complies with Canadian ICES-003.

#### Radiation Exposure Statement

This equipment complies with RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## EC Declaration Of Conformity



Manufacturer:  
Powersoft S.p.A.  
via E. Conti 5  
50018 Scandicci (Fi)  
Italy

We declare that under our sole responsibility the products:

#### Model Names:

Unica 4L   5K4	Unica 8T   1K8
Unica 4L   9K4	Unica 8T   2K8
Unica 4L   12K4	Unica 8T   4K8
Unica 4L   16K4	Unica 8T   8K8
Unica 4L   Core	Unica 8T   Core
Unica 4T   20K4	Unica 8T   10K8

Intended use: Professional Audio Amplifier

Are in conformity with the provisions of the following EC Directives, including all amendments, and with national legislation implementing these directives:

- 2014/35/EU Low Voltage Directive
- 2014/30/EU Electromagnetic Compatibility Directive
- 2011/65/EU RoHs Directive
- Commission Delegated Directive (EU) 2015/863

The following harmonized standards are applied:

- EN 55032:2015,
- EN 55032:2015/A11:2020
- EN 55035:2017,
- EN 55035:2017/A11:2020
- EN 61000-3-2:2014
- EN 61000-3-3:2013
- EN 61000-3-11:2000
- EN 60945:2002
- EN 62368-1:2014
- EN 62368-1:2014/AC:2015

Scandicci,  
March 2024

Marco Cati  
Quality & After Sales Manager

For compliance questions only: [compliance@powersoft.it](mailto:compliance@powersoft.it)

©2025 Powersoft  
D0000335.01 R00



# Important Safety Instructions

## Common symbols and meanings

-  THE TRIANGLE WITH THE LIGHTNING BOLT IS USED TO ALERT THE USER TO THE RISK OF ELECTRIC SHOCK.
-  THE TRIANGLE WITH THE EXCLAMATION POINT IS USED TO ALERT THE USER TO IMPORTANT OPERATING OR MAINTENANCE INSTRUCTIONS.
-  THE CE-MARK INDICATES THE COMPLIANCE OF THE PRODUCT TO ALL THE APPLICABLE EUROPEAN DIRECTIVES
-  SYMBOL FOR EARTH/GROUND CONNECTION.
-  SYMBOL INDICATING THAT THE EQUIPMENT IS FOR INDOOR USE ONLY.
-  SYMBOL FOR CONFORMITY WITH DIRECTIVE 2012/19/EC OF THE EUROPEAN PARLIAMENT ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE).

## Safety Warnings

-  OPERATING TEMPERATURE RANGE: 0°C TO +50°C - DERATING ABOVE 35°C.
-  STORAGE RELATIVE HUMIDITY RANGE: 10% TO 85% HUMIDITY (NON CONDENSING).
-  DO NOT USE THE UNIT AT ALTITUDES ABOVE 2000 M.
-  DO NOT USE THE UNIT IN TROPICAL ENVIRONMENT.
-  TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT ATTEMPT TO OPEN ANY PART OF THE UNIT. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
-  CONNECTION TO THE MAINS SHALL BE DONE ONLY BY A ELECTROTECHNICAL SKILLED PERSON ACCORDING THE NATIONAL REQUIREMENTS OF THE COUNTRIES WHERE THE UNIT IS SOLD.
-  FOR MODELS UNICA 4T, INSTALLATION IN CANADA / USA: PROTECTIVE EARTH CONDUCTORS MUST BE RELIABLY CONNECTED TO BUILDING EARTH BY A SKILLED PERSON ACCORDING TO THE REGULATORY REQUIREMENTS FOR CANADA AND USA.
-  DO NOT USE THIS AMPLIFIER IF THE ELECTRICAL POWER CORD IS FRAYED OR BROKEN.
-  TO AVOID ELECTRICAL SHOCK, DO NOT TOUCH ANY EXPOSED SPEAKER WIRING WHILE THE AMPLIFIER IS OPERATING.
-  DO NOT SPILL WATER OR OTHER LIQUIDS INTO OR ON THE AMPLIFIER.
-  THIS DEVICE MUST BE POWERED EXCLUSIVELY BY EARTH CONNECTED MAINS SOCKETS IN ELECTRICAL NETWORKS COMPLIANT TO THE IEC 364 OR SIMILAR RULES
-  DISCONNECT THE AC MAINS SOURCE BEFORE ATTEMPTING TO CLEAN ANY PART OF THE AMPLIFIER
-  PROPERLY FIT THE AC MAINS PLUG TO THE AMPLIFIER INLET.  
BEFORE POWERING THIS AMPLIFIER, VERIFY THAT THE CORRECT VOLTAGE RATING IS BEING USED.
-  TAKE CARE TO SECURE THE OUTPUT TERMINAL BEFORE SWITCHING THE DEVICE ON.
-  FOR ALL MODELS EXCEPT UNICA 4T: POWERSOFT SUGGESTS TO PLUG THE UNIT TO A 16 A RATING, C OR D CURVE, 10 kA SECTIONING BREAKER.
-  FOR MODELS UNICA 4T: POWERSOFT SUGGESTS TO PLUG THE UNIT TO A 20 A RATING, C OR D CURVE, 10 kA SECTIONING BREAKER.
-  OUTPUT TERMINALS ARE HAZARDOUS: WIRING CONNECTION TO THESE TERMINALS REQUIRES INSTALLATION BY AN INSTRUCTED PERSON AND THE USE OF READY MADE LEADS.  
**CLASS 3 WIRING**
-  VERIFY THAT YOUR MAINS CONNECTION IS CAPABLE OF SATISFYING THE POWER RATINGS OF THE DEVICE.
-  NO NAKED FLAME SOURCES SUCH AS LIGHTED CANDLES SHOULD BE PLACED ON THE AMPLIFIER.
-  IT IS HIGHLY RECOMMENDED TO UNPLUG THE OUTPUT CONNECTORS BEFORE PROCEEDING WITH THE SELF CHECK PROCEDURE
-  THE TESTING SIGNALS MIGHT CAUSE LOUDSPEAKER IMPAIRMENTS.
-  TO PREVENT INJURY, THIS APPARATUS MUST BE SECURELY RACK MOUNTED IN ACCORDANCE WITH THE INSTALLATION INSTRUCTIONS.
-  THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR DAMAGES CAUSED TO PERSONS, THINGS OR DATA DUE TO AN IMPROPER OR MISSING GROUND CONNECTION.
-  IT IS ABSOLUTELY NECESSARY TO VERIFY THESE FUNDAMENTAL REQUIREMENTS OF SAFETY AND, IN CASE OF DOUBT, REQUIRE AN ACCURATE CHECK BY QUALIFIED PERSONNEL.
-  THIS EQUIPMENT SHALL BE MOUNTED AT A MAXIMUM HEIGHT OF 2 METERS



Please read and keep all safety and use instructions.

This product is intended for installation by professional installers only! This document is intended to provide professional installers with basic installation and safety guidelines for this product in typical fixed-installation systems. Please read this document and all safety warnings before attempting installation.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this equipment near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## Warranty and Technical Service

This product is covered by a limited warranty.

 This Powersoft product contains no user-serviceable parts. All warranty repairs must be carried by a certified technician operating in a Powersoft Authorized Service Centre.

Contact The Authorized Service Center For Ordinary And Extraordinary Maintenance. To learn more about warranty terms and conditions, visit [powersoft.com/warranty](https://powersoft.com/warranty)  
For any service related enquiry, please visit [powersoft.com/en/product-repair/](https://powersoft.com/en/product-repair/)

# Rack Mounting

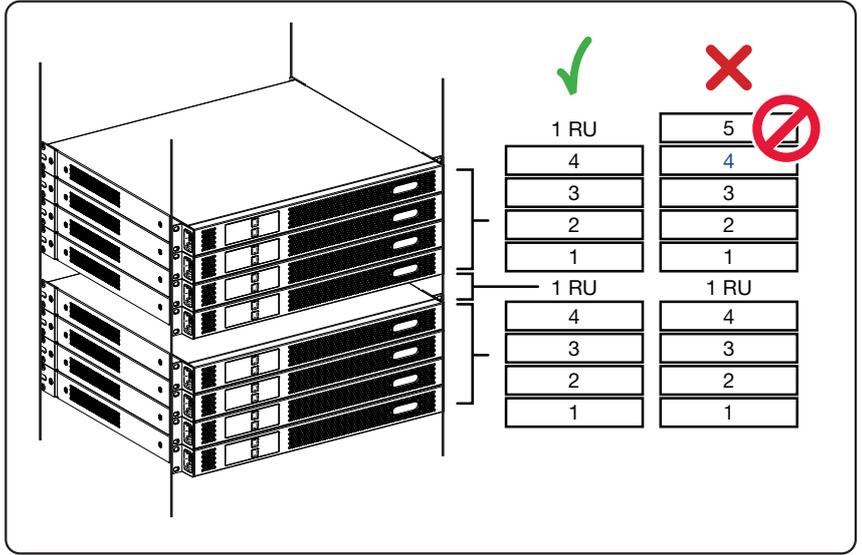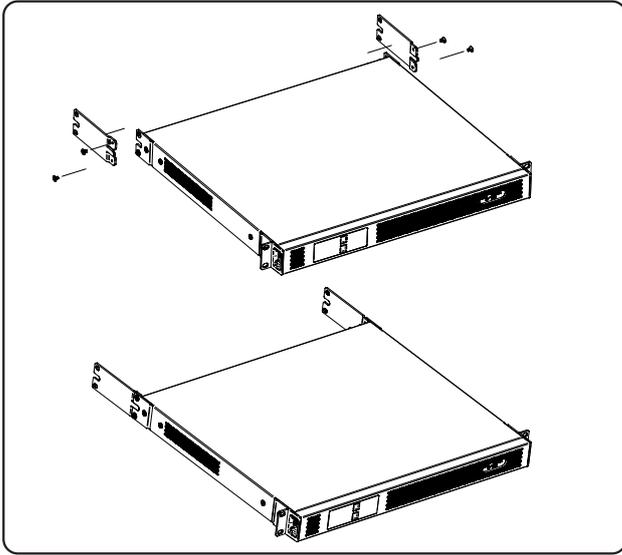


# Wiring


## Output - "B" Bag

Phoenix PC 5/8-STF1-7,62


Single Ended (Flipped view)

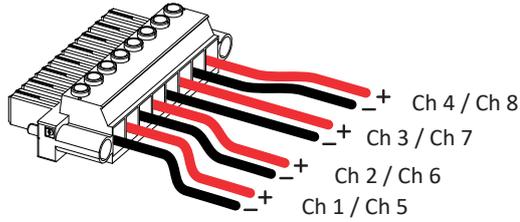



Bridged (Flipped view)

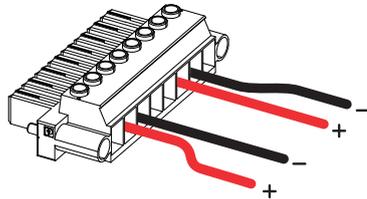

## Shell Assembly

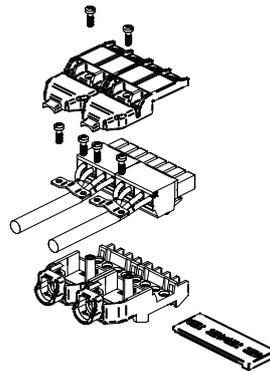


## Shell Lock - "A" Bag

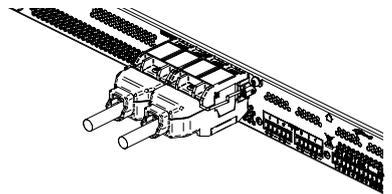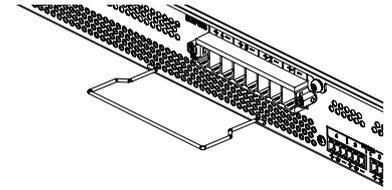



## Input - "C" Bag

Phoenix MC 1,5/6-ST-3,81

## Shell Assembly

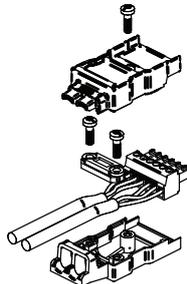


## Shell Lock - "A" Bag

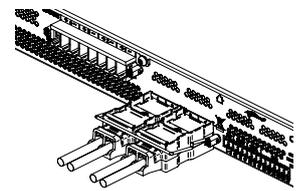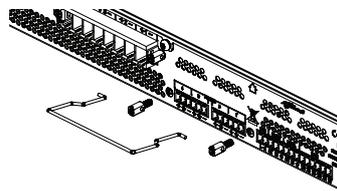

## Mains

IEC C19 | Shell Lock - "A" Bag

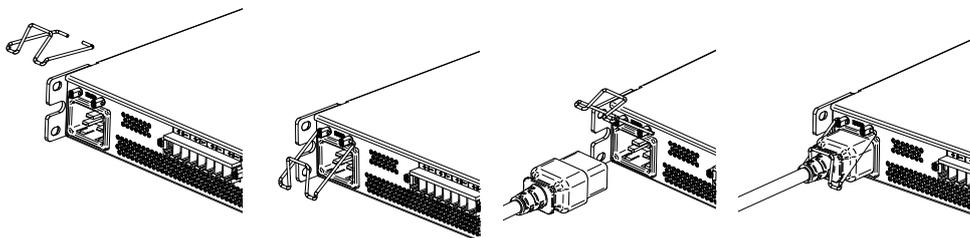





Scan for the full version

## UNICA T QUICK GUIDE


### Front Panel

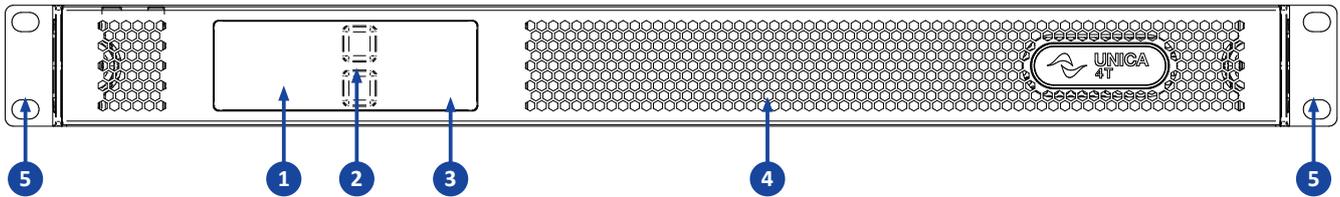

	Description
1	LCD screen
2	Touch buttons
3	RGB LEDs indicators
4	Front grille and dust filter
5	Rack mount ears

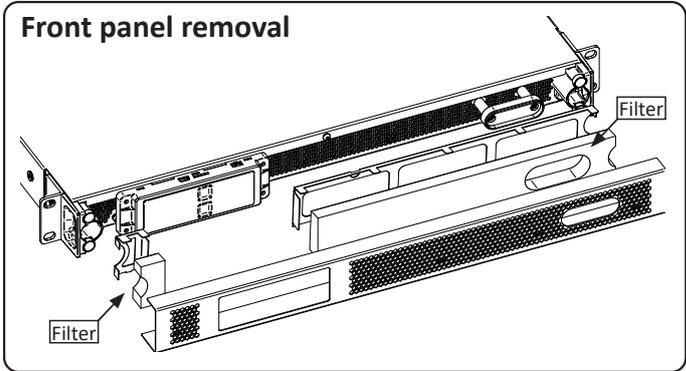

### Rear Panel

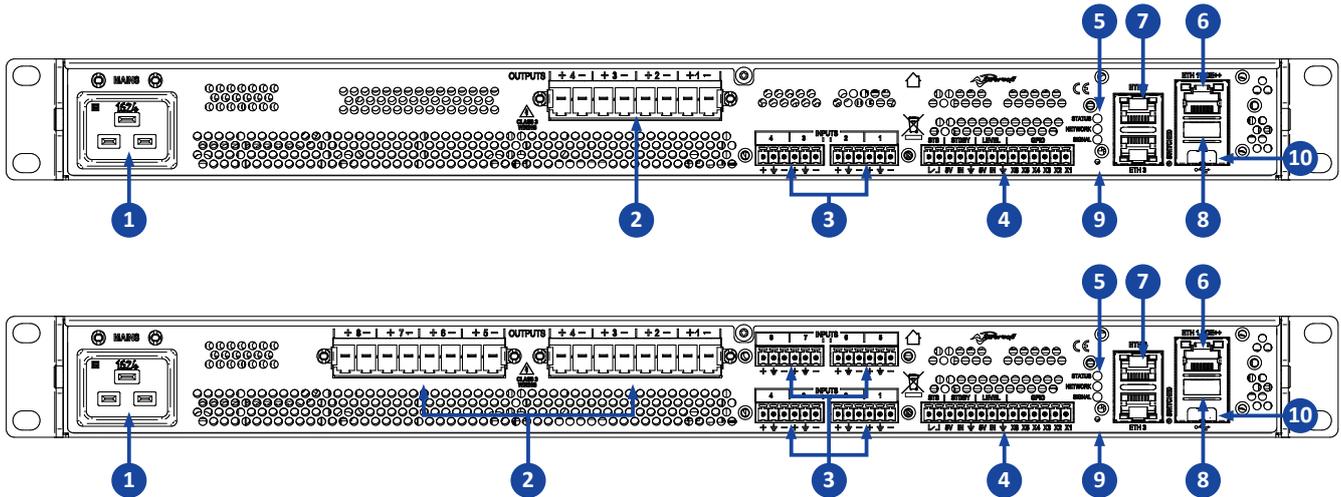

	Description
1	AC Mains input
2	Amplifier outputs
3	Analog inputs
4	STS, REMOTE STANDBY, REMOTE LEVEL, GPIO
5	RGB LEDs indicators

	Description
6	1 x Ethernet RJ-45 connector   control - Dante/AES67 - PoE
7	2 x Ethernet RJ-45 connector   control and Dante/AES67
8	USB Type A port
9	Reset
10	USB Type C port (reserved for service)