



EMS-126 / 129

two-way passive fullrange loudspeaker

Product User Manual
v2 November 2019

Contents

DECLARATION OF CONFORMITY	4
1.0 - Introduction	5
Unpacking	5
2.0 - EMS-129/126 & Accessories	6
EMS-129	6
EMS-126	6
FC-129h	7
FC-129v	7
DFB-129	7
VFA-129	7
2.1 - Rotating the HF waveguide	8
3.0 - Simulation	9
Ease Focus 3	9
4.0 - Safety Considerations	10
General Considerations in use	10
Personal Injury	10
Stand Mounting	10
Ground Stacking	11
Rigging and Suspension	11
Secondary Safeties	12
Safety Inspections	12
Material Damage from Magnetism	12
5.0 - Rigging & Mounting Options	13
5.1 - EMS-129 Cabinet Overview	13
5.2 - Using the FC-129v	14
5.3 - Using the FC-129h	15
5.3.1 - Drop height adjustment on the FC-129h	15
5.4 - Using the DFB-129	16
5.5 - Using the VFA-129	17
5.6 - Safety Point	17
5.7 - Using Powerdrive or Omnimount fittings	18
6.0 - Powering the System	19

6.1 - Amplifier and Processing Requirements	19
6.1.1 - Connections	19
6.1.3 - Amplifier Requirements	20
6.1.4 - Processing Requirements	20
6.2 - Presets and Settings	21
6.2.1 - Standard EMS-129 Preset	21
6.2.2 - Geometric Delay	21
6.2.3 - Applying EQ	21
6.3 - Use with the DQ Series Advanced System Amplifiers	22
6.3.1 - Connections	22
6.3.2 - Preset Recall	22
6.4 - System Connectivity	23
6.4.1 - Cable Length and Specification	23
6.4.2 - Crossover Cable Use	23
7.0 - Servicing Information	24
7.1 - EMS-129: Removing the grille	24
7.2 - EMS-129: Removing the LF drive unit	25
7.3 - EMS-129: Removing the HF drive unit	26
Appendix A - Technical Specifications	27
EMS-129 compact passive loudspeaker	27
Appendix B - Technical Drawings	28
Appendix C - Spare Parts List	33
Appendix D - Warranty Information	34
Limited Warranty	34
Warranty Coverage	34
Returning your EM Acoustics loudspeaker	34

DECLARATION OF CONFORMITY



The products contained within this manual conform to the requirements of the EMC Directive 89/336/EEC, amended by 92/31/EEC and to the requirements of the Low Voltage Directive 73/23/EEC amended by 93/68/EEC.

EMC Emission EN55103-1:1996

Immunity EN55103-2:1996

Electrical Safety EN60065:1993

RECYCLING



This product and its packaging constitute the applicable product according to the WEEE directive. Please ensure that at the end of the working life of this product, it is disposed of sensibly in accordance with local and national recycling regulations. The packaging supplied with this product is recyclable. Please retain all packaging, however if disposing of this packaging please ensure that you comply with local recycling regulations. These products also all comply to the RoHS Directive 2002/95/EC.

1.0 - Introduction

Thank you for purchasing this highly acclaimed product from EM Acoustics. The EMS-126 and EMS-129 are identical loudspeakers except for their dispersion angles - as such throughout this manual when we refer to the EMS-129, we mean either the EMS-126 or EMS-129. This product has been designed and rigorously tested to give you the utmost in sonic performance and many years of reliable, trouble-free operation. Please take the time to read this user manual thoroughly to ensure you get the best performance from your system and to ensure you set it up correctly and safely. If you have any questions or are in any doubt whatsoever about any aspect of your new product, please do not hesitate to contact us directly or your local EM Acoustics representative.

The EMS-129 is a compact 2-way loudspeaker, intended for a wide variety of audio applications - from theatrical use through to corporate A/V, speech reinforcement and even medium scale live music reinforcement. The compact enclosure houses a 12" neodymium LF drive unit and a 1.4" exit HF compression drive unit coupled to a rotatable constant coverage waveguide - 90° x 60° for the EMS-129, and 60° x 40° for the EMS-126. These two drive units are linked with an extremely comprehensive passive crossover network. This means the EMS-129 exhibits flat frequency and phase responses without the need of external corrective processing.

This manual contains all the information you should need on topics of set up, amplifier connection and basic service. If you feel we have missed anything, or you have a question not covered by this manual, please visit our website www.emacoustics.co.uk and send us a message or give us a call - we're only too happy to help.


Unpacking

Please take care when unpacking your loudspeaker system. Once unpacked, please inspect each enclosure thoroughly for any transit damage and in the case of any damage please notify your carrier immediately. It is the responsibility of you, the consignee, to instigate any claim. Please retain all original packaging in case of future re-shipment.

2.0 - EMS-129/126 & Accessories

EMS-129

Wide dispersion passive loudspeaker

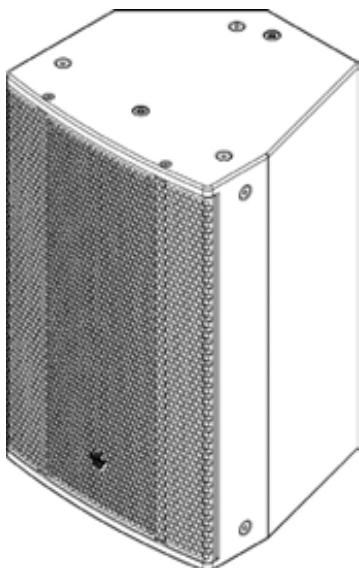

FEATURES & BENEFITS


- Signature EM Acoustics "maximum headroom" design approach ensures consistency of performance regardless of SPL level.
- Multiple M10 threaded flying points for temporary and permanent installation.
- Enclosure coated with 3-step polyurethane process - ensuring the cabinets are not only weather resistant but more resilient to impact damage.
- Various rigging accessories available.
- Multi-angle enclosure allows use as a monitor as well as FOH.
- Connections on NL4.
- Single amplifier channel required.

KEY SPECIFICATIONS

ENCLOSURE TYPE:	2-way passive, reflex loaded
DRIVE UNITS:	LF: 12" / HF: 1.4"
FREQUENCY RESPONSE:	70Hz - 20kHz +/-3dB
NOMINAL DISPERSION1:	90° x 60° rotatable
MAXIMUM SPL:	128dB continuous, 134dB peak
NOMINAL IMPEDANCE:	8 ohms
DIMENSIONS (HxWxD):	622 (24.5) x 380 (15) x 364 (14.3) mm/(ins)
NET/SHIPPING WEIGHT:	24/26.6kg (52.8/58.5lbs)

EMS-126

Narrow dispersion passive loudspeaker

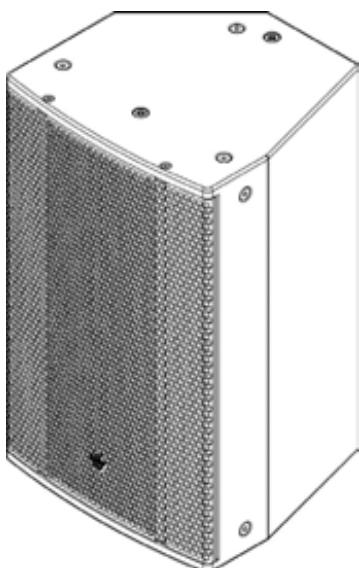

FEATURES & BENEFITS

- Signature EM Acoustics "maximum headroom" design approach ensures consistency of performance regardless of SPL level.
- Multiple M10 threaded flying points for temporary and permanent installation.
- Enclosure coated with 3-step polyurethane process - ensuring the cabinets are not only weather resistant but more resilient to impact damage.
- Various rigging accessories available.
- Multi-angle enclosure allows use as a monitor as well as FOH.
- Connections on NL4.
- Single amplifier channel required.

KEY SPECIFICATIONS

ENCLOSURE TYPE:	2-way passive, reflex loaded
DRIVE UNITS:	LF: 12" / HF: 1.4"
FREQUENCY RESPONSE:	70Hz - 20kHz +/-3dB
NOMINAL DISPERSION1:	60° x 40° rotatable
MAXIMUM SPL:	128dB continuous, 134dB peak
NOMINAL IMPEDANCE:	8 ohms
DIMENSIONS (HxWxD):	622 (24.5) x 380 (15) x 364 (14.3) mm/(ins)
NET/SHIPPING WEIGHT:	25/27.5kg (55/60.5lbs)

FC-129h**Horizontal flying cradle**

The FC-129h is a simple and effective means of mounting the EMS-129 in both temporary and permanent applications.

It is secured to the cabinet by means of M10 socket head bolts into the top and bottom of the loudspeaker to mount it in a landscape format. Multiple 13mm diameter holes are provided for attachment in installation or via a hook clamp or similar.

The FC-129h is designed to support one single EMS-129 loudspeaker.

Weight (including fixings) 4kg / 8.8lbs


FC-129v**Vertical flying cradle**

The FC-129v is a simple and effective means of mounting the EMS-129 in both temporary and permanent applications.

It is secured to the cabinet by means of M10 socket head bolts into the top of the loudspeaker to mount it in a portrait format. A single 13mm diameter fixing point is provided at the top of the outer yoke for attachment either in installations or via a hook clamp or similar.

The FC-129v is designed to support one single EMS-129 loudspeaker.

Weight (including fixings) 6kg / 13.2lbs

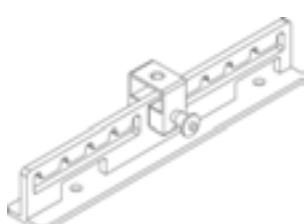VFA-129**Variable angle flying bracket**

The VFA-129 is designed to allow the mounting of a single EMS-129 from a single point, where the angle is determined by the loudspeakers' own centre of gravity.

The mounting part can move between different locations, giving 25 degrees of up or down tilt in 5-degree increments.

The VFA-129 is designed to support one single EMS-129 loudspeaker.

Weight (including fixings) 2kg / 4.4lbs

DFB-129**Dual enclosure flyplate set**

The DFB-129 is a dual plate set designed to allow the mounting of a pair EMS-129 in installation applications.

The slots allow adjustment of the splay angle between the two loudspeaker cabinets.

The DFB-129 set is designed to support one pair of EMS-129 loudspeakers.

Weight (including fixings) 13kg / 28.6lbs

2.1 - Rotating the HF waveguide


The high frequency waveguide of the EMS-129 can be easily rotated to provide appropriate dispersion in both portrait and landscape formats.

By default, the EMS-129 ships from the factory with the dispersion pattern 90° horizontal x 60° vertical when the loudspeaker is in a portrait format (60° horizontal x 40° vertical for the EMS-126).

To rotate the waveguide:


1. Follow step 1 in the servicing chapter (Chapter 7) to remove the grille.
2. Using a 4mm Allen key, remove the eight M6x40 countersunk socket head screws that secure the waveguide.
3. Lift the waveguide up from the enclosure to rotate through 90 degrees to the desired orientation - the label on the waveguide describes the orientation.
4. Once in the correct orientation, replace the M6x30 countersunk socket screws and retighten.
5. Replace the grille.

NOTE: Be careful not to over rotate the Waveguide in one particular direction to avoid over tensioning the cables.

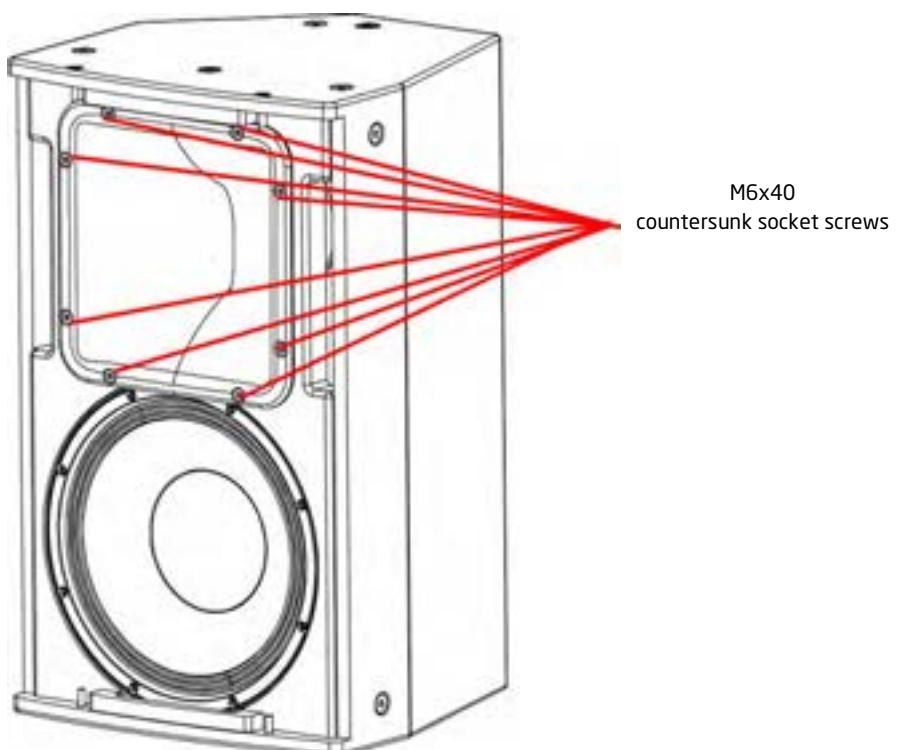

3.0 - Simulation

Ease Focus 3

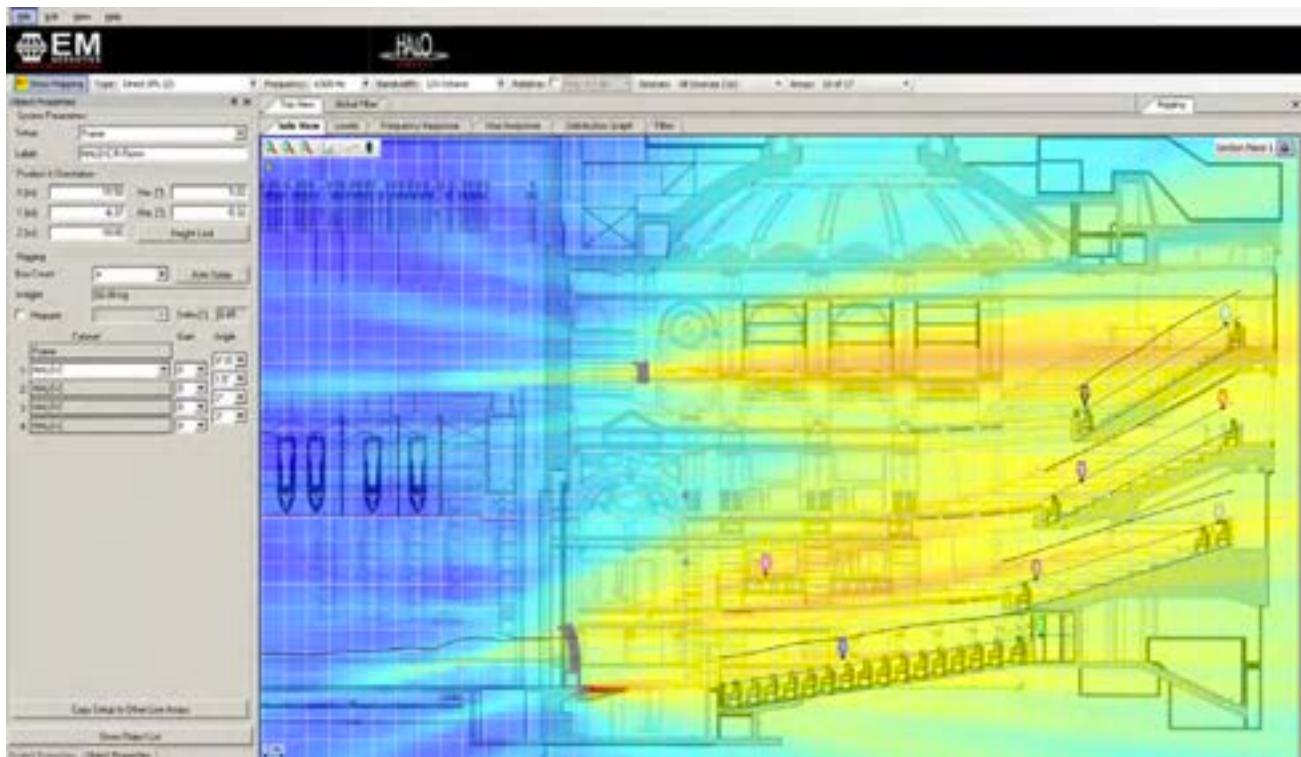

For acoustic reasons it is advised that users familiarize themselves with Ease Focus 3 - this system provides the user with accurate simulations for setting up EMS-129 loudspeakers.

Ease Focus 3 can be downloaded for free from the AFMG website at <http://focus.afmg.eu> and is currently available as a stand-alone application for Windows (XP or Higher) only. It can also be downloaded directly from the [EM Acoustics website](http://em-acoustics.com) with all the current product files embedded.

Tutorials for Ease Focus 3 are available from with the application itself.

For training on the design and implementation of EMS-129 loudspeakers including the specific use of Ease Focus 3, please contact your local distributor.

4.0 - Safety Considerations

General Considerations in use

Loudspeaker systems are potentially dangerous objects if used incorrectly. Please ensure that you read this section fully, and contact EM Acoustics or your local dealer should you be in any doubt over correct operation procedures.

Personal Injury

Never stand in the immediate vicinity of loudspeakers when in use at high level. Professional loudspeaker systems are capable of producing sound pressure levels which can cause permanent damage to human hearing. Levels in excess of 90dB can cause hearing damage if people are exposed to them over a long period of time, so care and attention must be used for both staff and audience members.

When deploying loudspeaker systems on the ground or when flown, please take careful note of the following important safety considerations:

- Only use accessories and flying hardware supplied or approved by EM Acoustics for flying or transporting loudspeaker systems. Pay close attention to specific instructions, especially those considering maximum load capabilities as detailed in the appropriate user manuals or on the legend labels on the accessories themselves.
- Ensure all additional accessories, fasteners and secondary safeties are of an appropriate size, working load limit and safety factor.
- All loudspeakers and accessories should be regularly inspected for signs of wear and tear, and any damaged parts should be replaced.
- All load bearing parts and assembly bolts on accessories should be regularly checked to ensure they are tight and not worn.

Stand Mounting

When mounting loudspeakers on a stand, please take note of the following important considerations:

- Ensure your stand height is locked off and the tripod legs are positioned so as to be stable.
- Check the weight loading of your stands before attempting to mount the loudspeaker.
- Do not stack a second loudspeaker on top of the stand-mounted one.
- Ensure cables are run so as to leave enough slack to enable neat wiring, and thus reduce the risk of the speaker being pulled over. Loose cables should be covered or taped down wherever possible to reduce trip hazards.
- If stands are being used outdoors, it may be necessary to add ballast to the base of the stand to prevent it toppling over.
- When using poles on top of subwoofer systems, please observe similar precautions.

Ground Stacking

- Ensure that the floor or stage surface can withstand the weight of the system.
- Wherever possible, avoid high stacks and use ratchet straps to secure loudspeakers together. Please also remember that vibrations from subwoofer systems can shake other loudspeakers out of place, which may present a toppling hazard. The use of ratchet straps and non-slip material is recommended to prevent this.

Rigging and Suspension

Please see Chapter 5 for further information on the detailed rigging options for your loudspeaker system.

WARNING: The overhead suspension of loudspeakers is a very serious issue with potentially lethal consequences should anything go wrong. Rigging should only be carried out by experienced personnel following safe working practice. Should you be in any doubt whatsoever, please contact your local dealer who will be able to refer you to a suitable rigging company.

To ensure the highest standards of safety, the following information on array assembly must be exactly followed and understood.

Only use EM Acoustics recommended rigging hardware and accessories, which are specifically designed for the purpose. Do not use these accessories for any other loudspeaker system - the components are specifically designed to work with this product and are not interchangeable with any other EM Acoustics loudspeaker product (unless where specifically stated) or any other loudspeaker system. The use of EM Acoustics accessories with other manufacturers' systems may compromise the safety standards and EM Acoustics is in no way liable for any loss, damage or injury caused by such practice.

Do not modify or alter the EMS-129 loudspeaker or accessories, nor use them in any way other than that described in this manual. Rigging components supplied with the EMS-129 are in no way interchangeable and should not be used as such.

The component parts of the EMS-129 and its accessories should only be assembled in the manner described in this manual, using the fasteners and fixings stated herein. The use of fasteners and methods of assembly not described in this manual may result in an unsafe assembly and as such EM Acoustics will not be responsible for any loss, damage or injury caused by such practice. Welding, drilling or any other means of modifying any part of the flying hardware or permanently fixing components to each other is strictly forbidden.

Rigging assemblies must only be assembled using the appropriate parts and fixings as described in this manual, explicitly following the assembly instructions given herein. Rigging components must only be fixed to the EMS-129 loudspeaker, using the correct cabinet location points, assembly methods and fasteners specifically described within this manual.

Walls, floors and ceilings must be capable of supporting the actual load placed upon them. The rigging hardware must be safely and securely fixed to both the loudspeaker system and the supporting structure.

Secondary Safeties

It is imperative that all loudspeakers flown in any given environment should be provided with a second, independent and properly rated safety suspension point in addition to the principle load bearing means of suspension. Steel wire ropes or steel chains of an approved construction and load rating only may be used as secondary safeties. Plastic covered steel chains may not be used as secondary safeties under any circumstances. Also ensure that all local and national laws are complied with when determining your primary and secondary suspension points.

Safety Inspections

Carefully inspect all flying system components prior to use for defects or signs of damage prior to installing or mounting your loudspeaker. If any components damaged or **you suspect them to be damaged, DO NOT USE THEM.**

Regular scheduled tests - which are much more rigorous than visual inspections - of all rigging components must also be carried out. Safety legislation, and test/inspection requirements, will vary from country to country and as such it is the user's responsibility to ensure that local regulations are adhered to. In most cases, annual independent tests & inspections carried out by a suitably approved and qualified inspector will be required.

EM Acoustics recommends detailed logbooks be kept of all inspections and load tests to ensure an accurate record is kept of the testing for each EM Acoustics rigging accessory.


When flying any loudspeaker system, always wear protective headwear, footwear and eye protection in accordance with local regulations.

Material Damage from Magnetism

Loudspeakers produce a static magnetic field at all times - even when not in use. Certain devices are susceptible to external magnetism, and as such a safe distance should be maintained to prevent damage. It is recommended that a safe distance of 0.5m (1.5ft) is maintained from loudspeakers when stored, transported and in use, from devices such as computer hard drives, magnetic media, bank cards to remove the risk of corruption. Larger distances may be required for some older cathode ray tube displays.

5.0 - Rigging & Mounting Options

5.1 - EMS-129 Cabinet Overview

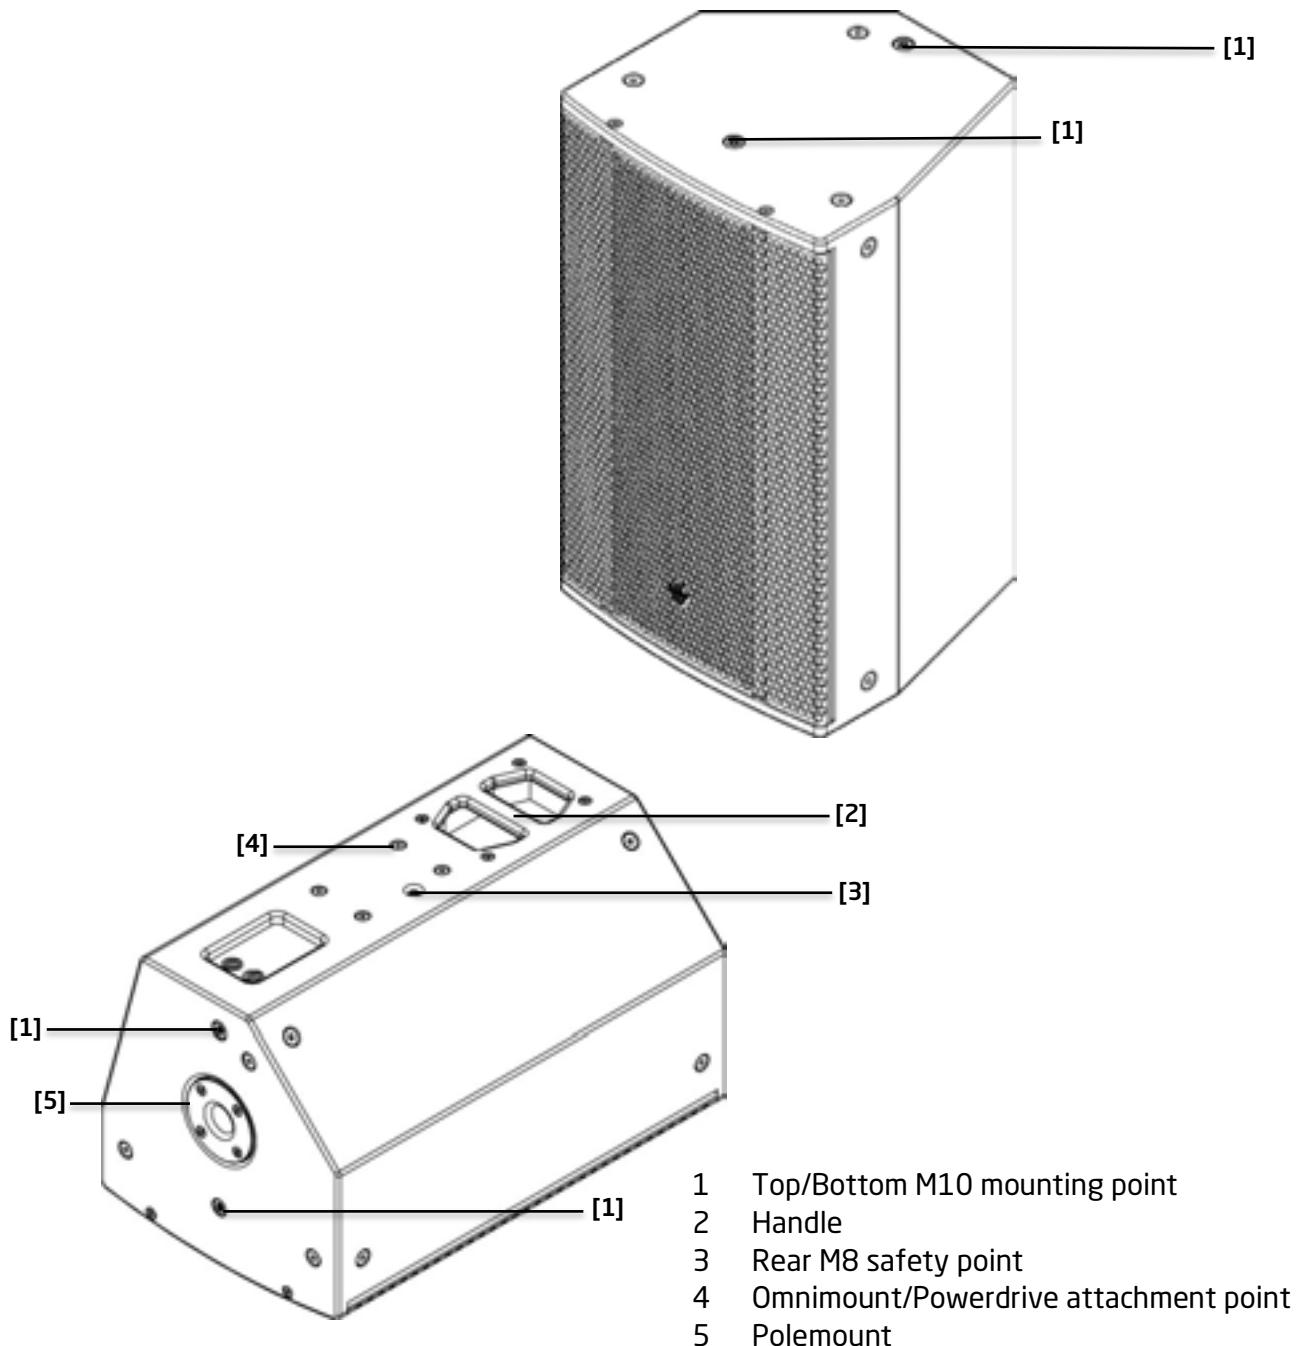


5.2 - Using the FC-129v

The FC-129v is intended to mount the EMS-129 vertically - either using a hook clamp or similar from above, or a pole mount adapter to mount on a stand yet allowing enclosure tilt. The procedure for attaching the FC-129v to the loudspeaker is the same regardless of the mounting orientation.

Firstly, assemble the mounting plate to the inner yoke as per the instructions supplied with the FC-129v.

Align the FC-129v with the EMS-129 loudspeaker, taking note of the "front" arrow on the mounting plate.

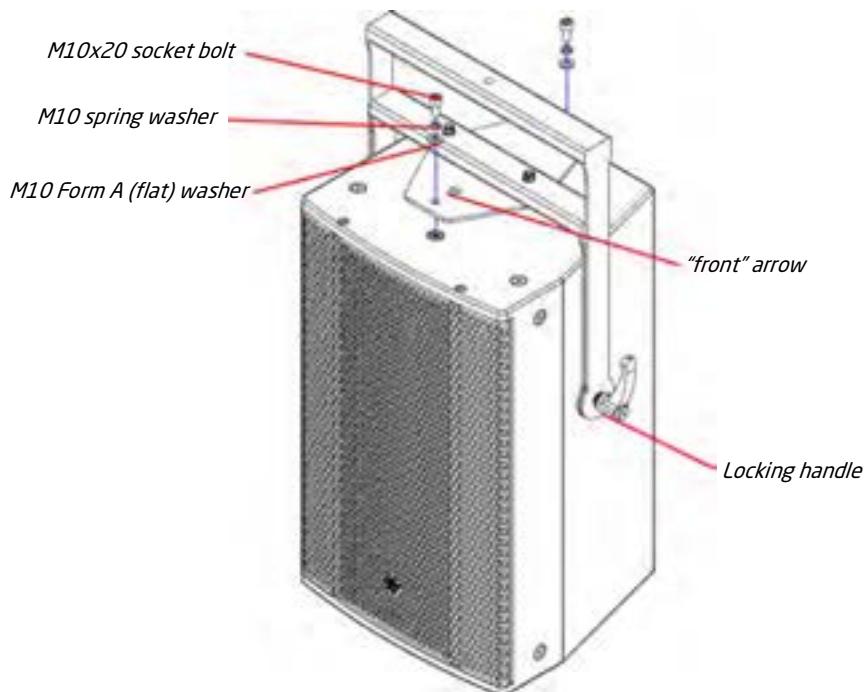


Using a 6mm Allen key, secure the yoke to the EMS-129 by bolting the mounting plate to the cabinet using M10x20 socket head bolts, with both spring washers and Form A (flat) washers. Ensure that the washers are in the correct order - form A (flat) in contact with the frame, and then the spring washer between the flat washer and the locking handle. Ensure the mounting plate is secure.

The enclosure can then be lifted and the tilt angle can then be set with the locking handles.

5.3 - Using the FC-129h

The FC-129h is intended to mount the EMS-129 horizontally. To fit, lie the EMS-129 on its side and loosen the locking knobs so that the mounting plates can be rotated to allow access to the mounting bolt holes. Line the flying cradle up with the mounting holes and secure to the EMS-129 with M10x20 socket head bolts.

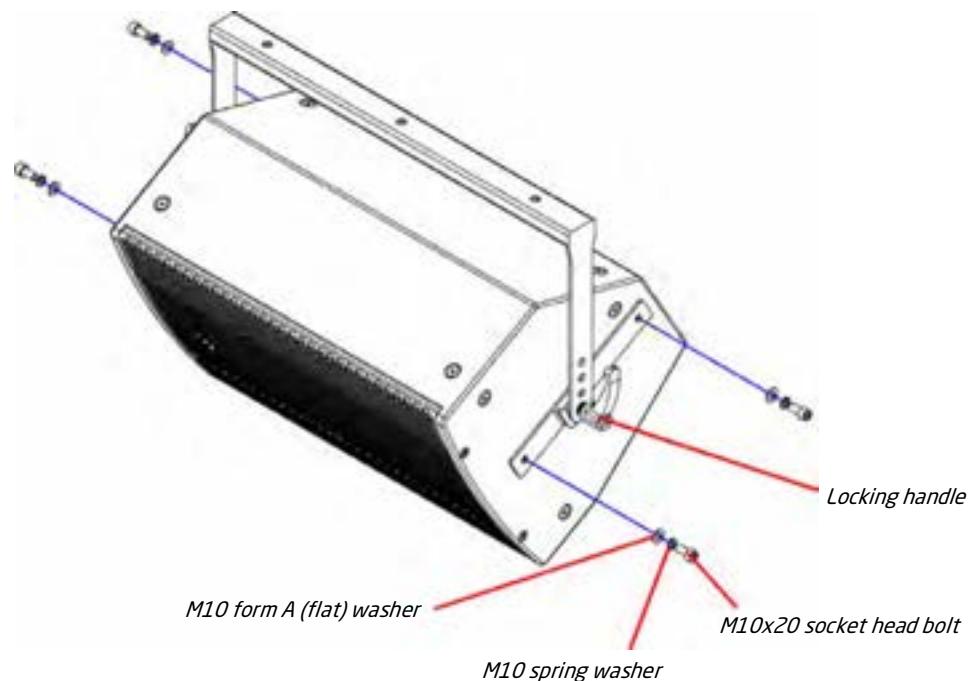


Ensure that the washers are in the correct order - form A (flat) in contact with the frame, and then the spring washer between the flat washer and the locking handle. Tighten the handles on both sides to lock the desired angle for the EMS-129.

Always ensure that a secondary safety is used when suspending any loudspeaker.


5.3.1 - Drop height adjustment on the FC-129h

Different location holes for the mounts to pivot in are provided on the FC-129h mounting yoke. Position 1 (closest to the end of the yoke arms) allows full 360° rotation of the loudspeaker, and positions 2-4 offer a closer fit to the yoke, but with reduced rotational ability of the loudspeaker itself.

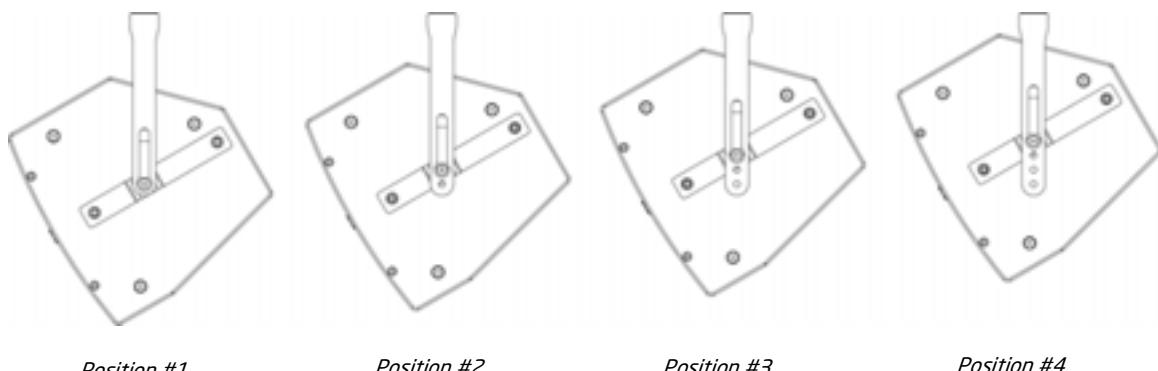


5.4 - Using the DFB-129

To use the DFB-129 set, it is advised to position the two loudspeakers on the floor and secure the top plate as shown - ensuring that the flat and spring washers are both used on each bolt. Once the desired angle between loudspeakers is achieved, tighten the top bolts and then turn the assembly over to fit the bottom plate.

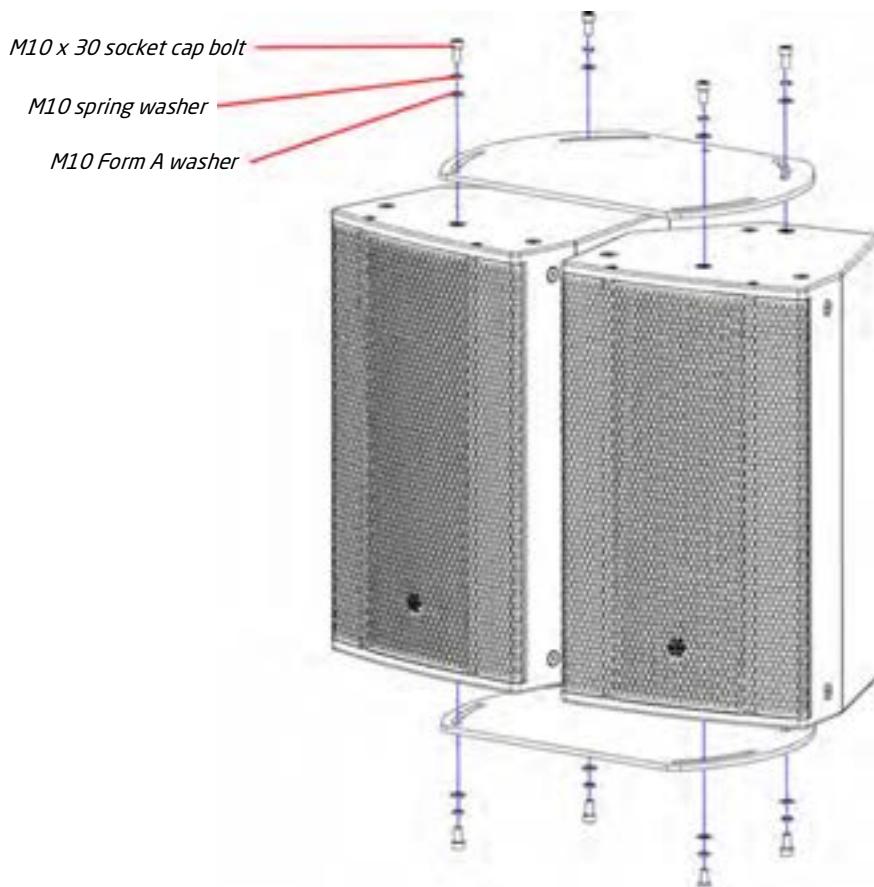

5.5 - Using the VFA-129

The VFA-129 is designed to suspend the EMS-129 from a single point, using the centre of gravity of the loudspeaker to determine the up or down tilt angles. A moveable pickup point allows setting of the angle in 5-degree increments from +25° to -25°.

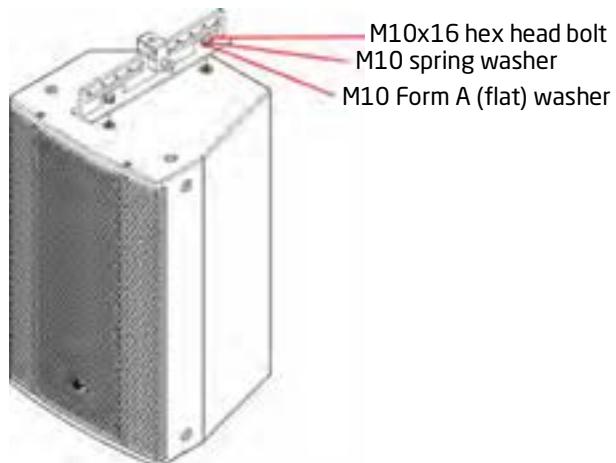

Secure the VFA-129 to the top of the EMS-129 using M10x16 hex head bolts, with spring and Form A (flat) washers. Ensure that both bolts are tight before attempting to lift the loudspeaker.




The central hole in the spine is for 0-degree flying. The track to the front is for up-tilt, and the track to the rear is for down-tilt - both in 5-degree increments.

5.6 - Safety Point

Any flown loudspeaker must always have a secondary safety fitted. A single M8 threaded point is provided on the rear face of the EMS-129. A simple M8 forged shoulder eyebolt can be screwed into this point. Safeties should always be arranged so that the loudspeaker cannot drop in the event of a primary attachment point failing.

NOTE: When using a Powerdrive or Onmidrive bracket, use a single M10 forged shoulder eyebolt in one of the other headed points for a safety.


M8 safety point on rear face

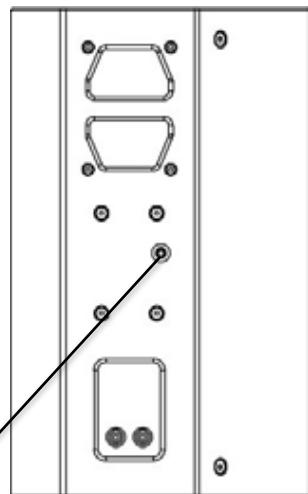

5.7 - Using Powerdrive or Omnimount fittings

EMS-129 loudspeakers are compatible with Powerdrive Series 100 or Omnimount Series 60 installation brackets.

Using a 5mm Allen key, remove the four M8 countersunk socket head bolts on the rear of the EMS-129. The mounting bracket can then be attached using the bolts supplied with the bracket - they must be M8 thread, minimum 30mm in length. Ensure flat washers are in contact with the bracket, and the spring washer is in between the bolt head and the flat washer.

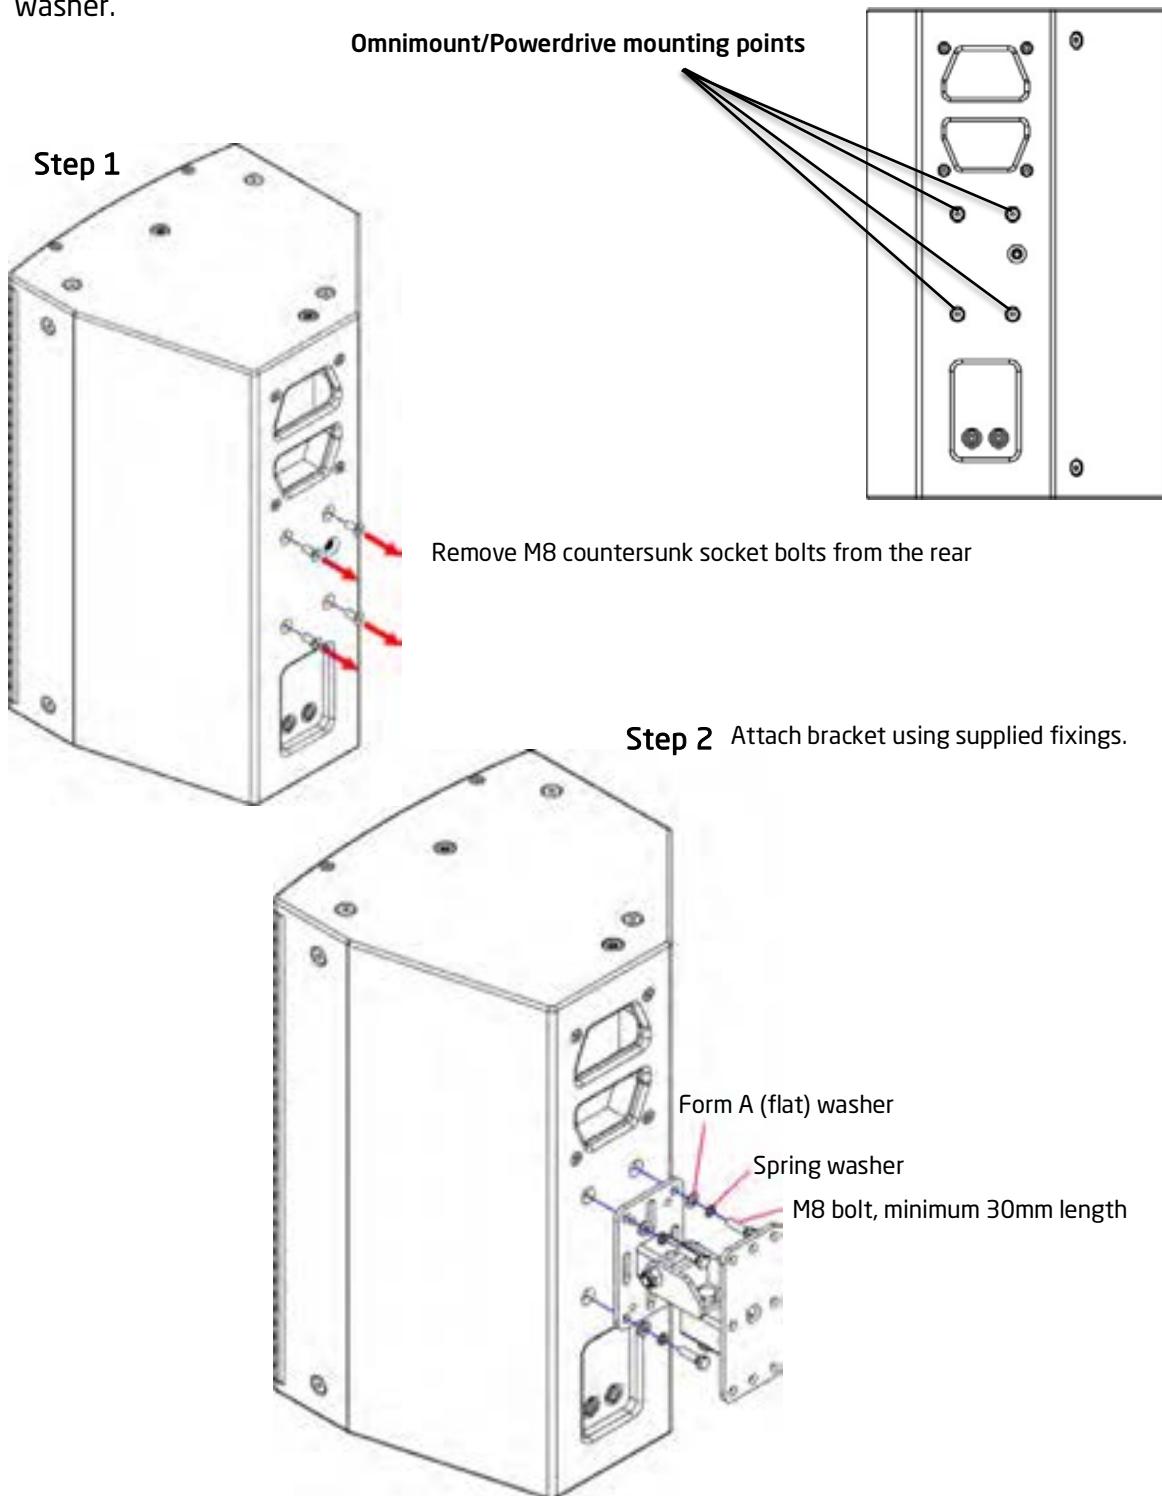


6.0 - Powering the System

The EMS-129 can be powered from any amplifier & DSP combinations with the relevant high & low pass filter, and limiter settings. However, due to the self-contained nature of the package, the use of DQ Series advanced system amplifiers is highly recommended. The use of DQ Series amplifiers provides a neat and flexible system that will encompass all requirements for the system to function correctly, as well as providing user control for room EQ and system alignment.

6.1 - Amplifier and Processing Requirements

6.1.1 - Connections

The EMS-129 requires only a single amplifier channel. Inputs to the EMS-129 enclosure are on Neutrik SpeakON NL4 as illustrated below.

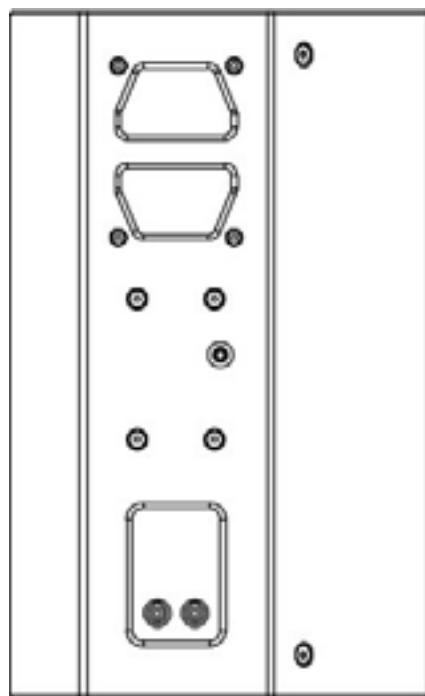

Two-core cable should be used for connecting EMS-129 loudspeakers, and the connections are as follows:

SpeakON connection	1+	1-	2+	2-
Drive unit connection	LF +	LF -	Link Through	Link Through

6.1.3 - Amplifier Requirements

The EMS-129 is a highly efficient loudspeaker, however appropriate available power is critical to ensure full system headroom. It is good practice to ensure that your amplifier can deliver at least double the RMS power handling of the loudspeaker to ensure full headroom, and as such the amplifier requirement is:

Product	RMS Power Handling	Recommended Min. Amplifier Power
EMS-129	500W @ 8 ohms	1000W @ 8 ohms

A loudspeaker is far more likely to be damaged by an under-powered amplifier working too hard, than an over-powered amplifier working well within its limits.

All of the DQ Series advanced system amplifiers can be used to power the EMS-129.

The following table shows the maximum number of EMS-129 that can be connected per channel on the various different amplifiers:

Amplifier	Max EMS-129 per channel
DQ6	1
DQ10	2
DQ20	4


6.1.4 - Processing Requirements

Whilst the EMS-129 is a passive loudspeaker and therefore requires no corrective processing, in all but the lowest SPL applications it does require an active high pass filter and appropriate limiter settings to avoid damage. If not using DQ Series amplifiers, or the DSC48 Digital System Controller, then a suitable DSP system must be used in conjunction with your EMS-129 to prevent damage to the loudspeaker. Check the EM Acoustics website for the most up-to-date DSP settings for the EMS-129.

6.2 - Presets and Settings

6.2.1 - Standard EMS-129 Preset

When used with a DQ Series amplifier EMS-129 loudspeakers require only a single amplifier channel, and as such the preset recalled will only require one output from your DQ Series amplifier.

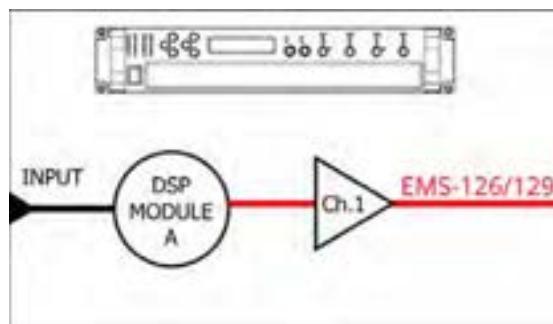

6.2.2 - Geometric Delay

Appropriate delay will need to be applied to account for physical location differences between different elements of your system - for example time-aligning subwoofers to the main system. The use of SMAART or similar can make this task a great deal simpler and faster.


6.2.3 - Applying EQ

The presets are intended to be a starting point for your system and will almost certainly require tuning on-site dependent on room characteristics, the rest of your system design and the system voicing you are aiming for. The EMS-129 is designed with a significant amount of system headroom, so applying EQ is perfectly acceptable within sensible limits.

6.3 - Use with the DQ Series Advanced System Amplifiers

The EMS-129 will perform best when using DQ Series advanced system amplifiers, as not only are they state-of-the-art amplifiers, but the onboard DSP provides appropriate high/low pass filter settings and limiters to get the best from your subwoofers. Please refer to the DQ Series User Manual for detailed information on using the amplifiers and the System Engineer software.

6.3.1 - Connections

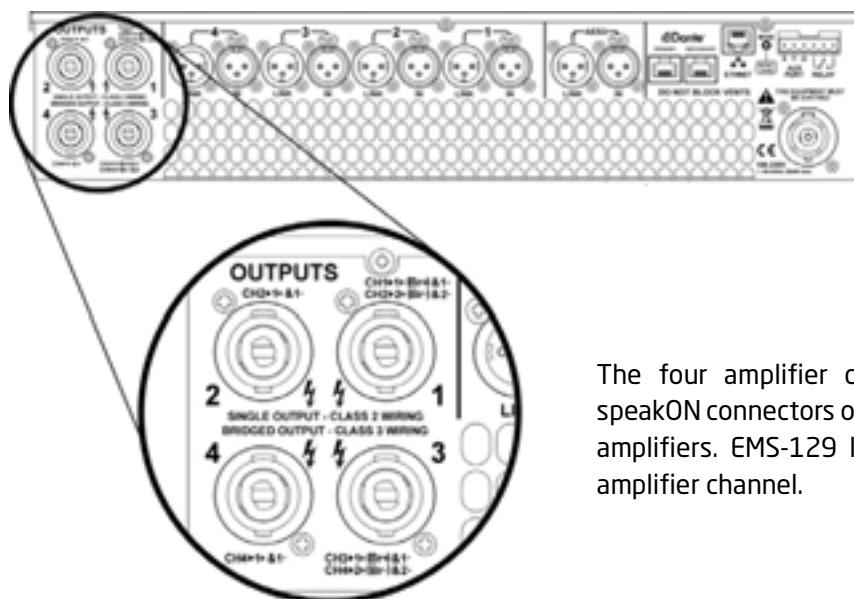

The four amplifier channels appear on four speakON connectors on the rear of the DQ Series amplifiers. EMS-129 loudspeakers require one amplifier channel.

6.3.2 - Preset Recall

The EMS-129 and EMS-126 presets are pre-installed on DQ amplifiers, and as such can be used following the normal preset recall procedure. The presets available are:

EMS-129.full Standard EMS-129 preset

EMS-126.full Standard EMS-126 preset

As mentioned above, these presets are intended to be a starting point and additional work may be required depending on the venue, the style of content and the end result you are looking for.



6.4 - System Connectivity


6.4.1 - Cable Length and Specification

All cables add to the system impedance, and as such careful selection is required depending on your amplifier setup and overall system impedance. Cables with a cross sectional area of less than 2.5mm^2 should not be used. Recommended maximum cable lengths are given below:

Conductor Area	Maximum Recommended Cable Length	2 ohms	4 ohms	8 ohms
2.5mm^2 (14 AWG)	15m		30m	60m
4.0mm^2 (12 AWG)	20m		40m	80m
6.0mm^2 (10 AWG)	30m		60m	120m

6.4.2 - Crossover Cable Use

The use of a pin-swap or “crossover” cable can allow for neater cable solutions when sending different amplifier signals to the same location. Because pins 2+/2- are linked through inside all EM Acoustics loudspeakers, using a 4-core cable to one loudspeaker (carrying two different signals) allows a crossover cable to be used to link out of the first loudspeaker into another, thereby feeding it from a separate signal.

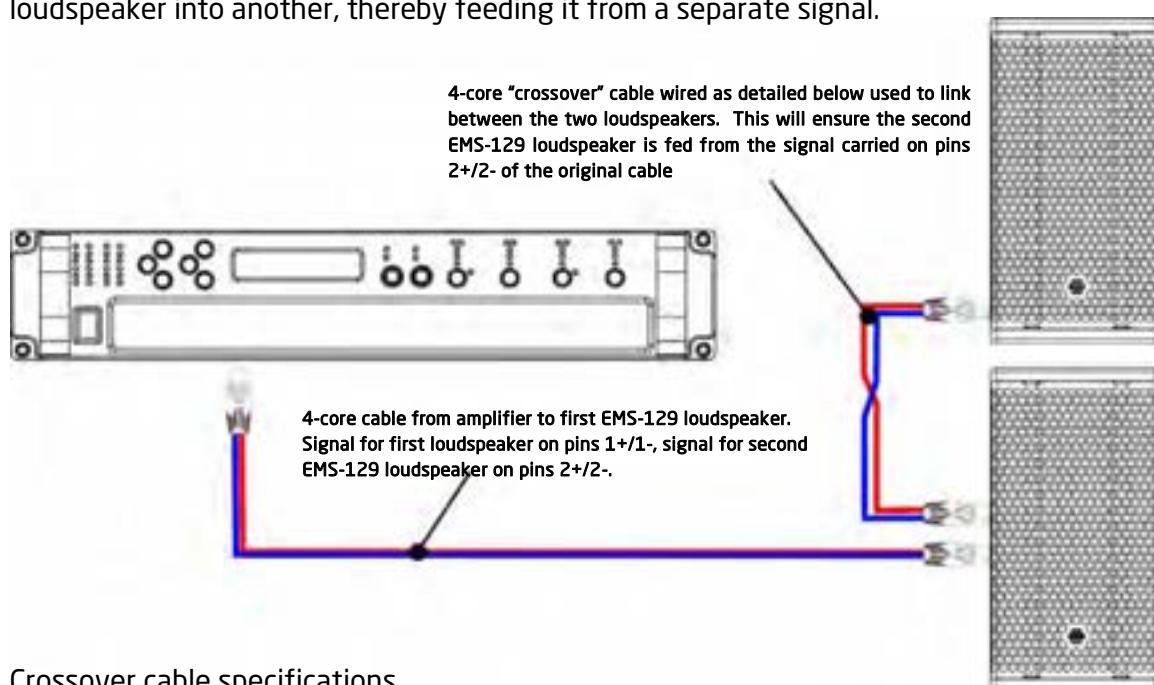

Crossover cable specifications

Connector A Pin	Connector B Pin
1+	2+
1-	2-
2+	1+
2-	1-


7.0 - Servicing Information

All EMS-129 components can be removed for service purposes if required, using the minimum of tools.

7.1 - EMS-129: Removing the grille

TOOLS REQUIRED: 4mm Allen key

1. Lie the enclosure on its' back and remove the two M6x30 countersunk socket screws from each end using a 4mm Allen key, and then lift the grille clear of the cabinet.

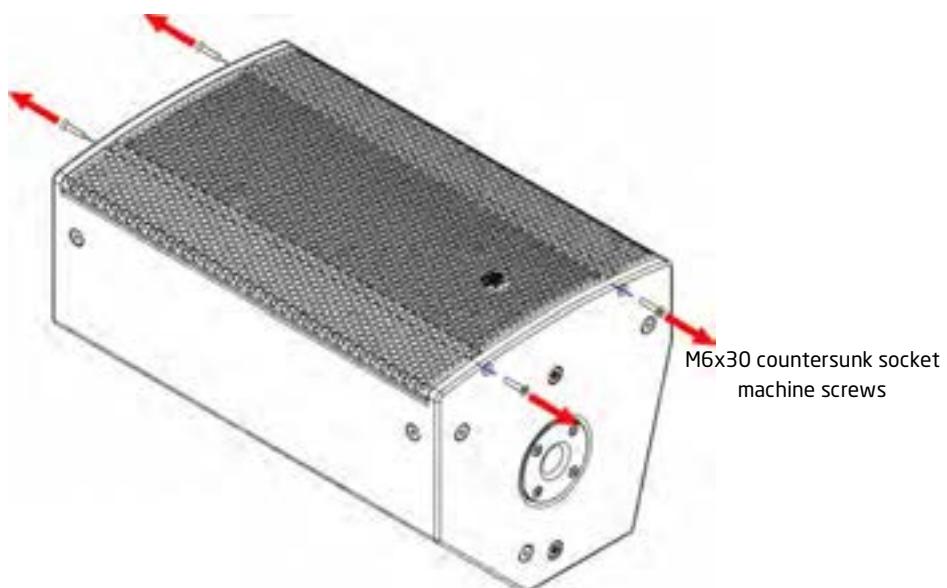


2. To replace the grille, position the grille on the front of the EMS-129 and ensure the threaded fittings on the grille are lined up with the mounting holes - gentle pressure may be required. Replace all of the M6x30 countersunk socket screws and ensure they are all are started in their threads before beginning to tighten. Ensure they are all tightened evenly so that the grille sits straight and does not rattle. Be careful not to over-tighten as this will distort the grille.

7.2 - EMS-129: Removing the LF drive unit

TOOLS REQUIRED: 5mm Allen key

1. Complete step 7.1 above to remove the grille.
2. Using a 5mm Allen key, remove the eight M6x30 socket cap screws that secure the drive unit. Ensure that you collect the spring washers as well as the machine screws.

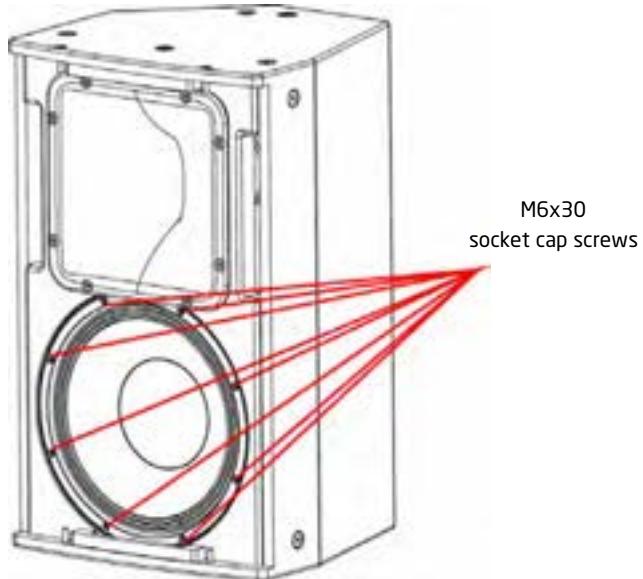


3. Lift the drive unit clear of the mounting hole and disconnect the cables - note the polarity for reconnection (brown to LF positive, blue to LF negative).
4. To replace the drive unit, ensure the 12" gasket is intact and complete - replace if necessary. Reconnect the cables to the drive unit (note the polarity detailed above) and then sit the drive unit into its mounting location, ensuring that the mounting holes line up.
5. Replace the M6x30 socket cap machine screws with their spring washers and ensure all machine screws are started in their threads before tightening. Tighten opposing bolts, working around the drive unit until all bolts are appropriately tightened. Be careful not to overtighten as this will distort the drive unit chassis.
6. Replace the grille as described above.

7.3 - EMS-129: Removing the HF drive unit

TOOLS REQUIRED: 4mm Allen key

1. Complete step 7.1 above to remove the grille.
2. Using a 4mm Allen key, remove the eight M6x40 countersunk socket screws that secure the waveguide.

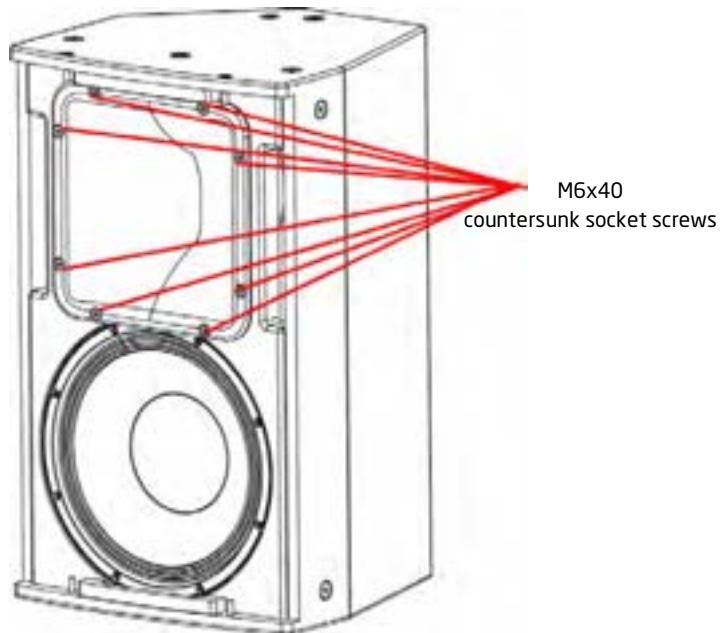

3. Lift the drive unit clear of the baffle and disconnect the cables - note the polarity for reconnection (white to positive, yellow to negative).
4. To replace the drive unit, ensure the gasket is intact and complete - replace if necessary. Reconnect the cables to the drive unit (note the polarity detailed above) and then sit the drive unit into its mounting hole, ensuring that the holes line up.
5. Replace the M6x40 countersunk socket machine screws and ensure all machine screws are started in their threads before tightening. Tighten opposing bolts, working around the drive unit until all bolts are appropriately tightened. Be careful not to overtighten as this will distort the drive unit chassis.
6. Replace the grille as described above.

Appendix A - Technical Specifications


EMS-126/EMS-129 compact passive loudspeaker


Dimensions (HxWxD):	622 x 380 x 364mm (24.5" x 15" x 14.3")
Net/Shipping Weight:	25/27.5kg (55/60.5lbs) (EMS-126) 24/26.6kg (52.8/58.5lbs) (EMS-129)
Frequency Response (+/- 3dB) ¹ :	70Hz - 20kHz
Dispersion ³ :	60° x 40° (EMS-126), rotatable 90° x 60° (EMS-129), rotatable
Drive Units:	12" (305mm) neodymium LF drive unit 1.4" (36mm) exit neodymium HF compression drive unit
Power Handling:	LF: 500W RMS, 1000W program
Maximum SPL:	128dB continuous, 134dB peak
Nominal Impedance:	8 ohms
Crossover:	Asymmetric internal passive
Enclosures per amp channel:	DQ6: 1 DQ10: 2 DQ20: 4
Connectors:	2 x Neutrik SpeakON™ NL4
Enclosure:	15mm (5/8") multi-laminate birch plywood, rebated, screwed and glued. Finished in impact and weather-resistant polyurethane or white textured paint
Rigging & Hardware:	4 x M10 threaded mounting points (2 top/2 bottom) 1 x M8 threaded mounting point on rear 4 x M8 threaded points for OmniMount™ Series 60/Powerdrive™ Series 100 brackets 1 x flush handle on rear, 1 x 35mm pole mount socket
Grille:	Hex punched steel backed with acoustically transparent fabric
Options:	Colours/Weather Protection
Accessories:	FC-129v vertical flying cradle FC-129h horizontal flying cradle DFB-129 dual enclosure flying plate set VFA-129 variable angle flying bracket


Notes on measurement conditions:


¹Measured on-axis at 2m in an anechoic environment and referenced to 1m. ²Measured in half-space at 2m with 4W sine wave input and referenced to 1m. ³Nominal dispersion, measured in an anechoic environment and averaged over stated bandwidth. ⁴Calculated and verified by subjective listening test of familiar program material.


Appendix B - Technical Drawings

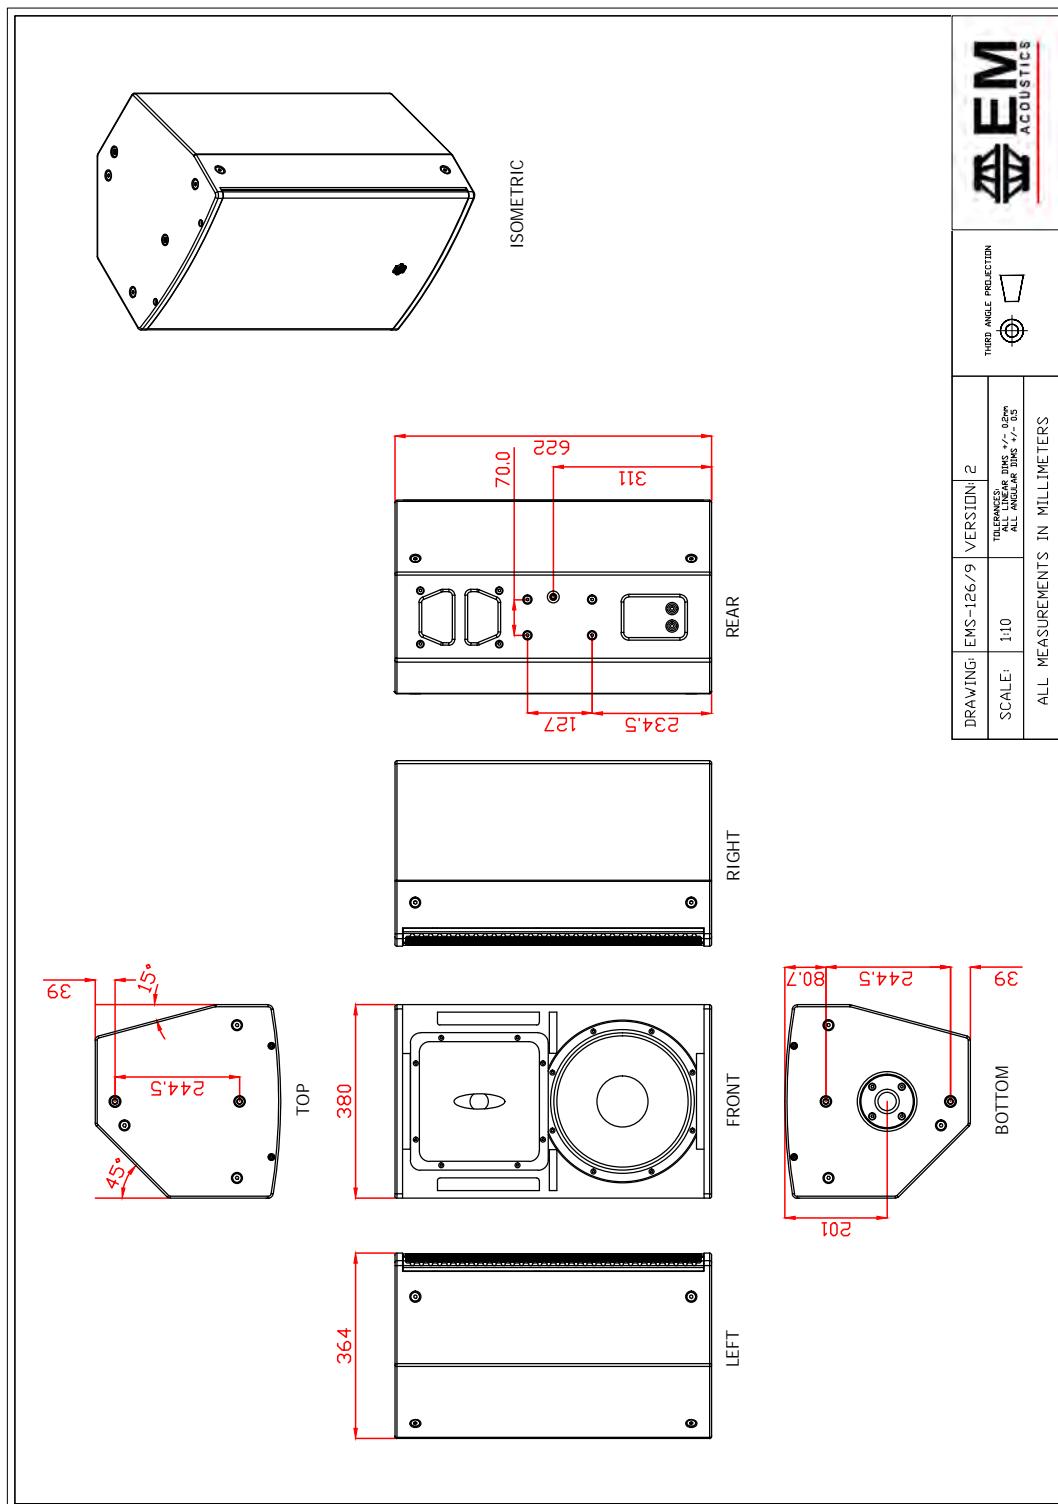

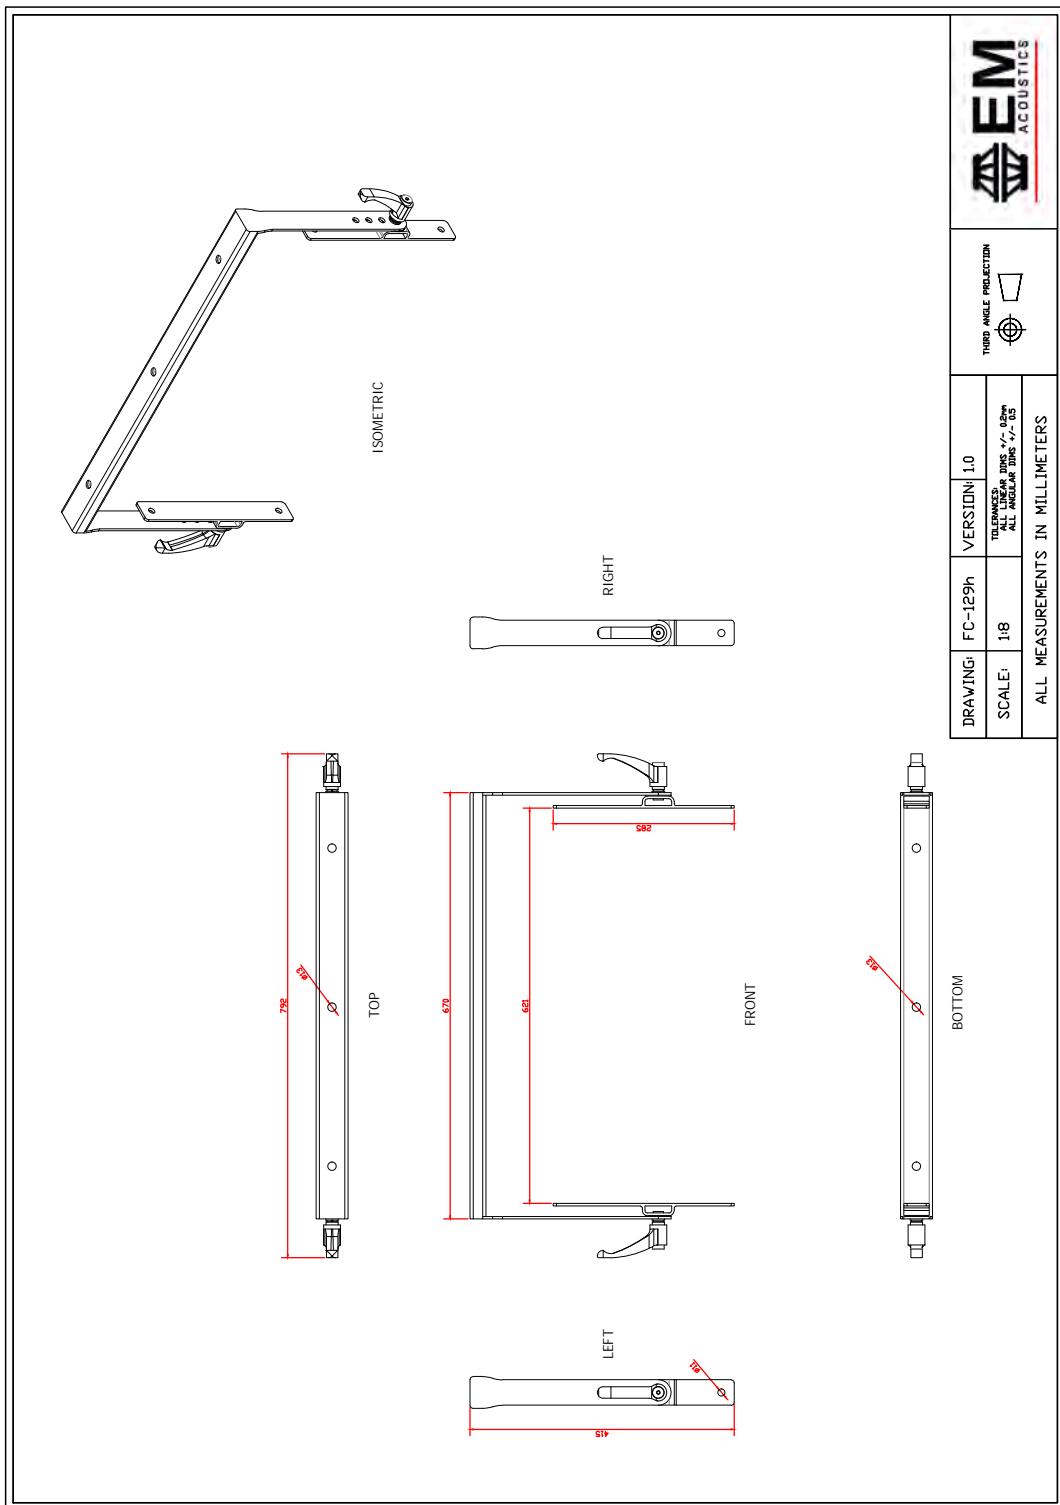

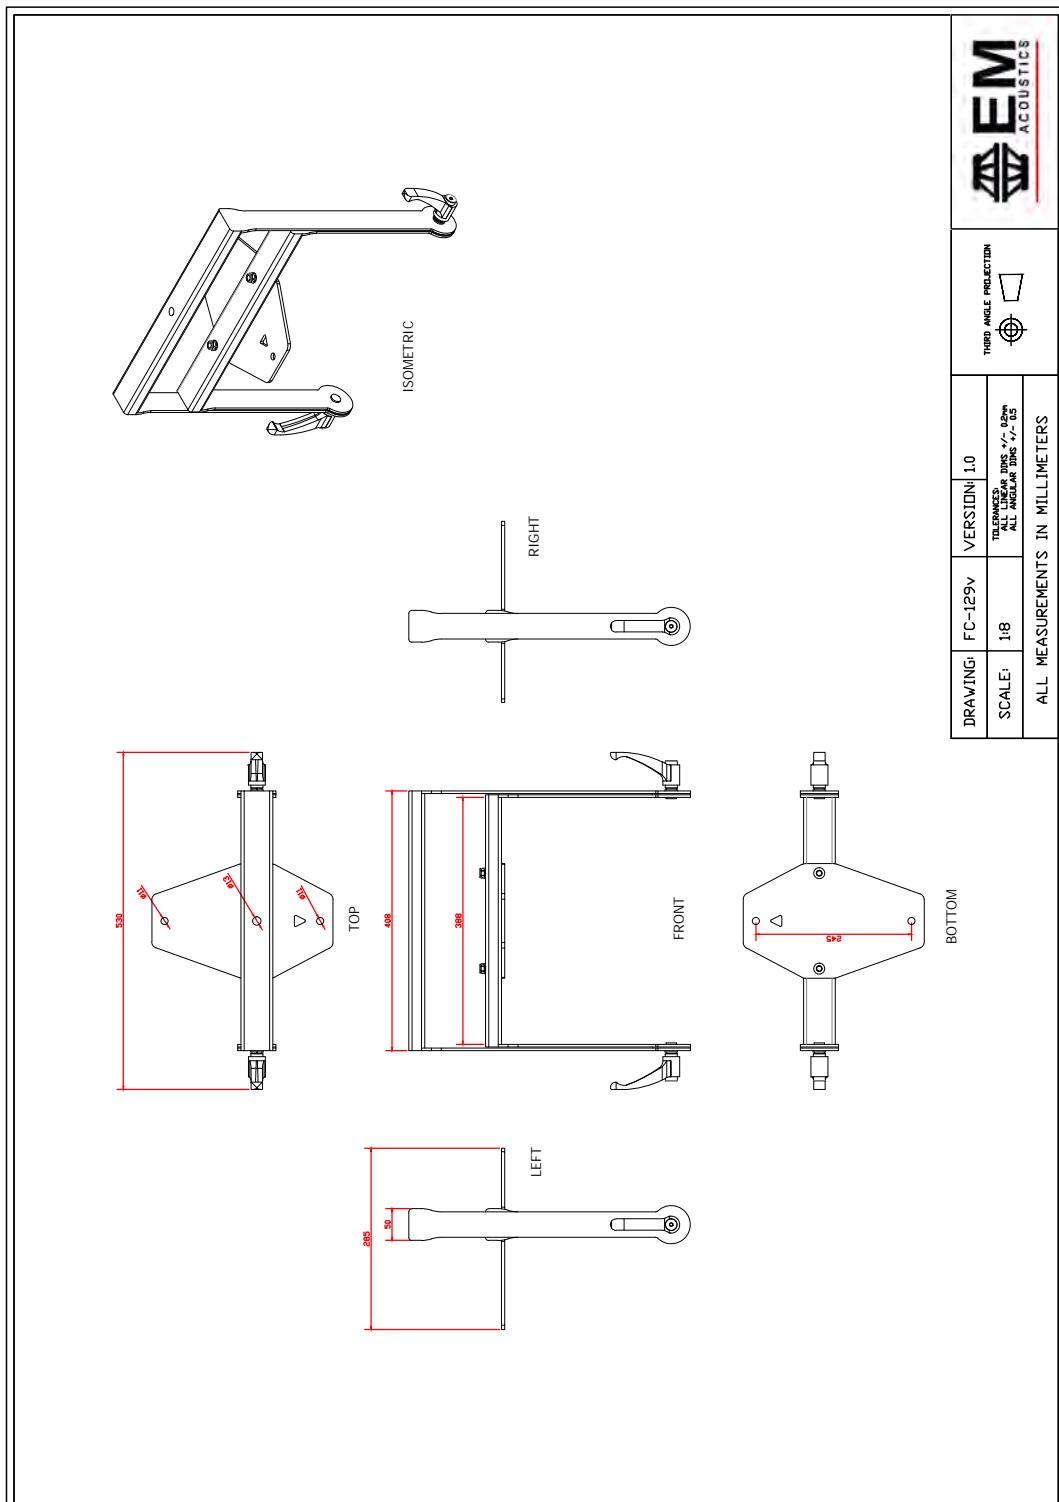

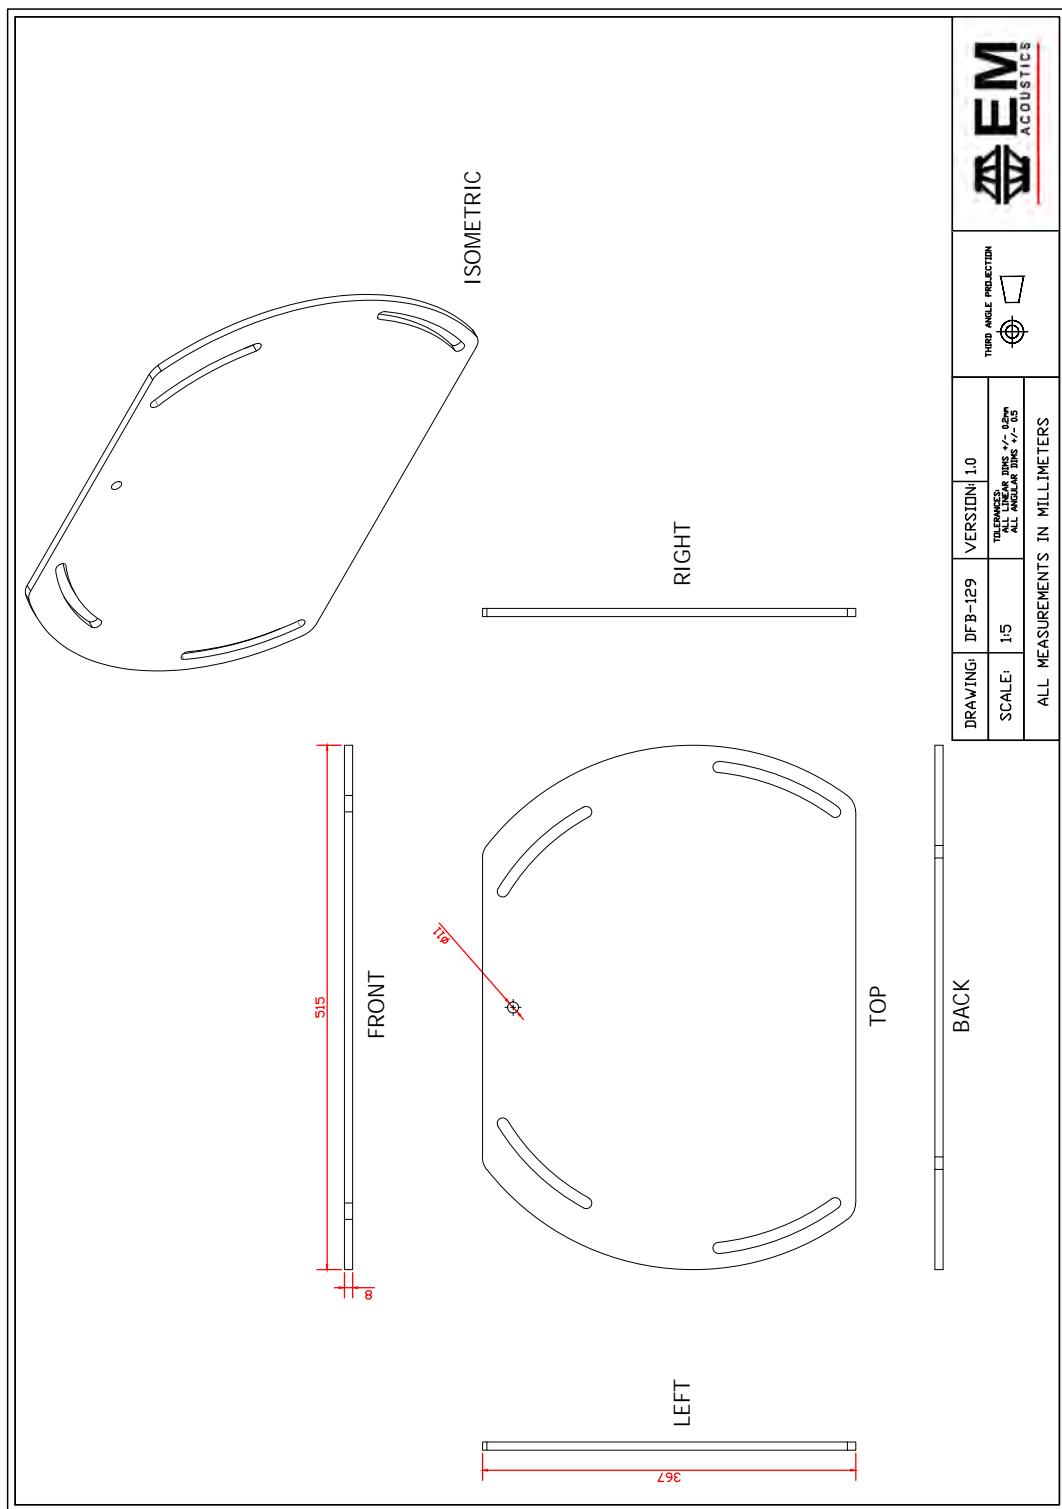

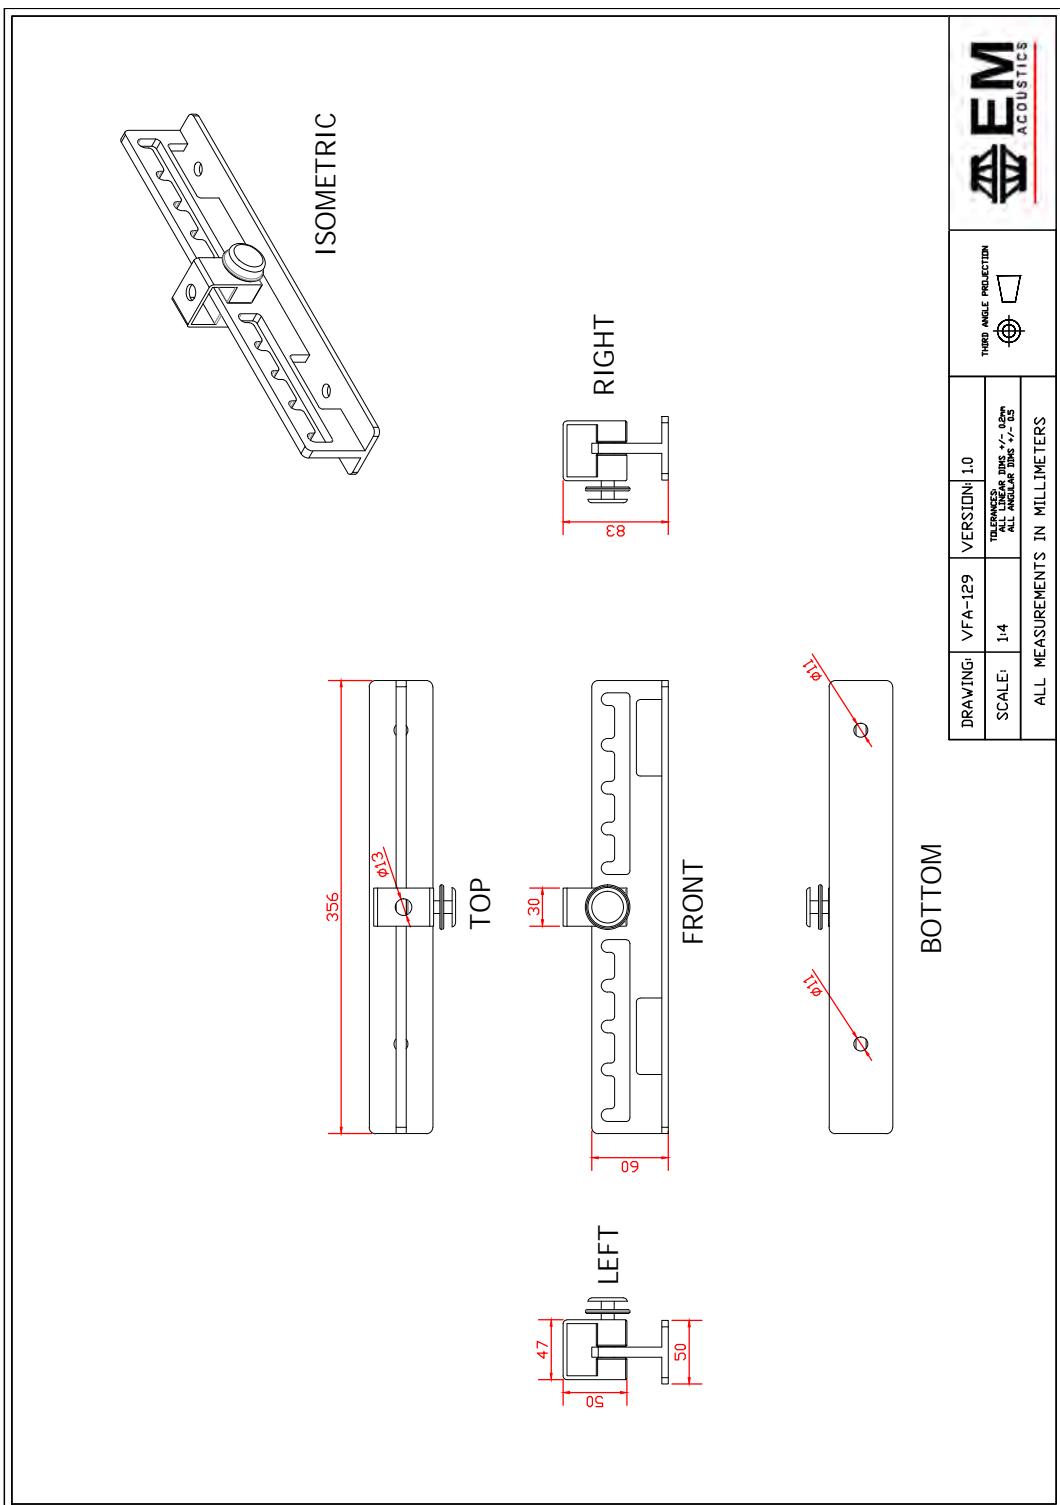

Appendix C - Spare Parts List

Order Code	Description
01A019	DU-1208 replacement 12" neodymium LF drive unit
01B014	CDU-1404 replacement 1.4" neodymium HF compression drive unit
04A063	RFG-129 replacement grille/fabric for EMS-129
07A032	PX-129 replacement passive crossover assembly for EMS-129
07A033	PX-126 replacement passive crossover assembly for EMS-126

Appendix D - Warranty Information

Limited Warranty

This EM Acoustics loudspeaker product is warranted to the original end-user purchaser and all subsequent owners for a period of **five (5) years** from the original date of purchase.

Warranty Coverage

This warranty covers defects in materials and workmanship. It does not include:

- Damage or failure caused by accident, misuse, neglect, abuse or modification by any person other than an authorised EM Acoustics representative.
- Damage or failure caused by operating the loudspeaker product contrary to the instructions contained within this manual.
- Damage caused during shipment.
- Claims based on any misrepresentation by the seller.
- Products which contain anything other than the original components (or EM Acoustics factory supplied spare parts).
- Products on which the serial number has been removed, altered or defaced.

Returning your EM Acoustics loudspeaker

Should your EM Acoustics loudspeaker develop a fault, please return it (freight prepaid) in its original packaging, along with proof of purchase to your local dealer or to:

EM Acoustics (Returns Department), Building 19.11, Dunsfold Park, Cranleigh, Surrey, GU6 8TB, UK

including a description of the suspected fault. Serial numbers must be quoted in all correspondence relating to the claim. EM Acoustics or its representatives are in no way liable for any loss or damage in transit, and hence it is recommended that the sender insure the shipment. EM Acoustics will pay for return freight should the repair be covered under warranty.

EM Acoustics' liability is to the replacement or repair (at our discretion) of any defective components, and as such are not liable for any incidental and consequential damages including (without limitation) injury to persons, damage to property or loss of use.

This warranty is exclusive and no other warranty is expressed or implied. This warranty is also in addition to - and in no way detracts from - your statutory rights as a consumer.