

PROTEUS™  
RAYZOR BLADE L  
user manual

©2023 ELATION PROFESSIONAL all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ELATION PROFESSIONAL logo and identifying product names and numbers herein are trademarks of ELATION PROFESSIONAL. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ELATION brands and product names are trademarks or registered trademarks of their respective companies.

**ELATION PROFESSIONAL** and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

**Elation Professional USA | 6122 S. Eastern Ave. | Los Angeles, CA. 90040**

323-582-3322 | 323-832-9142 fax | [www.elationlighting.com](http://www.elationlighting.com) | [info@elationlighting.com](mailto:info@elationlighting.com)

**Elation Professional B.V. | Junostraat 2 | 6468 EW Kerkrade, The Netherlands**

+31 45 546 85 66 | +31 45 546 85 96 fax | [www.elationlighting.eu](http://www.elationlighting.eu) | [info@elationlighting.eu](mailto:info@elationlighting.eu)

**Elation Professional Mexico | AV Santa Ana 30 | Parque Industrial Lerma, Lerma, Mexico 52000**

+52 (728) 282-7070

## DOCUMENT VERSION



Due to additional product features and/or enhancements, an updated version of this document may be available online. Please scan the QR Code with your mobile device or visit [www.elationlighting.com](http://www.elationlighting.com) for the latest revision/update of this manual, before installation and/or programming.

Date	Document Version	SoftwareVersion ≥	DMX Channel Modes	Notes
07/27/2022	1.0	1.0.0	28/76/140/188	Initial Release
09/08/2022	1.1	N/C	No Change	Updated Torque Settings, RDM, and System Menu
10/06/2022	1.2	N/C	No Change	Updated Specifications
01/31/2023	1.3	N/C	No Change	Updated DMX Traits, Specifications
02/15/2023	1.4	N/C	No Change	Updated IP65 notice, Error Codes, & Specifications

# CONTENTS

<b>General Information</b>	<b>4</b>
<b>Limited Warranty (USA Only)</b>	<b>5</b>
<b>IP65 Notice</b>	<b>6</b>
<b>Safety Guidelines</b>	<b>7</b>
<b>Overview</b>	<b>9</b>
<b>Torque Settings for Screws</b>	<b>10</b>
<b>Installation Guidelines</b>	<b>11</b>
<b>System Menu</b>	<b>18</b>
<b>Dimmer Curve Graphs</b>	<b>25</b>
<b>Patching and FX Programming Guide</b>	<b>26</b>
<b>DMX Traits: Main Fixture</b>	<b>29</b>
<b>DMX Traits: RGB Pixels</b>	<b>34</b>
<b>DMX Traits: Strobeline</b>	<b>35</b>
<b>DMX Traits: Sparkled</b>	<b>36</b>
<b>DMX Traits: Color Temperature</b>	<b>37</b>
<b>Pixel Layouts</b>	<b>39</b>
<b>RGBW Pixel FX Table</b>	<b>40</b>
<b>Sparkled FX Table</b>	<b>46</b>
<b>Strobeline FX Table</b>	<b>51</b>
<b>Remote Device Management (RDM)</b>	<b>57</b>
<b>Error Codes</b>	<b>58</b>
<b>Maintenance Guidelines</b>	<b>59</b>
<b>Specifications</b>	<b>60</b>
<b>Dimensional Drawings</b>	<b>61</b>
<b>Optional Accessories</b>	<b>63</b>

# GENERAL INFORMATION

## FOR PROFESSIONAL USE ONLY

### INTRODUCTION

Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this device. These instructions contain important safety and use information. For professional use only

### IP65 RATED

An IP rated lighting fixture is one, which is commonly installed in outdoor environments and has been designed with an enclosure that effectively protects the ingress (entry) of external foreign objects such as dust and water. **The International Protection (IP)** rating system is commonly expressed as "**IP**" (Ingress Protection) followed by two numbers (i.e. IP65) where the numbers define the degree of protection. The first digit (Foreign Bodies Protection) indicates the extent of protection against particles entering the fixture and the second digit (Water Protection) indicates the extent of protection against water entering the fixture. An **IP65** rated lighting fixture is one, which has been designed and tested to protect against the ingress of dust **(6)** and low-pressure water jets from any direction **(5)**.

### UNPACKING

Every device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton is damaged, carefully inspect the device for damage, and be sure all accessories necessary to install and operate the device have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

### BOX CONTENTS

Omega Brackets (x2)

IP65 Rated 5pin DMX Cable

IP65 Rated RJ45 DATA Cable (Fixture to Fixture Interconnect Use Only!)

IP65 Rated Power Cable

### CUSTOMER SUPPORT

Contact ELATION Service for any product related service and support needs.

Also visit [forums.elationlighting.com](http://forums.elationlighting.com) with questions, comments or suggestions.

**ELATION SERVICE USA-Monday-Friday 8:00am to 4:30pm PST**

**323-582-3322 | Fax 323-832-9142 | [support@elationlighting.com](mailto:support@elationlighting.com)**

**ELATION SERVICE EUROPE-Monday-Friday 08:30 to 17:00 CET**

**+31 45 546 85 63 | Fax +31 45 546 85 96 | [support@elationlighting.eu](mailto:support@elationlighting.eu)**

**REPLACEMENT PARTS** please visit [parts.elationlighting.com](http://parts.elationlighting.com)

## **LIMITED WARRANTY (USA ONLY)**

To obtain warranty service, a Return Materials Authorization (RMA) number must first be obtained from ELATION. It is the Customer's responsibility to provide product proof of purchase and serial number by acceptable evidence such as an invoice copy or an approved ELATION Extended Warranty Certificate ("EWC") and any relevant maintenance records at the time warranty service is sought. Failure to provide acceptable evidence of product proof of purchase or EWC and any relevant maintenance records may be cause for denial of warranty service.

Products returned for warranty service must be sent without any accessories (i.e., power, data, and safety cables, brackets, clamps, rigging hardware, frost filters, gel frames, barn doors, lens, hoses, nozzles, rack mounting hardware, etc.), must be boxed using the original and/or suitable packaging materials (double-box and foam) that provides ample product protection for ground and/or air freight transit, and must be shipped freight pre-paid and insured to ELATION in Los Angeles, CA or an ELATION Authorized Service Center. The RMA number must be clearly written on the outside of the return box, and a brief description of the problem and the RMA number must be documented and included in the box.

Products returned for warranty service without an RMA number clearly marked on the outside of the package will be refused and returned to the shipper at the Customer's expense. Products returned for warranty service, which are received damaged due to inadequate and/or improper packaging and/or due to damage caused by shipping carrier, may incur additional repair charges before warranty service begins and/or may void this warranty. If any product accessories (included and/or optional) are shipped with the product, ELATION and/or the ELATION Authorized Service Center shall have no liability what so ever for the loss and/or damage to any such accessories, nor the safe return thereof. If the requested warranty repairs or service (including parts replacement) are within the terms of this warranty, ELATION will pay return ground transportation shipping charges to a single designated point within the United States.

# IP65 RATED

The International Protection (IP) rating system is commonly expressed as "IP" (Ingress Protection) followed by two numbers (i.e. IP65), where the numbers define the degree of protection. The first digit (Foreign Bodies Protection) indicates the extent of protection against particles entering the fixture, and the second digit (Water Protection) indicates the extent of protection against water entering the fixture. An IP65 rated lighting fixture is designed and tested to protect against the ingress of dust (6), and low-pressure water jets from any direction (5).

## NOTE: THIS FIXTURE IS INTENDED FOR TEMPORARY OUTDOOR USE ONLY!

**Maritime/Coastal Environment Installations:** A coastal environment is seaside adjacent, and caustic to electronics through exposure to atomized salt-water and humidity, whereas maritime is anywhere within 5-miles of a coastal environment.



**NOT suitable for maritime/coastal environment installations. Installing this fixture in a maritime/coastal environment may cause corrosion and/or excessive wear to the interior and/or exterior components of the fixture. Damages and/or performance issues resulting from installation in a maritime/coastal environment will void the manufacturer's warranty, and will NOT be subject to any warranty claims and/or repairs.**

Maritime installations require additional preparation, and additional service intervals may be needed given the maritime use. In general, IP ratings presuppose freshwater conditions VS maritime conditions, which are typically more "caustic" to IP fixtures (both internally and externally). A duty-cycle may also be needed when units are not in use. During times of high humidity and colder temperatures, condensation may occur internally so the fixture may require a duty-cycle to bring it up to running temperature, allowing any accumulation of moisture to be expelled via the vent valve. Recommendations can change based on installation environmental circumstances. A waterproof dome or similar device is recommended for use in permanent outdoor installations. When using a dome, refer to manufacturer recommendations for duty-cycle.

**Exterior Maintenance:** Inspect the exterior every 30-days. The unit must be powered off/disconnected. The chassis should be inspected for any signs of contaminants. Inspect optics to determine if the lens is obstructed, then clean optics and chassis accordingly. Based on initial finding, schedule maintenance accordingly, keeping in mind that exterior maintenance will be required. Even if the luminaires are NOT in use, maintenance will still be needed given its location (exterior use). The use of a durable type of wax on the chassis is recommended since it will help prevent contaminant build up. Inspect both power and data lines for any signs of contaminants or corrosion. Periodically reapplying di-electric grease, especially in coastal environments. If any signs of corrosion/contaminants are present, clean thoroughly, and/or replace connectors, then reapply di-electric grease. Typically, this should be done annually, or any time an opportunity presents itself. As a preventive measure, annual replacement of both vent valves is recommended. The vent valve membrane can become contaminated and/or clogged causing improper venting of humidity within the luminaire. Inspect all mounting hardware as a precaution.

**Interior Maintenance:** Inspect the interior every 30-days. The unit must be powered off/disconnected.

- Inspect zoom/focus mechanism, clean optics, lubricate linear bearings (Krytox oil) as needed, inspect belts for wear
- Inspect all rotating effect wheels, manually rotate them, note any resistance
- Inspect all remaining rotating belts for any wear
- Inspect all fans, clean as needed, check rotation, check connections
- Inspect CMY module, manually move flags and check for signs of resistance, and if needed, clean guide rods first, then reapply a thin layer of grease (moly lube)
- Clean interior with low-volume compressed air, then clean optics prior to reassembly of head covers

Although the base has limited moving parts, the pan belt should also be inspected for wear. Remember to always perform an IP test anytime a cover is removed.

There is no specific time frame regarding the routine replacement of parts such as belts/stepper motors, PCBs, or LEDs. These items should only be replaced on an as needed bases, except for cooling fans, which should be replaced once the luminaires reach 10,000-hours. This is a prophylactic measure intended to keep the unit running as cool as possible, insuring proper function of all internal components. A complete service breakdown is available, please contact [service@elationlighting.com](mailto:service@elationlighting.com) for any needed parts or manuals.

# SAFETY GUIDELINES

This fixture is a sophisticated piece of electronic equipment. To guarantee a smooth operation, it is important to follow all instructions and guidelines in this manual. Elation Professional is not responsible for injury and/or damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this fixture and only the original rigging parts (omega brackets) included with this fixture should be used for installation. Any modifications to the fixture and/or the included mounting hardware will void the original manufacturer's warranty and increase the risk of damage and/or personal injury.



**PROTECTION CLASS 1-FIXTURE MUST BE PROPERLY GROUNDED.**



**THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT.  
DO NOT ATTEMPT ANY REPAIRS YOURSELF; DOING SO WILL VOID YOUR  
MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS  
TO THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND  
GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE  
NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.**



**ENSURE ALL CONNECTIONS AND END CAPS ARE PROPERLY SEALED WITH A  
DIELECTRIC GREASE (AVAILABLE AT MOST ELECTRICAL SUPPLIERS) TO PREVENT  
WATER CORROSION AND/OR ELECTRICAL SHORT CIRCUIT.**



**DO NOT PLUG FIXTURE INTO A DIMMER PACK!  
NEVER OPEN THIS FIXTURE WHILE IN USE!  
UNPLUG POWER BEFORE SERVICING FIXTURE!  
NEVER TOUCH FIXTURE DURING OPERATION, AS IT MAY BE HOT!  
KEEP FLAMMABLE MATERIALS AWAY FROM FIXTURE!**



**IF THE FIXTURE IS EXPOSED TO ENVIRONMENTAL TEMPERATURE CHANGES  
SUCH AS RELOCATION FROM AN OUTDOOR COLD TO AN INDOOR WARM  
ENVIRONMENT, DO NOT POWER THE FIXTURE ON IMMEDIATELY. INTERNAL  
CONDENSATION AS A RESULT OF ENVIRONMENTAL TEMPERATURE CHANGE  
CAN CAUSE INTERNAL FIXTURE DAMAGE. LEAVE THE FIXTURE POWERED OFF  
UNTIL IT HAS REACHED ROOM TEMPERATURE BEFORE POWERING ON.**



**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!  
RETINA INJURY RISK-MAY INDUCE BLINDNESS!  
SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!**




**MINIMUM DISTANCE TO OBJECTS/SURFACES  
MUST BE 1.6 FEET (0.5 METERS)  
MAXIMUM TEMP OF EXTERNAL SURFACE 185° F (85°C)  
MINIMUM DISTANCE OF INFLAMMABLE MATERIALS  
FROM THE SURFACE 1.6 FEET (0.5 METER)**


## SAFETY GUIDELINES

- **DO NOT TOUCH** the fixture housing during operation. Turn OFF the power and allow approximately 15 minutes for the fixture to cool down before serving.
- **DO NOT** shake fixture, avoid brute force when installing and/or operating fixture.
- **DO NOT** operate fixture if the power cord is frayed, crimped, damaged and/or if any of the power cord connectors are damaged and do not insert into the fixture securely with ease. NEVER force a power cord connector into the fixture. If the power cord or any of its connectors are damaged, replace it immediately with a new one of similar power rating.
- **DO NOT** block any air ventilation slots.
- All fan and air inlets must remain clean and never blocked.
- Always disconnect fixture from main power source before performing any type of service and/or cleaning procedure. Only handle the power cord by the plug end; never pull the plug out by tugging the wire portion of the cord.
- Consistent operational breaks will ensure fixture will function properly for many years.
- **ONLY** use the original packaging and materials to transport the fixture in for service.

# OVERVIEW

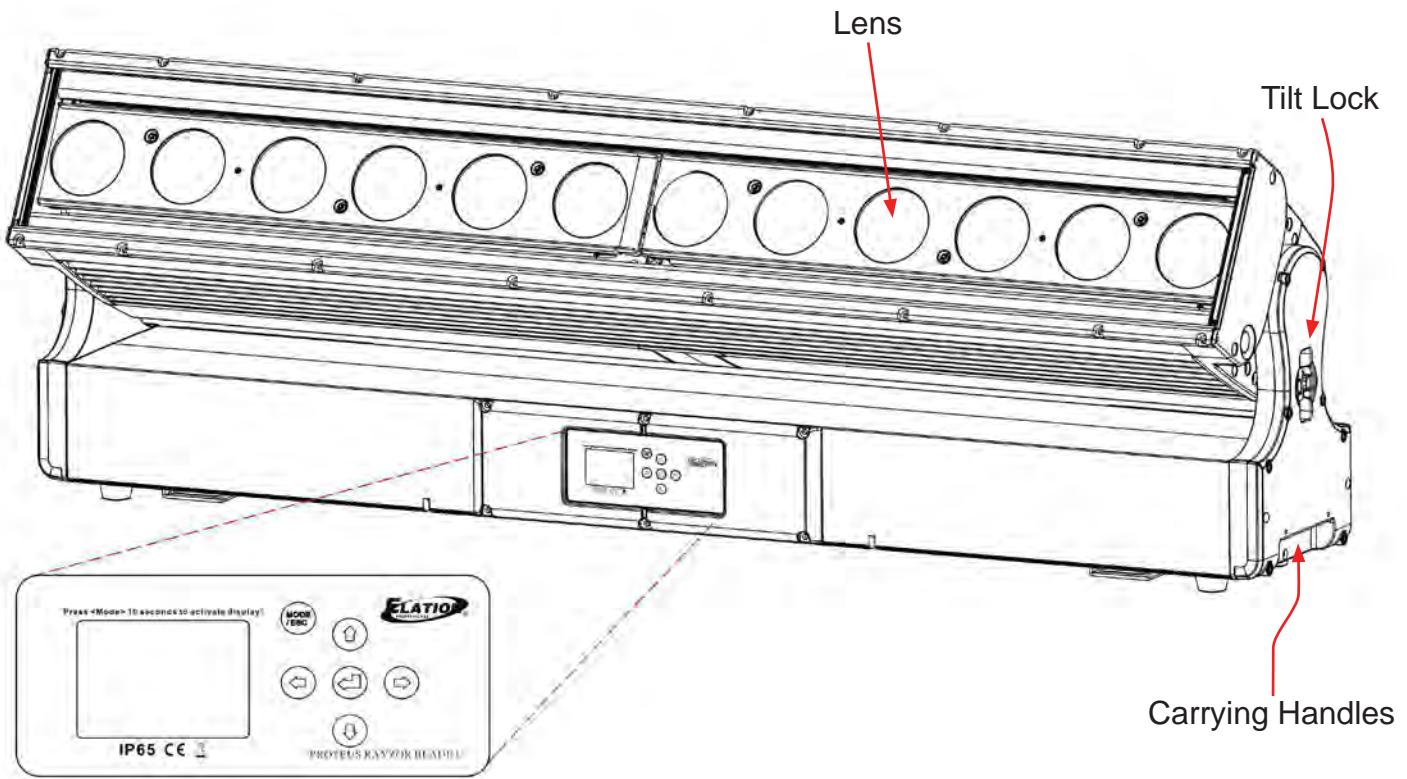


LCD Display & System Menu Controls

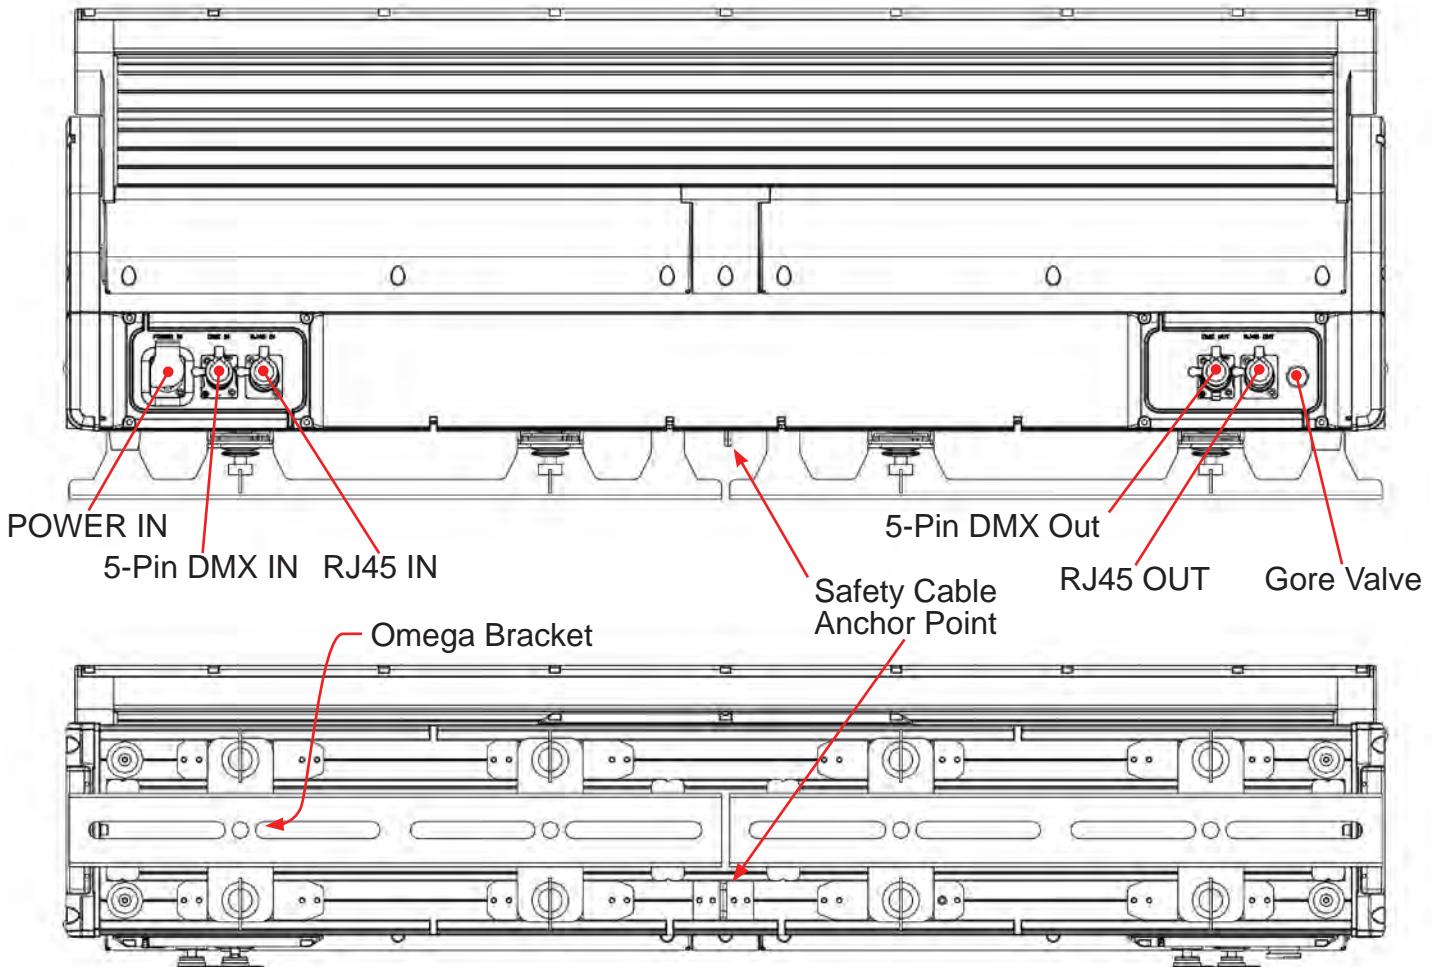

# TORQUE SETTINGS FOR SCREWS

NO.	Name	Torque Settings/kgf.cm
1	Lamp Back Cover 2	7±0.7
2	Cooling Shell Cover Assembly	14±1.4
3	Cooling Cover	14±1.4
4	Toughened Glass	14±1.4
5	Rear Head Cover Fan	14±1.4

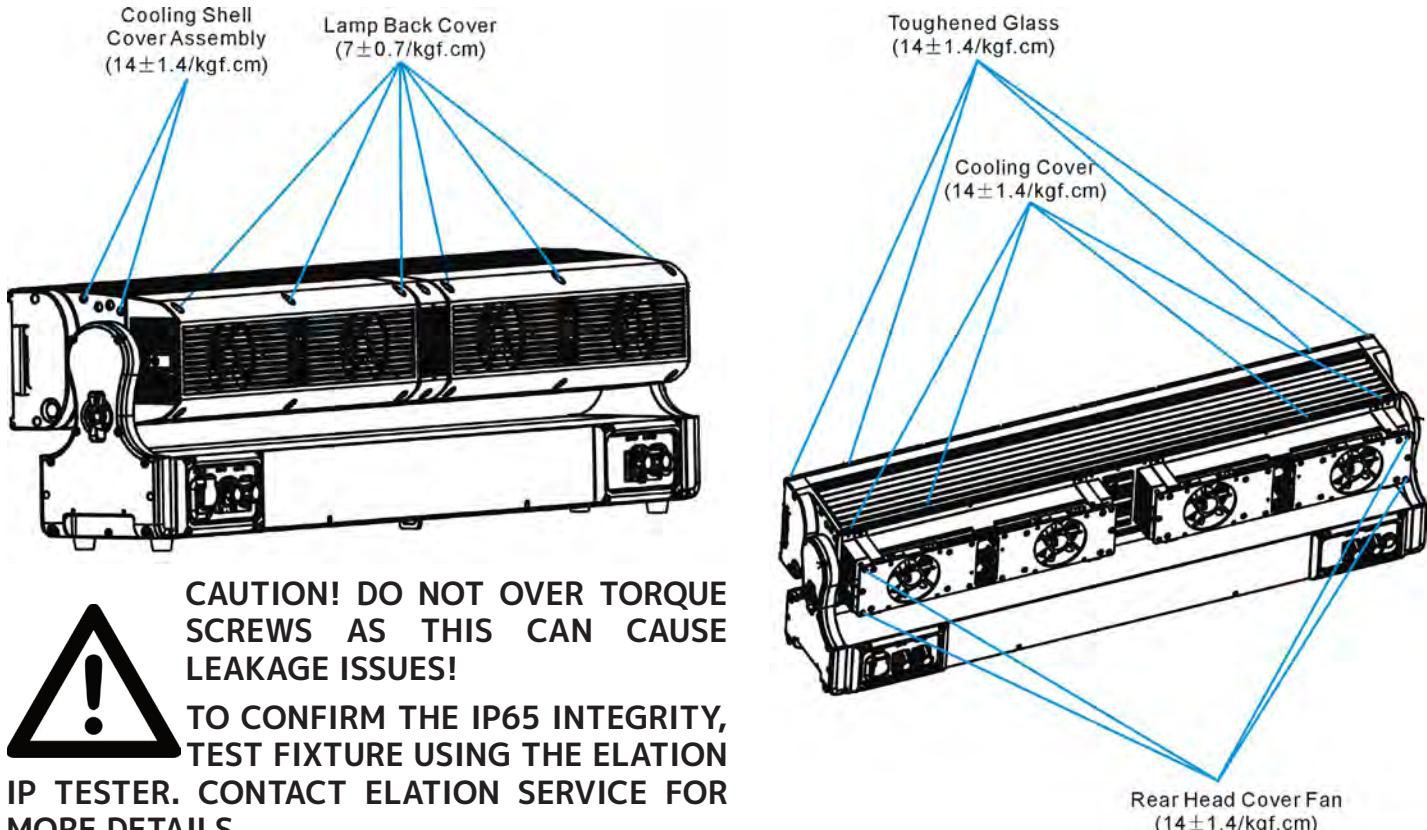

Elation Product	Minimum Value		Maximum Value		Steady Time (Hold Time)	Tester	Remarks
	Kpa	Psi	Kpa	Psi			
Proteus Rayzor Blade L/S (Same settings both units)	-17	-2.5	-13	-1.9	30	Elation IP Tester	Complete Unit
	13.00	1.9	17.00	2.5	30	Elation IP Tester	

IF IN THE UNLIKELY EVENT THAT A PRESSURIZED FIXTURE RESULTS IN CATASTROPHIC LENS FAILURE, EYE PROTECTION MUST BE WORN AT ALL TIMES WHEN USING ELATION IP TESTER, ESPECIALLY WITH FIXTURES FEATURING LARGE GLASS LENSES.



# INSTALLATION GUIDELINES



## FLAMMABLE MATERIAL WARNING

Keep fixture minimum 5.0 feet (1.5m) away from flammable materials and/or pyrotechnics.



## ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.



## MINIMUM DISTANCE TO OBJECTS/SURFACES

**MUST BE 3.2 FOOT (1.0 METERS)**



## MINIMUM DISTANCE OF INFLAMMABLE MATERIALS

**FROM THE SURFACE 3.2 FEET (1.0 METER)**



**MAXIMUM AMBIENT TEMPERATURE 194° F (90°C)**



**DO NOT INSTALL THE FIXTURE IF YOU ARE NOT QUALIFIED TO DO SO!**

Fixture **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.

Before rigging/mounting the fixture to any metal truss/structure or placing the fixture on any surface, a professional equipment installer **MUST** be consulted to determine if the metal truss/structure or surface is properly certified to safely hold the combined weight of the fixture, clamps, cables, and accessories.

Overhead rigging requires extensive experience, including, amongst others, calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

Fixture ambient operating temperature range is **4° to 113°F. (-20° to 45°C)**

Do not use the fixture under or above this temperature.

Fixture should be installed in areas outside walking paths, seating areas, or away from areas where unauthorized personnel might reach the fixture by hand.

**NEVER** stand directly below the fixture when rigging, removing or servicing.

Overhead fixture installation must always be secured with a secondary safety attachment, such as an appropriately rated safety cable.


Allow approximately 10 minutes for the fixture to cool down before servicing.

# INSTALLATION GUIDELINES

## TILT-LOCK


To lock, press the Tilt-Lock Button until it clicks.

To Unlock, press the Limiting-Plate to the right until the Tilt-Lock button pops up.

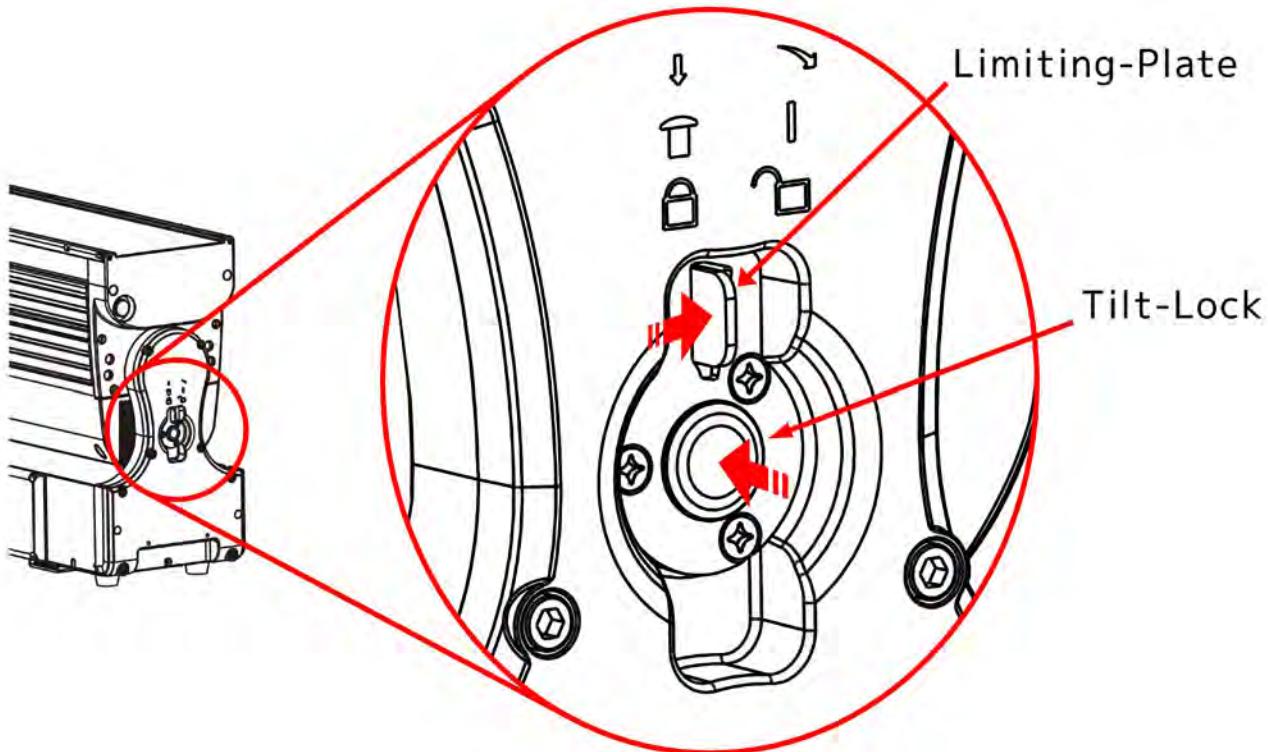

## FROST-FILTER


1. Loosen the screws on both sides of the Frost-Filter Baffle and lift it away as shown below.
2. Insert the Frost Filter into the slot above the lens glass and slide it in fully.
3. Replace the Frost-Filter Baffle and tighten the screws

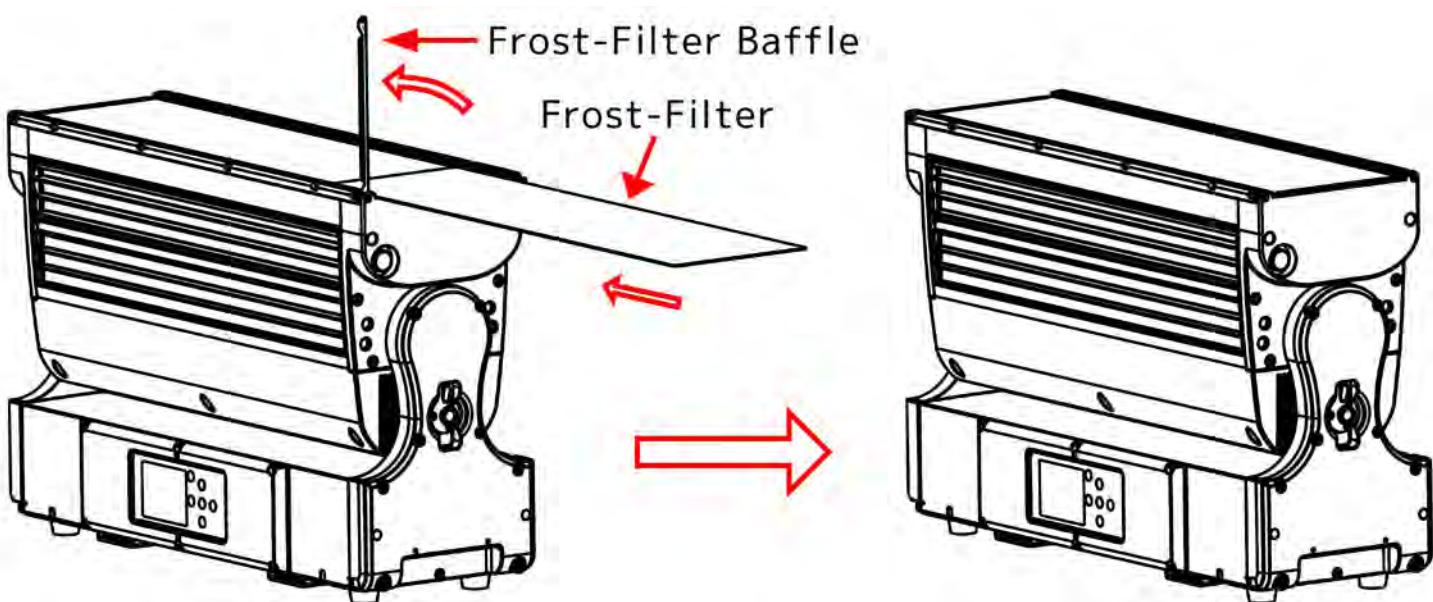

# INSTALLATION GUIDELINES

## OMEGA BRACKETS WITH CLAMP INSTALLATION

Insert the Omega Brackets into the matching holes on the bottom of the fixture. Secure the Omega Brackets to the fixture by turning each quick-lock fastener  $\frac{1}{4}$  turn clockwise; making sure the fastener is completely locked. Omega Brackets can be installed into the fixture base as illustrated below.

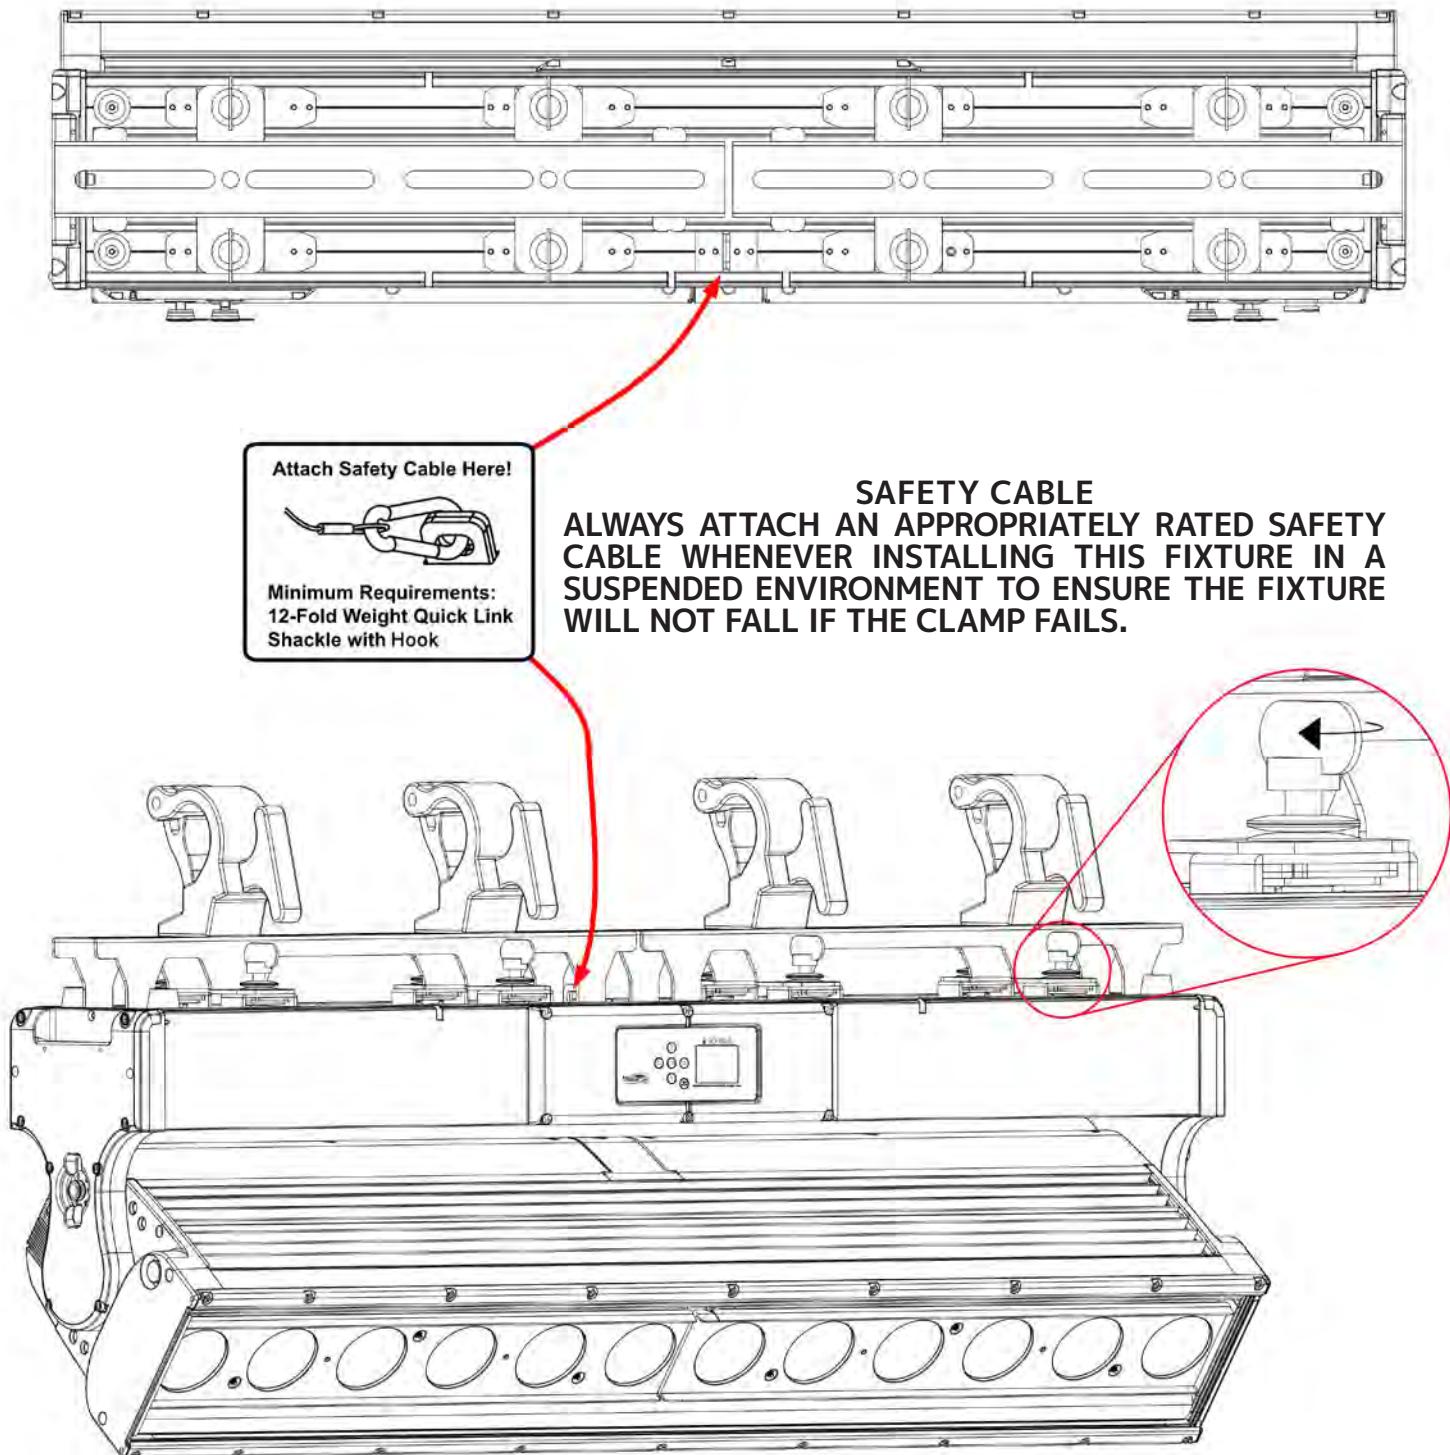


## MOUNTING THE FIXTURE ON A TRUSS USING CLAMPS WITH OMEGA BRACKETS

When mounting the fixture to a truss, be sure to secure an appropriately rated professional grade rigging clamp to the included **Omega Brackets** using an M10 or M12 screw fitted through the center hole of the **Omega Brackets**. The fixture provides built-in rigging points for a **SAFETY CABLE** (not included). Be sure to only use one of the designated rigging points for the safety cable and never secure a safety cable to a carrying handle.

# INSTALLATION GUIDELINES

## RIGGING

Overhead rigging requires extensive experience, including among others, calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

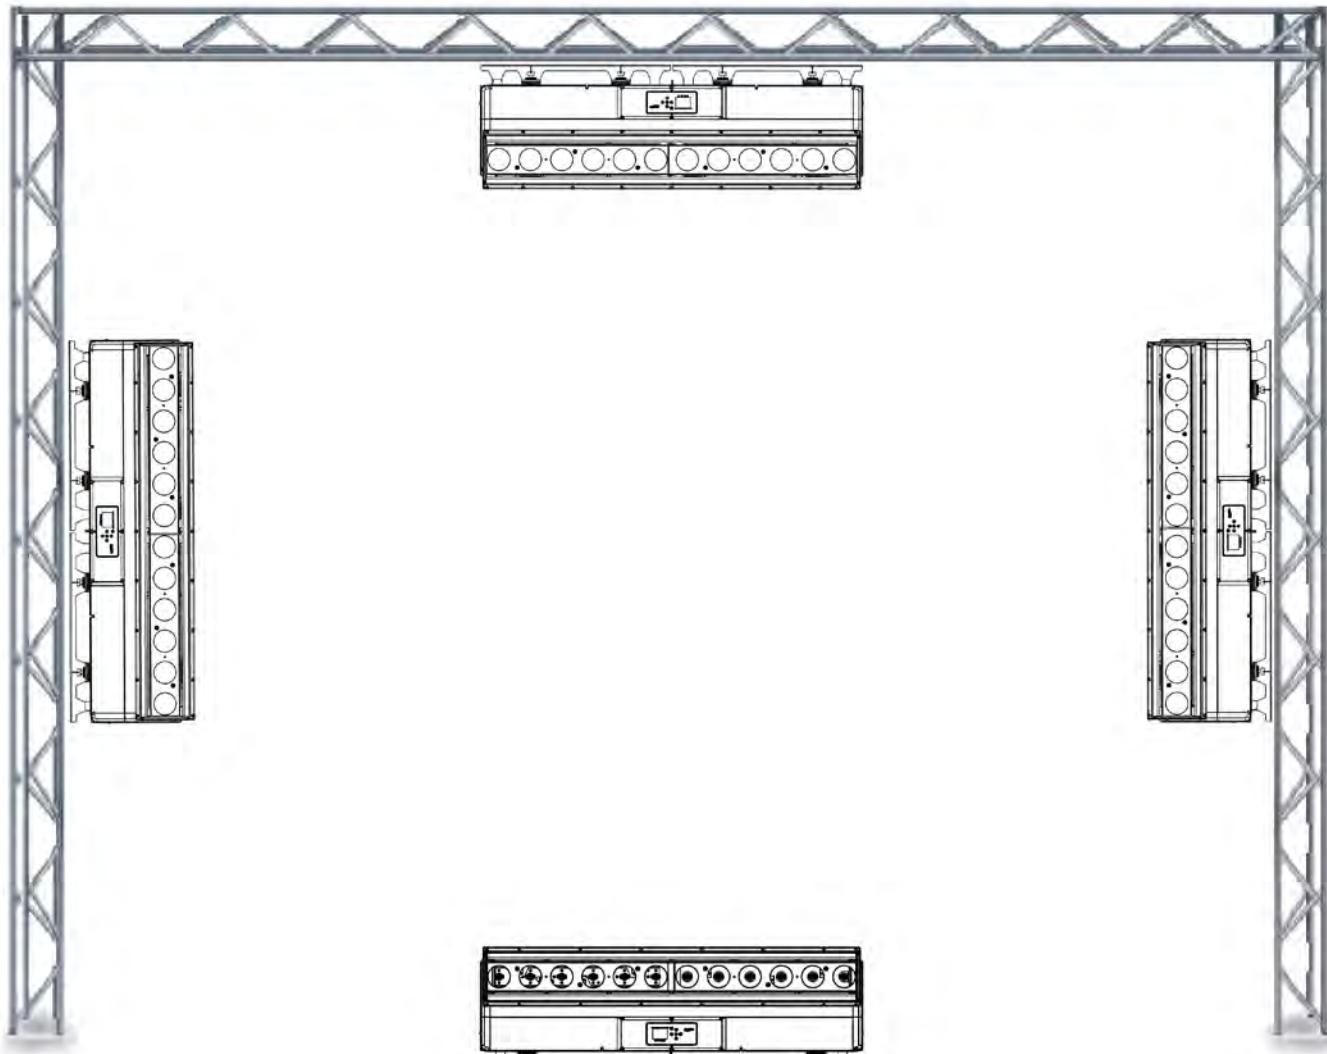

# INSTALLATION GUIDELINES

## ART-NET | sACN CONNECTION


When connecting fixture to a network switch to control multiple devices, a **Gigabit Ethernet Switch** that supports **IGMP (Internet Group Management Protocol)** is required. Using a **Gigabit Ethernet Switch** that does not support **IGMP** can cause erratic behavior of all connected devices to the switch. Click link below for more information about IGMP.

[https://en.wikipedia.org/wiki/Internet\\_Group\\_Management\\_Protocol](https://en.wikipedia.org/wiki/Internet_Group_Management_Protocol)

## POWER AND DATA CABLES




TO MAINTAIN THE IP65 RATING INTEGRITY OF THE FIXTURE, ALL CABLES MUST BE RUN TOWARDS THE GROUND TO PREVENT WATER ACCUMULATION AROUND THE CONNECTIONS.

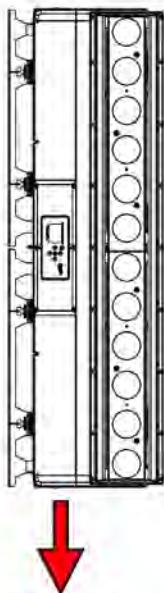

CABLES

SYSTEM MENU LCD DISPLAY

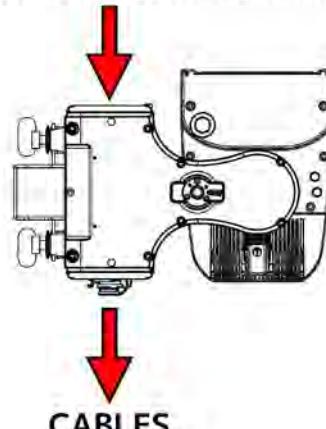


CABLES

## INCLUDED RJ45 DATA CABLE



THE INCLUDED RJ45 DATA CABLE IS FOR FIXTURE TO FIXTURE INTERCONNECTION ONLY! THE RJ45 CABLE CONNECTORS MAY NOT BE COMPATIBLE WITH OTHER RJ45/ETHERCON TYPE CONNECTORS.

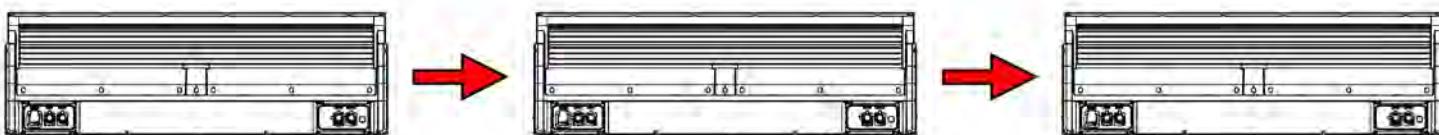

# INSTALLATION GUIDELINES


## POWER AND DATA CABLES



ENSURE ALL CONNECTIONS AND ENDCAPS ARE PROPERLY SEALED WITH DIELECTRIC GREASE (AVAILABLE AT MOST ELECTRICAL SUPPLIERS) TO PREVENT WATER CORROSION AND/OR ELECTRICAL SHORT CIRCUIT.



TO MAINTAIN THE IP65 RATING INTEGRITY OF THE FIXTURE AND PREVENT WATER FROM ENTERING THE FIXTURE, SEAL ALL UNUSED CONNECTION RUBBER CAPS.

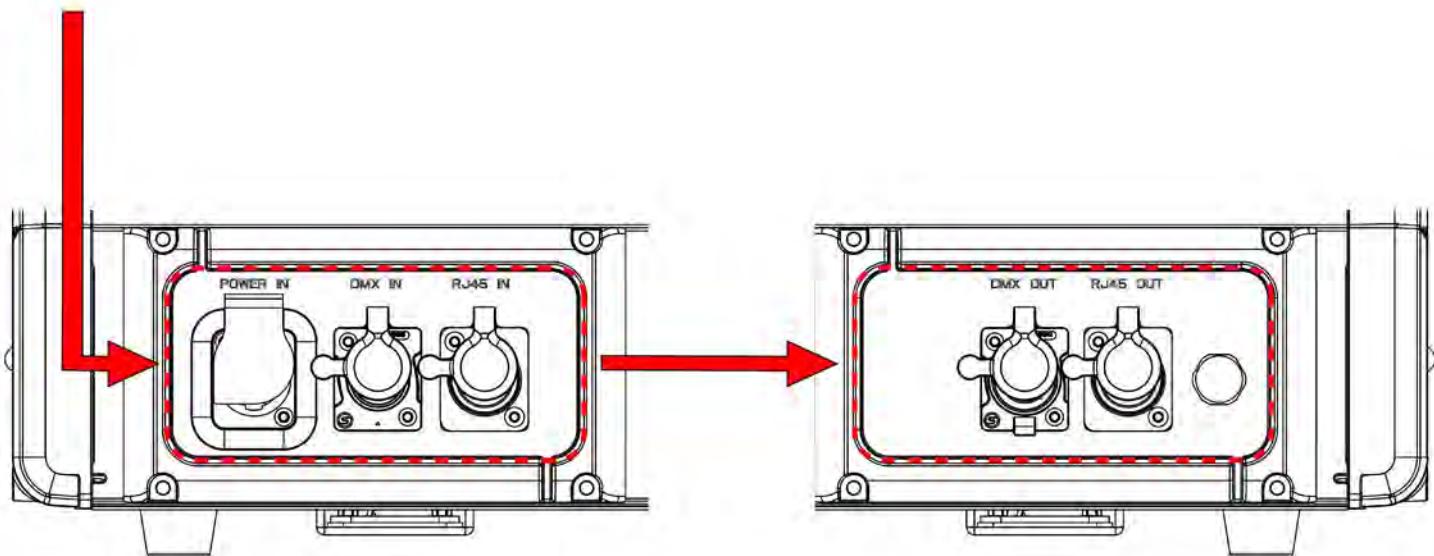

# INSTALLATION GUIDELINES


## POTENTIAL INTERNAL FIXTURE DAMAGE FROM EXTERNAL SOURCES OF LIGHT BEAMS

External sources of light beams from direct sunlight, lighting moving head fixtures, and lasers, which are focused directly towards the exterior housing and/or penetrate the front lens opening of ELATION lighting fixtures, can cause severe internal damage including burning to optics, dichroic color filters, glass and metal gobos, prisms, animation wheels, frost filters, iris, shutters, motors, belts, wiring, discharge lamps, and LEDs.

This issue is not specific only to ELATION lighting fixtures, it is a common issue with lighting fixtures from all manufacturers. Although there is no true way to fully prevent this issue from happening, the guidelines below can prevent any potential damage from occurring if followed. Contact ELATION Service for more details.

**DO NOT EXPOSE THE FIXTURE AND/OR FRONT LENS OPENING TO LIGHT BEAMS FROM DIRECT SUNLIGHT, OTHER LIGHTING MOVING HEAD FIXTURES, AND LASERS WHILE UNPACKING, INSTALLATION, USE, AND EXTENDED IDLE TIMES OUTDOORS. DO NOT FOCUS A LIGHT BEAM FROM ONE LIGHTING FIXTURE DIRECTLY TOWARDS ANOTHER.**

**Note:** See 'DMX Traits: Fixture' table on page 30 under 'Control' for channel values to engage or disengage these functions.

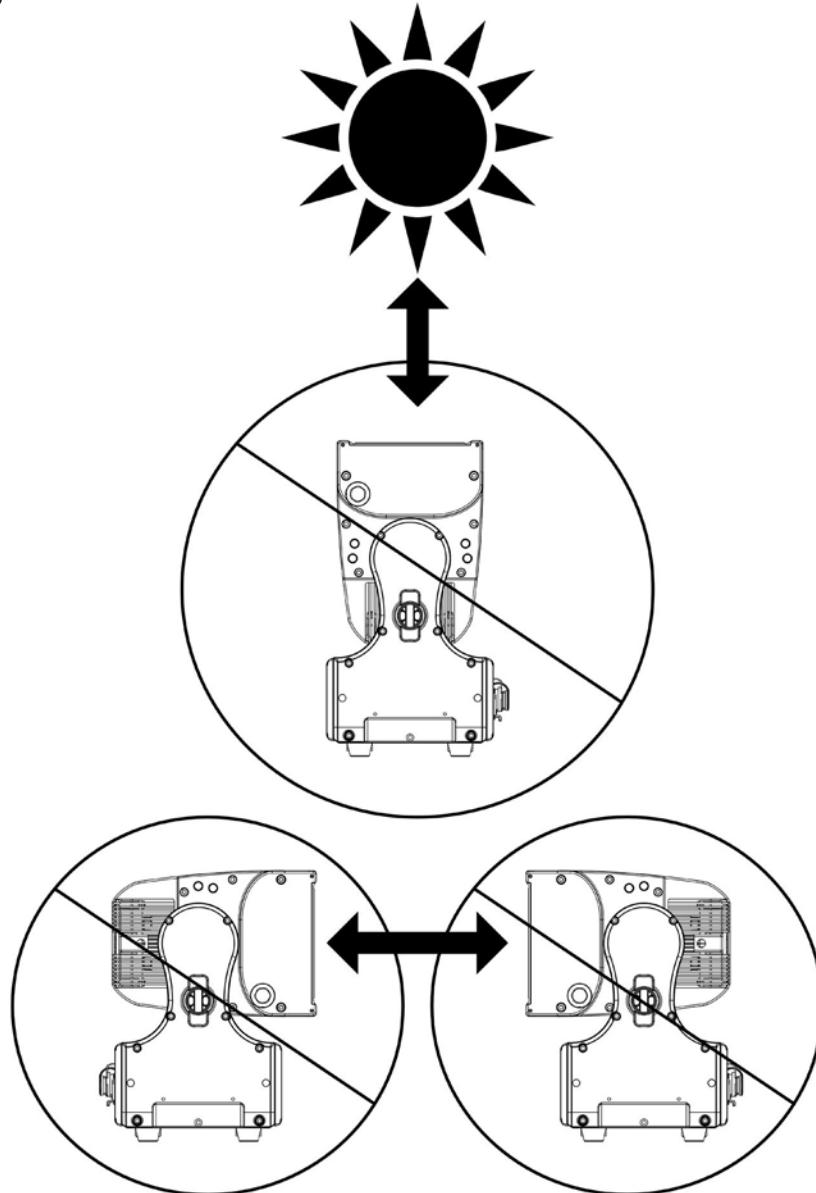

## SUN PROTECTION MODE

The fixture incorporates an automatic protection from harmful sunlight, which can damage a fixture's internal components from extended exposure. Fixtures use an internal sensor to determine their physical orientation, then reorient the fixture towards the ground to prevent sunlight from entering the lens.

This automatic feature only works when the fixture is powered. If the fixture is unpowered during setup, it is necessary to manually reorient the lenses away from the sun, and aim them towards the ground. Even a few minutes of sun exposure can cause damage inside the fixture.

The Sun Protection setting is accessed via the "No DMX Status" menu.

The automatic sun protection positioning is activated under the following conditions:

1. Power on without DMX signal: the fixture always starts in sun protection mode.
2. No DMX Status "Sun Protection": the fixture enters sun protection mode after approximately 3 minutes.
3. Remote DMX control: the sun protection position can be **temporarily** activated from the lighting console without the need to create a custom position preset. The fixture senses the correct ground orientation. This means that fixtures already facing the ground may not move their heads.

Hold "Sun Protect Position" for 3s to set the fixture to the sun protection position.

Sun protection status displays as "**Sun Protection: Active**".

The sun protection position deactivates under the following conditions:

1. Connect DMX signal.
2. Remote DMX control: Hold "Sun Protection Off" for 3s.

To avoid harsh or jarring movements, the sun protection position always uses a 5-second fade time when it is activated or deactivated.

## HIBERNATION MODE

To reduce wear on the fixture and its components, this mode disables motors and most electronics. Set the hibernation mode countdown time in the Display Menu: "Status Settings / Personality / Hibernation". Hibernation can be fully disabled.

The hibernation mode activates under the following conditions:

1. Loss of DMX: the fixture enters hibernation after the timeout expires. Default is 15 minutes.
2. Remote DMX control: Hold "Hibernate Fixture" for 3s

The hibernation mode deactivates under the following conditions:

1. Connect DMX Signal
2. Remote DMX control: Hold "Hibernate Off" for 3s

The fixture will perform a full calibration cycle, then assume the current DMX status.

Please note that the Hibernation does not change the PT position of the fixtures, allowing the user to set the desired position and then issue the Hibernate command.


To ensure the fixture is protected from harmful sunrays it is recommended to either leave the "No DMX Status" in "Sun Protection" (so the fixture is already in the correct position after 3 minutes of DMX loss) or set the fixture to a safe Tilt position manually first before hibernation.

**Burn and heat damage to the fixture's interior components due to external light sources (sun or other fixtures shining into the lens) is never covered under the manufacturers warranty.**

## SYSTEM MENU

The fixture includes an easy to navigate system menu. The control panel (see image below) located on the front of the fixture, provides access to the main system menu and is where all necessary system adjustments are made to the fixture. During normal operation, pressing **MODE/ESC** button once will access the fixture's main menu. Once in the main menu you can navigate through the different functions and access the sub-menus with the **UP**, **DOWN**, **RIGHT**, and **LEFT** buttons. Once you reach a field that requires adjusting, press the **ENTER** button to activate that field and use the **UP** and **DOWN** buttons to adjust the field. Pressing the **ENTER** button once more will confirm your setting. You may exit the main menu at any time without making any adjustments by pressing the **MODE/ESC** button.

**NOTE:** To access the LCD Menu Control Display via the internal battery, press and hold the **MODE/ESC** button for 10 seconds. The LCD Menu Control Display will shut **OFF** automatically about 1 minute from the last button press.

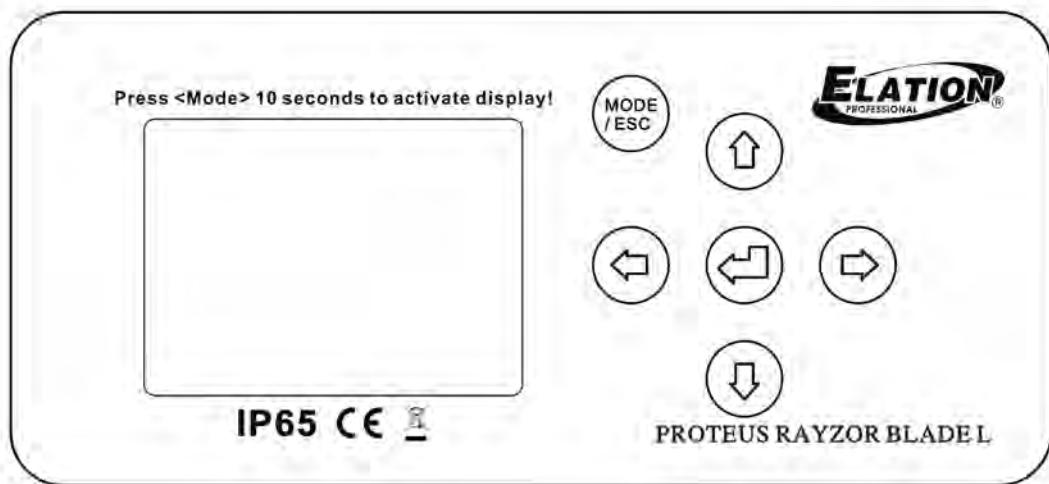

# SYSTEM MENU

ELATION PROTEUS RAYZOR BLADE L			
MAIN MENU	OPTIONS / VALUES (Default Settings in <b>BOLD</b> )		DESCRIPTION
Function	Set Dmx Address	A001~AXXX	
	Dmx Value	ALL.....	
	Secondary Mode	Secondary1, Secondary2, Secondary3	
	Auto Program	Primary / Alone	
Information	Time Information	Current Time	XXXX(Hours)
		Total Run Time	XXXX(Hours)
		Last Run Time	XXXX(Hours)
		LastRun Password	Password=XXX
		Clear Last Run	ON/OFF
	Temperature Info	LED Temperature	XXX°C/F
		Head Temperature	XXX°C/F
		Base Temperature	XXX°C/F
	Humidity Info	Head Humidity	XXX%
		Base Humidity	XXX%
Personality	Ethernet IP	Ethernet IP XXX. XXX. XXX. XXX XXX. XXX. XXX. XXX	
	Fan Info	HeadFan1: xxxx RPM .....	
	Software Version	Vx.x.x	
	Status Settings	Error Record 1	TILT....
		Error Record 2	TILT....
		... ...	... ...
		Error Record 10	TILT....
		Address Via DMX	ON/OFF
	Pixel Mapping	Sun Prot	The fixture moves to the sun protection position after 3 minutes
		Close	The fixture turns off the light output
		Hold	The current fixture state is held until power off or DMX is resumed
		Auto	The fixture recalls the internal auto program
		Tilt Reverse	ON/OFF
	Service Setting	Zoom Speed	Slow/Fast
		Align Center	
		Align Left	
		Align Left S	
		Align Right	
		Align Right S	
		Fill Mode	
		Feedback	ON/OFF
		Hibernation	OFF, 01M~99M, <b>15M</b>
		Service Setting	Standby Mode
Display Setting	Password	Password=XXX	
	Clear Err. Info	ON/OFF	
	Fans Control	<b>Auto</b> / High/ Silent / Studio / Mute	
	Display Setting	Shutoff Time	02~60m, Default = <b>05m</b>
		Display Reverse	OFF/ON/ <b>AUTO</b>
		Key Lock	ON/OFF

CONTINUED ON NEXT PAGE

# SYSTEM MENU

ELATION PROTEUS RAYZOR BLADE L			
MAIN MENU	OPTIONS / VALUES (Default Settings in <b>BOLD</b> )		DESCRIPTION
Personality	Temperature C/F	Celsius	Temp C/F
		<b>Fahrenheit</b>	
	Initial Status	TILT=XXX .....	Initial effect position
	Select Signal	<b>DMX Only</b>	Select Signal
		Art-Net	
		sACN	
	Klingnet	<b>ON/OFF</b>	Klingnet
	Ethernet IP	XXX. XXX. XXX. XXX	Ethernet IP
	Ether Mask IP	XXX. XXX. XXX. XXX	Ether Mask IP
	Set Universe	000~32767	Setting Art-Net Universe
	DHCP	<b>ON/OFF</b>	Automatically assign IP address
	Dimmer Mode	<b>Standard</b>	Dimmer Mode
		Stage	
		TV	
		Architectural	
		Theatre	
		Stage2	
		Delay 0s, 0.1s, 0.2s, ..., 10s	
Reset Function	Refresh	<b>1200</b> , 900-1500, 2500, 4000, 5000, 6000, 10000, 15000, 20000, 25000(Hz)	Refresh Frequency Rate Setting
	DimmerCurve	<b>Linear</b> , Square, Inverse Square, S-Curve	DimmerCurve Setting
	ResetDef	<b>ON</b>   PassCode=XXX	Restore factory settings
		Off	Password ( <b>011</b> )
Effect Adjust	Reset All		Reset Function
	Reset Tilt		
	Reset Others		
User Mode	Test Channel	TILT...	Test function
	Manual Control	TILT=XXX :	Manual Control function
	Calibration	Calibrate Password TILT=XXX :	Password ( <b>050</b> ) Calibrate and adjust the effects to standard/right position
User Mode	User Mode	<b>Standard</b> , Pixels, Pixel Plus, Extended	Standard channel mode RGBW main LED pattern Extended channel mode
Edit Program	Select Program	Auto Pro Part 1 = Program 1 ~ 10 <b>Program 1</b>	Select Programs To Be Run
		Auto Pro Part 2 = Program 1 ~ 10 <b>Program 1</b>	
		Auto Pro Part 3 = Program 1 ~ 10 <b>Program 1</b>	
	Edit Program	Prog 1 : Prog 10	Testing Program
			Program In Loop
			Save and Exit
	Edit Scenes	Edit Scene 001 to Edit Scene 250	Tilt, ..... - Fade Time- - Scene Time- Input By Out Save and Automatically Return Manual Scenes Edit
Rec. Controller			Automatic Scenes Recorder

# SYSTEM MENU

## FUNCTION-Auto Program

Define fixture mode (**Primary** or **Alone**) for running Auto Programs. Select desired internal programs under “**Select Program**”, set the number of steps under “**Edit program**”, and edit individual scenes under “**Edit Scenes**”.

## PERSONALITY-Status Settings-Address Via DMX

When ON, define the desired DMX address via an external controller.

**NOTE: This process assumes the fixture DMX address is set to 001. If fixture DMX address is not at 001, you must adjust the channel numbers accordingly in order for this feature to work.**

**For example: if your fixture address is 010, then Channel 1 becomes Channel 10, Channel 2 becomes Channel 11, and Channel 3 becomes Channel 12.**

1. Connect the fixture to the external controller and power ON.
2. Set the DMX value of **Channel 1** on the controller to **(7)**.
3. Set the DMX value of **Channel 2** on the controller to **(7)** or **(8)**. When set to **(7)**, the DMX address can be set between **(1)** and **(255)**. When set to **(8)**, the DMX address can be set between **(256)** and **(511)**.
4. Using **Channel 3** on the controller set the desired DMX address of the fixture.

### Example 1:

If the desired DMX address is **57**, set **Channel 1** to a value of **(7)**, set **Channel 2** to a value of **(7)**, and then set **Channel 3** to a value of **(57)**.

### Example 2:

If the desired DMX address is **420**, set **Channel 1** to a value of **(7)**, set **Channel 2** to a value of **(8)**, and then set **Channel 3** to a value of **(164)**.  $(256+164=420)$

5. After setting **Channel 3** to the desired DMX address value, wait approximately 20 seconds for the fixture to complete the address reset function.

## PERSONALITY-Service Settings-Password (050)

**NOTE:** The Service Password MUST be entered in order to access the following menus: Clear Err. Info .

## PERSONALITY-Display Setting-Key Lock

When ON, Control Panel buttons lock automatically after exiting main menu for 15 seconds. To unlock, keep **MODE/ESC** button pressed for 3 seconds.

## PERSONALITY-Dimmer Curve

# SYSTEM MENU



**ONLY QUALIFIED TECHNICIANS SHOULD PERFORM THIS FUNCTION!**

**NOTE: SAVED WHITE BALANCE IS ERASED AFTER A RESET IS PERFORMED!**

This function restores all fixture settings to the factory default settings. The password is 011 and must be entered each time a reset is performed.

## **EFFECT ADJUST-Test Channel**

Auto test each individual channel function independently from the DMX control board.

## **EFFECT ADJUST-Manual Control**

Select and manually test and fine adjust each individual channel function Independently from DMX control board. This function will center PAN and TILT motors and set dimmer to 100%. PAN and TILT functions will still operate if the fixture needs to be positioned to a flat clear surface. With the individual functions, you can focus the light on a flat surface (wall) and perform fine adjustments.



**EFFECT ADJUST-Calibration**

**ONLY QUALIFIED TECHNICIANS SHOULD PERFORM THIS FUNCTION.**

This function allows small adjustments to be made to the Pan, Tilt, and Zoom movements to compensate for ware or in the event a sensor has been knocked slightly out of place. Because improper use of this function can result in undesired operation this function has been password protected. The password is 050 and must be entered each time the calibration menu function is entered. Because calibration is an extremely delicate procedure, instructions on performing this action are left out of this manual. For a first-time calibrator, please contact our customer support team for step-by-step instructions.

## **USER MODE SET-Edit User Mode**

Create user defined channel orders allowing the fixture to match the channel order of other fixtures on the market for easier operation. A total of three user modes may be configured: User Mode A, User Mode B, and User Mode C.


## **EDIT PROGRAM-Rec. Controller**

The fixture features an integrated DMX-recorder by which you can transmit the programmed scenes from your DMX-controller to the moving head. Adjust the desired scene numbers via the encoder (from-to). When you call up the scenes at your controller, they will automatically be transmitted to the moving head.

# SYSTEM MENU

## EDIT PROGRAM-Record Controller-Working With Built-In Programs

A Primary unit can send up to 3 different data groups to the Secondary units, i.e. a Primary unit can start 3 different Secondary units, which run 3 different programs. The Primary unit sends the 3 program parts in a continuous loop.

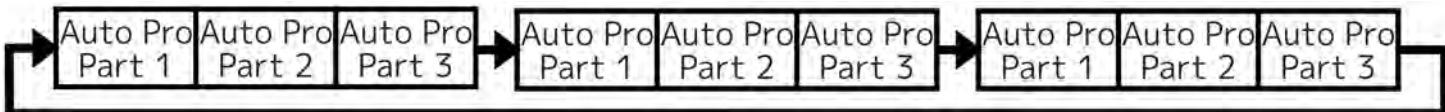

The Secondary unit receives data from the Primary unit according to the group which the Secondary unit was assigned to. If e.g. a Secondary unit is set to "**Secondary 1**" in the menu "**Set to Secondary**", the Primary unit sends "**Auto Program Part 1**" to the Secondary unit. If set to "**Secondary 2**", the Secondary unit receives "**Auto Program Part 2**".

To start an Auto Program proceed as follows:

### 1. Secondary Setting

- Select "**Function Mode**".
- Press **ENTER** to confirm.
- Select "**Set to Secondary**".
- Press **ENTER** to confirm.
- Select "**Secondary 1**", "**Secondary 2**" or "**Secondary 3**".
- Press **ENTER** to confirm.
- Press **MODE/ESC** in order to return to the main menu.

### 2. Automatic Program Run

- Select "**Function Mode**".
- Press **ENTER** to confirm.
- Select "**Auto Program**".
- Press **ENTER** to confirm.
- Select "**Primary**" or "**Alone**".
- Press **ENTER** to confirm.
- Press **MODE/ESC** in order to return to the main menu.

### 3. Program Selection for Auto Pro Part

- Select "**Edit Program**".
- Press **ENTER** to confirm.
- Select "**Select Programs**".
- Press **ENTER** to confirm.
- Select "**Auto Pro Part 1**", "**Auto Pro Part 2**" or "**Auto Pro Part 3**", and select which Secondary program is to be sent. Selection "**Part 1**" means, that the Secondary unit runs the same program as the Primary units.
- Press **ENTER** to confirm.
- Press **MODE/ESC** in order to return to the main menu.

### 4. Program Selection for Edit Program

- Select "**Edit Program**".
- Press **ENTER** to confirm.
- Select "**Edit Program**".
- Press **ENTER** to confirm.
- Select the desired program to edit specific scenes into a specific program.
- Press **ENTER** to confirm.
- Press **MODE/ESC** in order to return to the main menu.

### 5. Automatic Scene Recording

- Select "**Edit Program**".
- Press **ENTER** to confirm.
- Select "**Edit Scenes**".
- Press **ENTER** to confirm.
- Select desired scene numbers. A maximum of 250 scenes can be programmed.
- Press **ENTER** to confirm.
- Press **MODE/ESC** in order to return to the main menu.

# SYSTEM MENU

## EDIT PROGRAM-Record Controller-Working With Built-In Program [continued]

Example:

Program 2 includes scenes: 10, 11, 12, & 13

Program 4 includes scenes: 8, 9, & 10

Program 6 includes scenes: 12, 13, 14, & 15


Auto Pro Part 1 is Program 2

Auto Pro Part 2 is Program 3


Auto Pro Part 3 is Program 6

The 3 Secondary groups run the Auto Program in certain time segments.


Part 1

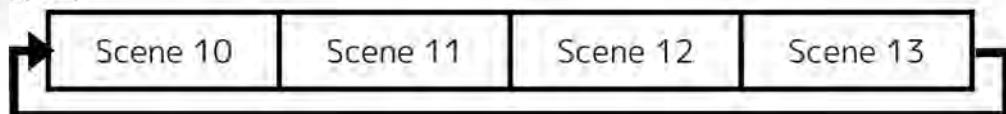


Part 2

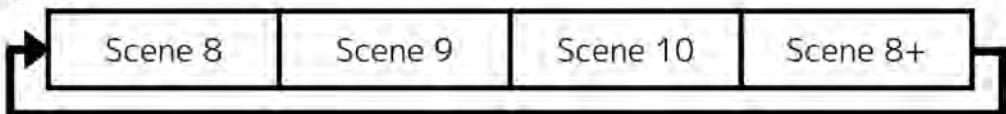





Part 3

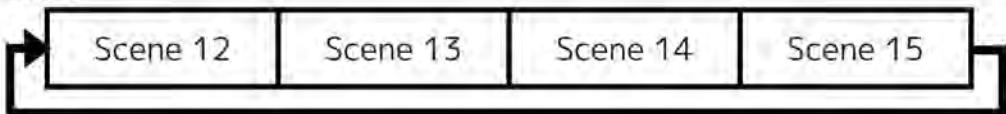

# DIMMER CURVE GRAPHS

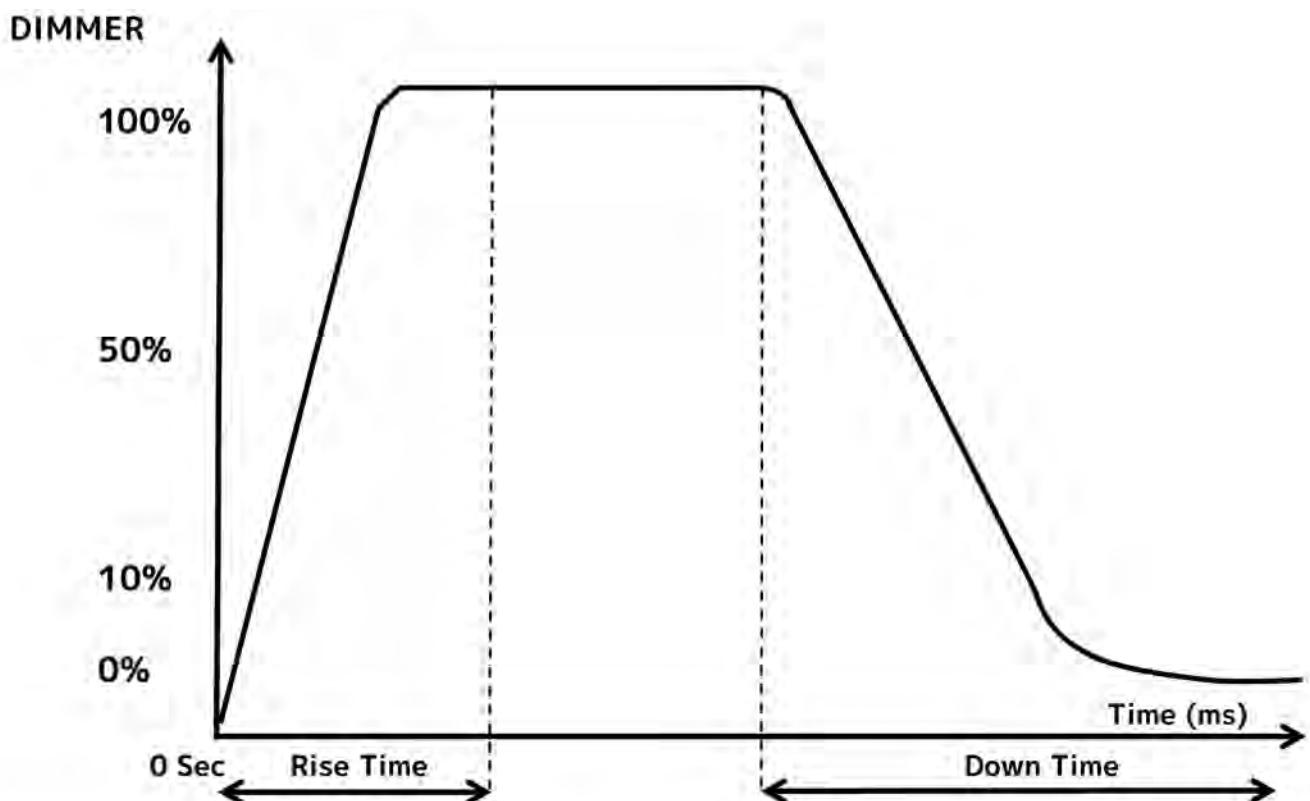

Dimming Curve	0 sec Fade Time		1 sec Fade Time	
	255	255	255	255
	0	0	0	0
Ramp Effect	Rise Time (ms)	Down Time (ms)	Rise Time (ms)	Down Time (ms)
Standard (default)	0	0	0	0
Stage	780	1100	1540	1660
TV	1180	1520	1860	1940
Architectural-	1380	1730	2040	2120
Theatre	1580	1940	2230	2280
Stage 2	0	1100	0	1660

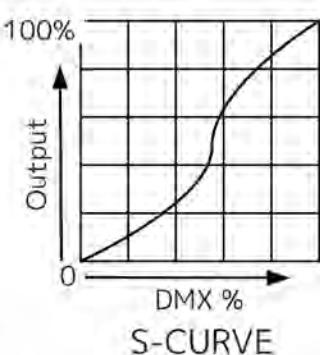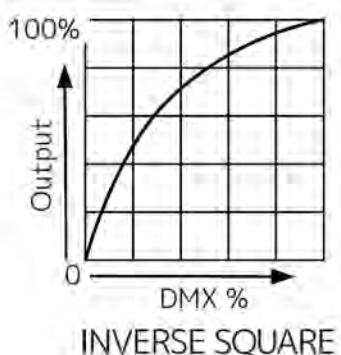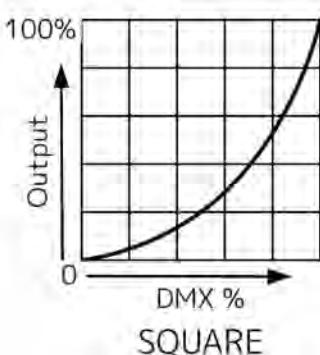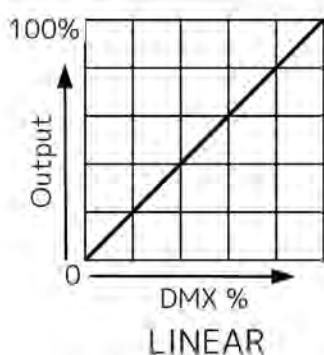

# PATCHING AND FX PROGRAMMING GUIDE

The Proteus Rayzor Blade L is a versatile fixture that combines three unique fixtures into one chassis. The DMX layout is designed to offer a variety of options for controlling the fixture efficiently, allowing control of many FX with very few channels, or providing full access of all elements for external pixel mappers.

The FX system of the Proteus Rayzor Blades allows many different combinations by changing the curves, offsets, and speed parameters. The RGBW, SparkLED, and StrobeLine systems are separate, and by adjusting color, dimming, and strobe channels, there are endless creative designs possible.

The main fixture contains 12x 60W RGBW cells, while the SparkLED fixture contains 4x2W white LEDs per LED. Two dazzling StrobeLines are added to the edge of the fixture, with 33 elements per side.

For ease of use, the DMX layout is arranged to allow the lighting console to separate the fixture into multiple segments, or parts. It is important to arrange the fixture into the required parts as outlined in the DMX table. For simpler programming, the Blade also offers reduced channel modes. However, for easy recall of interesting pixel animations, the fixture contains three independent FX systems for Main, SparkLED, and StrobeLine FX.

## Fixture Parts

To control the fixture, a console fixture profile must combine parameters into the correct parts, otherwise, programming of the three layers is very difficult. Please use the part names shown in the DMX table.

<b>Main</b>	RGBW Dimmer, Strobe, Pan, Tilt, Main FX Controls, FX Sync
<b>Pixels</b>	Red, Green, Blue, White per cell
<b>StrobeLine</b>	StrobeLine Dimmer, Strobe, Duration, StrobeLine FX Controls
<b>Strobe</b>	StrobeLine Dimmer per pixel
<b>SparkLED</b>	SparkLED Dimmer, Strobe, SparkLED FX Controls
<b>LED</b>	Sparkled Dimmer per pixel

The number of parts depends on the selected DMX mode of the fixture. Depending on console type and application, it may be useful to have all parts as sub fixtures, or create completely separate fixture types for Main, StrobeLine, and SparkLED with their own smaller subset of fixture parts.

## Strobe and Dimmer Sync

For effective programming, it may be helpful to have dimming and strobing of all parts in perfect sync. This can be accomplished by setting the strobe channel of the SparkLEDs or StrobeLines to DMX value 255. It forces dimming and strobing to follow the parameters of the main fixture.

255

**Sync Dim and Strobe with Main**

The highest output strobe of the Proteus Rayzor Blade S is achieved by synchronizing the StrobeLine and RGBW cells. It provides a rare combination of a focused beam, or wide wash with the dazzling white strobing edges of the fixture.

# PATCHING AND FX PROGRAMMING GUIDE


## FX Concept

Selection and control of integrated FX on the Rayzor Blade are found in the Main, SparkLED and StrobeLine Parts. All FX are available even in the smallest DMX control mode.

<b>RGBW FX (see table)</b>	
0-255	FX Selection 1-255
	RGBW FX Speed
0-126	Rev Fast → Slow
127-128	Stop
129-255	Slow → Fast
<b>SparkLED FX (see table)</b>	
0-255	FX Selection 1-255
<b>SparkLED FX Speed</b>	
0-126	Rev Fast → Slow
127-128	Stop
129-255	Slow → Fast

FX for RGBW, SparkLED and StrobeLine contain a selection channel to recall the desired pattern. The pattern direction and speed is then adjusted using the associated Speed channel. FX can run forward / backward and can also be frozen at any time by using "Stop".

The FX table shows the available patterns which are grouped for easier browsing. The first 10 DMX steps of the FX channel are used to change the type of curve for smooth or stepped FX. Once a curve is selected its used for all FX recalled afterwards. When programming cues for fixtures the user must ensure to change the curve first before selecting the pattern. The fixture defaults to the Sinewave pattern after every power cycle.

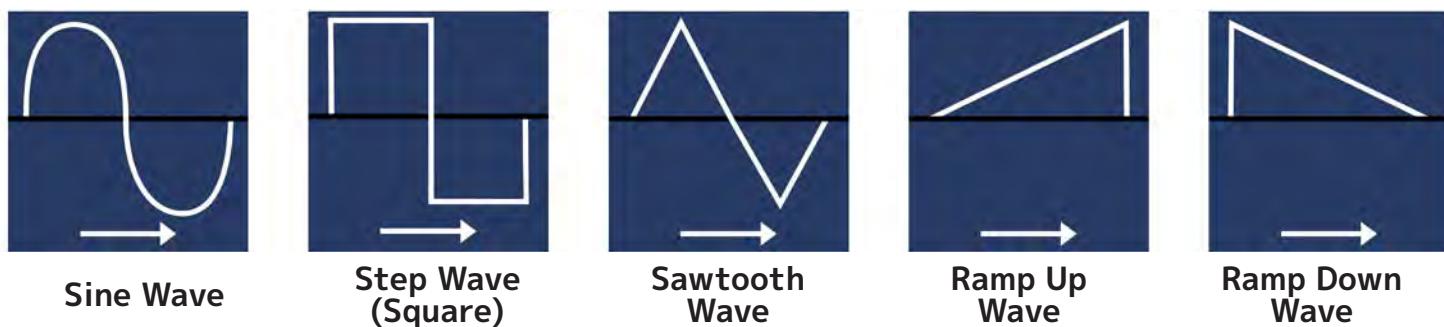

In addition to the fx direction and speed a Sync channel allows to offset or randomize the fixtures or FX steps.

<b>FX Offset</b>	
0	Idle
1	Fixture Offset 10 Degree
2	Fixture Offset 20 Degree
3-34	Fixture Offset...
35	Fixture Offset 350 Degree
36	Synchronized
3-100	No Function
101-120	Random Fixture Offset
121-140	Random Pixel Order
141-255	Random Steps

# PATCHING AND FX PROGRAMMING GUIDE

A full FX cycle is 360-degrees and the fixture allows offsets in 10 degree increments. Offsetting a fixture by 180 would mean it is exactly halfway ahead through the FX cycle. Through individual offsets or utilizing lighting consoles fan functions the fixture allows a variety of spreads for impactful FX.

Three randomization options are provided:

**Random Fixture Offset:** Every fixture randomly selects any of the 36 offset points. It will then use this until the offset is changed or random offset is selected again.

**Random Pixel Order:** The actual FX steps are randomized. This shuffling of the fixture order is done once, the fixture will use this shuffled order across all FX until changed.

**Random Steps:** Every step is randomly chosen every time, giving the most random looks possible. To reshuffle the randomization set the channel to Idle, then reselect the desired random option.

## Blade L Strobe Mapping

The fixture offers several ways to map the StrobeLines depending on alignment with Blade S or to change the desired FX mapping across the strobe edge. For perfect match of distances, the L fixture contains 33 cells. The alignment can be selected in the StrobeLine FX channel.

DMX	Pixel Alignment	
250	Full	All elements are used, FX have the same speed from pixel to pixel
251	Full Sync	All elements are used, FX have the same speed across the S and L width
252	Split	The Center Element is disabled, all FX act identical as Blade S in two sections
253	Left	Elements start at the left edge, with a gap at the right
254	Right	Elements start at the right edge, with a gap at the left

The FX system of the Proteus Rayzor Blades allows many different combinations by changing the curves, offsets, and speed parameters. The RGBW, SparkLED, and StrobeLine systems are separate, and by adjusting color, dimming, and strobe channels, there are endless creative designs possible.

# DMX TRAITS: MAIN FIXTURE

Features subject to change without notice

MODE/CHANNEL					VALUE	FUNCTION	FADE STATUS	DEFAULT		
Fixture Control Part/Name	Standard 28CH	Pixel 76CH	Pixel Plus CH140	Extended 188CH						
MAIN	1	1	1	1	Tilt		Fade	127		
					0-255	Movement				
	2	2	2	2	Tilt Fine		Face	127		
					0-255	Fine Movement				
	3	3	3	3	CTC		Snap	0		
					0-10	Disabled				
					11-171	Color Temperature 2000k to 10000k in 100k steps (see table)				
					172-255	10000K				
					Color Wheel					
					0-9	Open				
					10-14	Red				
					15-19	Red Orange				
					20-24	Light Amber				
					25-29	Yellow Amber				
					30-34	Greenish Yellow				
					35-39	Light Yellow Green				
					40-44	Dark Yellow Green				
					45-49	Green				
					50-54	Teal				
					55-59	Cyan				
					60-64	Light Blue				
					65-69	Aqua				
					70-74	Dark Aqua				
					75-79	Green Blue				
					80-84	Light Lavender				
					85-89	Dark Purple				
					90-94	Medium Purple				
					95-99	Mid Rose				
					100-104	Mauve				
					105-109	Nice Magenta				
					110-114	Warm Magenta				
					115-119	Light Red				
					120-124	Straw				
					125-129	Dark CTB				
					130-134	Light Green				
					135-139	Purple				
					140-144	Lighter Purple				
					145-149	Pink				
					150-154	Rose				
					155-159	White				
					160-164	TBD				
					165-169	TBD				
					170-174	TBD				
					175-179	Open				
					Color Scroll					
					180-201	Clockwise, fast → slow				
					202-207	Stop				
					208-229	Counter-clockwise, slow → fast				
					230-234	Open				
					Random Slots					
					235-239	Fast				
					240-244	Medium				
					245-249	Slow				
					250-255	Open				

# DMX TRAITS: MAIN FIXTURE

Features subject to change without notice

MODE/CHANNEL					VALUE	FUNCTION	FADE STATUS	DEFAULT		
Fixture Control Part/Name	Standard 28Ch	Pixel 76Ch	Pixel Plus CH140	Extended 188Ch						
MAIN	5	5	5	5	Strobe	Shutter closed	Snap	50		
						32-63 Shutter open				
						64-95 Strobe (slow → fast)				
						96-127 Fast Close, Slow Open				
						128-159 Fast Open, Slow Close				
						160-191 Pulse Effects				
						192-223 Random Strobe (slow → fast)				
						224-255 Shutter open				
					Dimmer	0 → 100%	Fade	0		
	6	6	6	6						
				Dimmer Fine	Fine Dimming					
	8	8	8	8	Dim Modes	Standard	Snap	0		
						21-40 Stage				
						41-60 TV				
						61-80 Architectural				
						81-100 Theatre				
						101-120 Stage 2				
					Dimmer Delay Time	0s				
						121 0s				
						122 0.1s				
						123 0.2s				
						124 0.3s				
						125 0.4s				
						126 0.5s				
						127 0.6s				
						128 0.7s				
						129 0.8s				
						130 0.9s				
						131 1.0s				
						132 1.5s				
						133 2.0s				
						134 3.0s				
						135 4.0s				
						136 5.0s				
						137 6.0s				
						138 7.0s				
						139 8.0s				
						140 9.0s				
						141 10s				
						142-255 Idle				
	9	9	9	9	Zoom1	Zoom Wide → Narrow	Fade	0		
						231-255 Overdrive Min → Max				
						Zoom1 Fine				
	10	10	10	10		0-255 Fine Zoom				
				Zoom2	Zoom Wide → Narrow	Fade	0			
					231-254 Overdrive Min → Max					
					255 Follow Zoom 1					
	12	12	12	12	Zoom2 Fine	Fine Zoom	Fade	0		
						0-255 Max to Min speed				
	13	13	13	13	Tilt Speed	Blackout while moving	Snap	0		
						226-235 No function				
						236-255				

# DMX TRAITS: MAIN FIXTURE

Features subject to change without notice

MODE/CHANNEL					VALUE	FUNCTION	FADE STATUS	DEFAULT
Fixture Control Part/Nam	Standard 28Ch	Pixel 76Ch	Pixel Plus CH140	Extended 188Ch				
MAIN	10	14	14	14	0-9	Control	Snap	0
					0-9	Idle		
					10-19	Pixel Order Normal		
					20-39	Pixel Order Inverse		
					40-44	Low Noise - Mute		
					45-49	Low Noise - Studio		
					50-59	Fan Control - Low		
					60-69	Fan Control - High		
					70-79	Fan Control - Auto (default)		
					80-84	Reset All		
					85-87	Reset Movement		
					88-91	Reset Zoom		
					92-100	Idle		
					100-168	Refresh Rate (Hz)		
					100	900		
					101	910		
					102	920		
					103	930		
					104	940		
					105	950		
					106	960		
					107	970		
					108	980		
					109	990		
					110	1000		
					111	1010		
					112	1020		
					113	1030		
					114	1040		
					115	1050		
					116	1060		
					117	1070		
					118	1080		
					119	1090		
					120	1100		
					121	1110		
					122	1120		
					123	1130		
					124	1140		
					125	1150		
					126	1160		
					127	1170		
					128	1180		
					129	1190		
					130	1200		
					131	1210		
					132	1220		
					133	1230		
					134	1240		
					135	1250		

# DMX TRAITS: MAIN FIXTURE

Features subject to change without notice

MODE/CHANNEL					VALUE	FUNCTION	FADE STATUS	DEFAULT
Fixture Control Part/Name	Standard 28Ch	Pixel 76Ch	Pixel Plus CH140	Extended 188Ch				
MAIN	10	14	14	14	136	Control	Snap	0
					137	1260		
					138	1270		
					139	1280		
					140	1290		
					141	1300		
					142	1310		
					143	1320		
					144	1330		
					145	1340		
					146	1350		
					147	1360		
					148	1370		
					149	1380		
					150	1390		
					151	1400		
					152	1410		
					153	1420		
					154	1430		
					155	1440		
					156	1450		
					157	1460		
					158	1470		
					159	1480		
					160	1490		
					161	1500		
					162	2500		
					163	4000		
					164	5000		
					165	6000		
					166	10000		
					167	15000		
					168	20000		
					169-180	25000		
					181-182	Idle		
					183-184	StrobeLine Pixel Align Center		
					185-186	StrobeLine Pixel Align Left (default)		
					187-188	StrobeLine Pixel Align Left S-Mode		
					189-190	StrobeLine Pixel Align Right		
					191-192	StrobeLine Pixel Align Right S-Mode		
					193-194	StrobeLine Fill Mode		
					195-196	Hibernate Off		
					197-198	Hibernate On		
					199-200	Sun Protection On		
					201-210	Sun Protection Off		
					211-220	Dimmer Curve Linear (default)		
					221-230	Dimmer Curve Square		
					231-240	Dimmer Curve Inverse Square		
					241-249	Dimmer Curve S-Curve		
					250-251	Idle		
					252-253	Display off		
					254-255	Display on		
						Idle		

# DMX TRAITS: MAIN FIXTURE

Features subject to change without notice

MODE/CHANNEL					VALUE	FUNCTION	FADE STATUS	DEFAULT
Fixture Control Part/Nam	Standard 28Ch	Pixel 76Ch	Pixel Plus CH140	Extended 188Ch				
MAIN	11	15	15	15		RGBW FX (see table)	Snap	0
					0-255	FX Selection 1-255		
	12	16	16	16		RGBW FX Speed	Fade	160
					0-126	Rev Fast → Slow		
					127-128	Stop		
	13	17	17	17	129-255	Slow → Fast	Snap	0
						FX Offset		
					0	Idle		
					1	Fixture Offset 10 Degree		
					2	Fixture Offset 20 Degree		
					3-34	Fixture Offset...		
					35	Fixture Offset 350 Degree		
					36	Synchronized		
					37-100	No Function		
					101-120	Random Fixture Offset		
					121-140	Random Pixel Order		
					141-255	Random Steps		

# DMX TRAITS: RGBW PIXELS

Features subject to change without notice

FIXTURE CONTROL PART/NAM	MODE/CHANNEL				VALUE	FUNCTION	FADE STATUS	DEFAULT
	STANDARD 28CH	PIXEL 76CH	PIXEL PLUS CH140	EXTENDED 188CH				
MAIN or Pixel 1	14	18	18	18	Red		Fade	255
					0-255	0 → 100%		
	15	19	19	19	Green		Fade	255
					0-255	0 → 100%		
	16	20	20	20	Blue		Fade	255
Pixel 2					0-255	0 → 100%		
	17	21	21	21	White		Fade	255
					0-255	0 → 100%		
		22	22	22	Red 2		Fade	255
					0-255	0 → 100%		
Pixel 3		23	23	23	Green 2		Fade	255
					0-255	0 → 100%		
		24	24	24	Blue 2		Fade	255
					0-255	0 → 100%		
		25	25	25	White 2		Fade	255
Pixel 4					0-255	0 → 100%		
		26	26	26	Red 3		Fade	255
					0-255	0 → 100%		
		27	27	27	Green 3		Fade	255
					0-255	0 → 100%		
Pixel 5		28	28	28	Blue 3		Fade	255
					0-255	0 → 100%		
		29	29	29	White 3		Fade	255
					0-255	0 → 100%		
		30	30	30	Red 4		Fade	255
Pixel 6					0-255	0 → 100%		
		31	31	31	Green 4		Fade	255
					0-255	0 → 100%		
		32	32	32	Blue 4		Fade	255
					0-255	0 → 100%		
Pixel 5		33	33	33	White 4		Fade	255
					0-255	0 → 100%		
		34	34	34	Red 5		Fade	255
					0-255	0 → 100%		
		35	35	35	Green 5		Fade	255
Pixel 6					0-255	0 → 100%		
		36	36	36	Blue 5		Fade	255
					0-255	0 → 100%		
		37	37	37	White 5		Fade	255
					0-255	0 → 100%		
Pixel 6		38	38	38	Red 6		Fade	255
					0-255	0 → 100%		
		39	39	39	Green 6		Fade	255
					0-255	0 → 100%		
		40	40	40	Blue 6		Fade	255
Pixel 6					0-255	0 → 100%		
		41	41	41	White 6		Fade	255
					0-255	0 → 100%		

# DMX TRAITS: RGBW PIXELS

Features subject to change without notice

MODE/CHANNEL					VALUE	FUNCTION	FADE STATUS	DEFAULT
Fixture Control Part/Name	Standard 28CH	Pixel 76CH	Pixel Plus CH140	Extended 188CH				
Pixel 7		42	42	42	Red 7		Fade	255
		0-255	0 → 100%					
		43	43	43	Green 7		Fade	255
		0-255	0 → 100%					
		44	44	44	Blue 7		Fade	255
		0-255	0 → 100%					
		45	45	45	White 7		Fade	255
		0-255	0 → 100%					
Pixel 8		46	46	46	Red 8		Fade	255
		0-255	0 → 100%					
		47	47	47	Green 8		Fade	255
		0-255	0 → 100%					
		48	48	48	Blue 8		Fade	255
		0-255	0 → 100%					
		49	49	49	White 8		Fade	255
		0-255	0 → 100%					
Pixel 9		50	50	50	Red 9		Fade	255
		0-255	0 → 100%					
		51	51	51	Green 9		Fade	255
		0-255	0 → 100%					
		52	52	52	Blue 9		Fade	255
		0-255	0 → 100%					
		53	53	53	White 9		Fade	255
		0-255	0 → 100%					
Pixel 10		54	54	54	Red 10		Fade	255
		0-255	0 → 100%					
		55	55	55	Green 10		Fade	255
		0-255	0 → 100%					
		56	56	56	Blue 10		Fade	255
		0-255	0 → 100%					
		57	57	57	White 10		Fade	255
		0-255	0 → 100%					
Pixel 11		58	58	58	Red 11		Fade	255
		0-255	0 → 100%					
		59	59	59	Green 11		Fade	255
		0-255	0 → 100%					
		60	60	60	Blue 11		Fade	255
		0-255	0 → 100%					
		61	61	61	White 11		Fade	255
		0-255	0 → 100%					
Pixel 12		62	62	62	Red 12		Fade	255
		0-255	0 → 100%					
		63	63	63	Green 12		Fade	255
		0-255	0 → 100%					
		64	64	64	Blue 12		Fade	255
		0-255	0 → 100%					
		65	65	65	White 12		Fade	255
		0-255	0 → 100%					

# DMX TRAITS: STROBELINE

Features subject to change without notice

Mode/Channel					Value	Function	Fade Status	Default
Fixture Control Part/Name	Standard 28Ch	Pixel 76Ch	Pixel Plus CH140	Extended 188Ch				
StrobeLine	18	66	66	66	Strobe		Snap	50
					0-31	Shutter closed		
					32-63	Shutter open		
					64-95	Strobe (slow → fast) 0.289 - 16.67 Hz		
					96-127	Fast Close, Slow Open		
					128-159	Fast Open, Slow Close		
					160-191	Pulse Effects		
					192-222	Random Strobe ALL (slow → fast)		
					224-254	Random Strobe Pixels (slow → fast)		
					255	Sync Dim and Strobe with Main		
	19	67	67	67	Dimmer		Fade	0
					0-255	0 → 100%		
	20	68	68	68	Dimmer Fine		Fade	0
					0-255	Fine Dimming		
	21	69	69	69	Duration		Fade	0
					0-255	7-650ms		
	22	70	70	70	StrobeLine FX (see table)		Snap	0
					0-249	FX Selection 1-249		
					Pixel Alignment			
					250	Full		
					251	Full Sync		
					252	Split		
					253	Left		
					254	Right		
					255	Idle		
					StrobeLine FX Speed			
	23	71	71	71	0-126	Rev Fast → Slow		160
					127-128	Stop		
					129-255	Slow → Fast		
Strobe 1			72	72	Dimmer 1		Fade	255
Strobe 2			73	73	Dimmer 2		Fade	255
Strobe 3			74	74	Dimmer 3		Fade	255
Strobe 4			75	75	Dimmer 4		Fade	255
Strobe 5			76	76	Dimmer 5		Fade	255
Strobe 6			77	77	Dimmer 6		Fade	255
Strobe 7			78	78	Dimmer 7		Fade	255
Strobe 8			79	79	Dimmer 8		Fade	255
Strobe 9			80	80	Dimmer 9		Fade	255
Strobe 10			81	81	Dimmer 10		Fade	255
Strobe 11			82	82	Dimmer 11		Fade	255
Strobe 12			83	83	Dimmer 12		Fade	255
Strobe 13			84	84	Dimmer 13		Fade	255
Strobe 14			85	85	Dimmer 14		Fade	255
Strobe 15			86	86	Dimmer 15		Fade	255
Strobe 64			135	135	...		Fade	255
					Dimmer 64			
					0-255	0 → 100%		

# DMX TRAITS: SPARKLED


Features subject to change without notice

Fixture Control Part/Nam	Mode/Channel				Value	Function	Fade Status	Default
	Standard 28Ch	Pixel 76Ch	Pixel Plus CH140	Extended 188Ch				
SparkLED	24	72	136	136	Strobe		Snap	50
					0-31	Shutter closed		
					32-63	Shutter open		
					64-95	Strobe (slow → fast) 0.289-16.67 Hz		
					96-127	Fast Close, Slow Open		
					128-159	Fast Open, Slow Close		
					160-191	Pulse Effects		
					192-223	Random Strobe ALL (slow → fast)		
					224-254	Random Strobe Pixels (slow → fast)		
					255	Idle		
	25	73	137	137	Dimmer		Fade	0
					0-255	0 → 100%		
					Dimmer Fine			
					0-255	Fine Dimming		
	27	75	139	139	SparkLED FX (see table)		Snap	0
					0-255	FX Selection 1-255		
					SparkLED FX Speed			
					0-126	Rev Fast → Slow		
	28	76	140	140	127-128	Stop	Fade	160
					129-255	Slow → Fast		
					Dimmer 1			
					0-255	0 → 100%		
LED 1				141	Dimmer 2		Fade	255
LED 2				142	0-255	0 → 100%		
LED 3				143	Dimmer 3		Fade	255
LED 4				144	0-255	0 → 100%		
LED 5				145	Dimmer 4		Fade	255
LED 6				146	0-255	0 → 100%		
LED 7				147	Dimmer 5		Fade	255
LED 8				148	0-255	0 → 100%		
LED 9				149	Dimmer 6		Fade	255
LED 10				150	0-255	0 → 100%		
LED 11				151	Dimmer 7		Fade	255
LED 12				152	0-255	0 → 100%		
LED 13				153	Dimmer 8		Fade	255
LED 14				154	0-255	0 → 100%		
LED 15				155	Dimmer 9		Fade	255
					Dimmer 10			
					0-255	0 → 100%	Fade	255
					Dimmer 11			
					0-255	0 → 100%	Fade	255
					Dimmer 12			
					0-255	0 → 100%	Fade	255
					Dimmer 13			
					0-255	0 → 100%	Fade	255
					Dimmer 14			
					0-255	0 → 100%	Fade	255
					Dimmer 15			
					0-255	0 → 100%	Fade	255
					...			
LED 48				188	Dimmer 48		Fade	255
					0-255	0 → 100%		

## DMX TRAITS: COLOR TEMPERATURE

Color Temperature	DMX	Color Temperature	DMX	Color Temperature	DMX
2000	11	4700	65	7400	119
2050	12	4750	66	7450	120
2100	13	4800	67	7500	121
2150	14	4850	68	7550	122
2200	15	4900	69	7600	123
2250	16	4950	70	7650	124
2300	17	5000	71	7700	125
2350	18	5050	72	7750	126
2400	19	5100	73	7800	127
2450	20	5150	74	7850	128
2500	21	5200	75	7900	129
2550	22	5250	76	7950	130
2600	23	5300	77	8000	131
2650	24	5350	78	8050	132
2700	25	5400	79	8100	133
2750	26	5450	80	8150	134
2800	27	5500	81	8200	135
2850	28	5550	82	8250	136
2900	29	5600	83	8300	137
2950	30	5650	84	8350	138
3000	31	5700	85	8400	139
3050	32	5750	86	8450	140
3100	33	5800	87	8500	141
3150	34	5850	88	8550	142
3200	35	5900	89	8600	143
3250	36	5950	90	8650	144
3300	37	6000	91	8700	145
3350	38	6050	92	8750	146
3400	39	6100	93	8800	147
3450	40	6150	94	8850	148
3500	41	6200	95	8900	149
3550	42	6250	96	8950	150
3600	43	6300	97	9000	151
3650	44	6350	98	9050	152
3700	45	6400	99	9100	153
3750	46	6450	100	9150	154
3800	47	6500	101	9200	155
3850	48	6550	102	9250	156
3900	49	6600	103	9300	157
3950	50	6650	104	9350	158
4000	51	6700	105	9400	159
4050	52	6750	106	9450	160
4100	53	6800	107	9500	161
4150	54	6850	108	9550	162
4200	55	6900	109	9600	163
4250	56	6950	110	9650	164
4300	57	7000	111	9700	165
4350	58	7050	112	9750	166
4400	59	7100	113	9800	167
4450	60	7150	114	9850	168
4500	61	7200	115	9900	169
4550	62	7250	116	9950	170
4600	63	7300	117	10000	171
4650	64	7350	118		

# PIXEL LAYOUTS

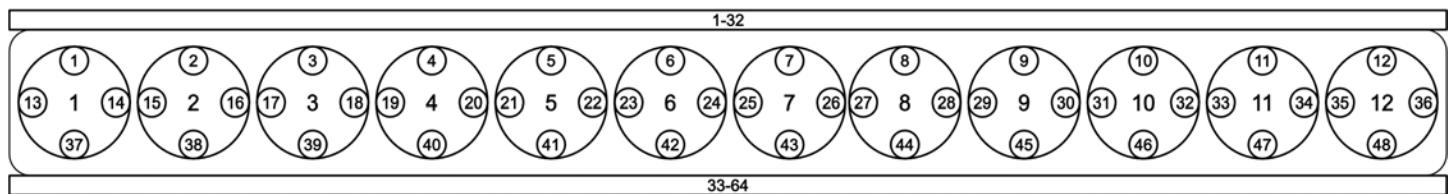


**SparkLEDs**  
 Row 1: 1-12  
 Row 2: 13-36  
 Row 3: 37-48

**StrobeLine**  
 Row 1: 1-32  
 Row 2: 33-64


SparkLEDs																				
Column	#	LEDs	#	LEDs	#	LEDs	#	LEDs	#	LEDs	#	LEDs								
1	1	4	15	7	17	10	19	13	21	16	23	19	25	22	27	25	29	28	31	31
2	1+37	5	2+38	8	3+39	11	4+40	14	5+41	17	6+42	20	7+43	23	8+44	26	9+45	29	10+46	32
3	14	6	16	9	18	12	20	15	22	18	24	21	26	24	28	27	30	30	33	36
Lenses	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	
	1+ 13+14+ 37	2+ 15+16+ 38	3+ 17+18+ 39	4+ 19+20+ 40	5+ 21+22+ 41	6+ 23+24+ 42	7+ 25+26+ 43	8+ 27+28+ 44	9+ 29+30+ 45	10+ 31+32+ 46	11+ 33+34+ 47	12+ 35+36+ 48								

Strobelines																
#	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
LEDs	1+33	2+34	3+35	4+36	5+37	6+38	7+39	8+40	9+41	10+42	11+43	12+44	13+45	14+46	15+47	16+48
Pixel Order Normal	→															
Pixel Order Inverse	←															
#	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
LEDs	17+49	18+50	19+51	20+52	21+53	22+54	23+55	24+56	25+57	26+58	27+59	28+60	29+61	30+62	31+63	32+64
Pixel Order Normal	→															
Pixel Order Inverse	←															


# RGBW PIXEL FX TABLE

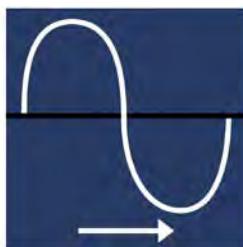


Sine Wave

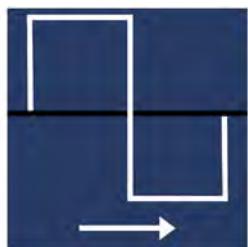


Step Wave (Square)

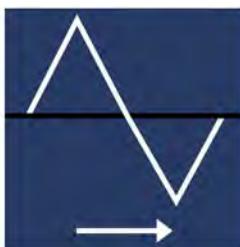

Sawtooth Wave

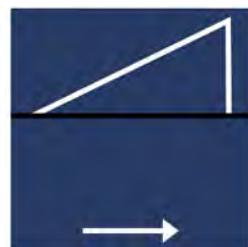

Ramp Up Wave

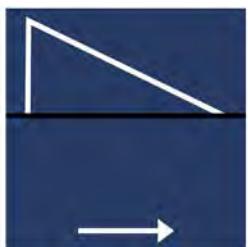

Ramp Down Wave

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
Waveform	1	1	Sinewave-Cross (default)		In and Out fade start at the same time
	2	2	Sinewave-Full		In fade completes, then out fade completes
	3	3	Sawtooth-Cross		In and Out fade start at the same time
	4	4	Sawtooth-Full		In fade completes, then out fade completes
	5	5	Ramp Up		
	6	6	Ramp Down		
	7	7	Steps		
	8	8			
	9	9			
	10	10			
Intensity	11	11	Single	Reverse, Stop, Forward	1,2,3,4,5,6,7,8,9,10,11,12
	12	12	Single Bounce	Reverse, Stop, Forward	1,2,3,4,5,6,7,8,9,10,11,12,11,10,9,8,7,6,5,4,3,2
	13	13	2 Pixels	Reverse, Stop, Forward	Any two random pixels per step
	14	14	3 Pixels	Reverse, Stop, Forward	Any 3 random pixels per step
	15	15	4 Pixels	Reverse, Stop, Forward	Any 4 random pixels per step
	16	16	5 Pixels	Reverse, Stop, Forward	Any 5 random pixels per step
	17	17	6 Pixels	Reverse, Stop, Forward	Any 6 random pixels per step
	18	18	1,2,3,4 pixels	Reverse, Stop, Forward	Pick randomly 1, then 2, then 3, then 4 pixels
	19	19			
	20	20	Alternate SparkLED	Reverse, Stop, Forward	Alternate evenly (tick/tock/tick/tock) between RGBW Pixel at Full and SparkLEDs @Full. Keep all colors strobes, intensities as set by DMX.
	21	21	Burst SparkLED	Reverse, Stop, Forward	Toggles between RGBW Pixel at Full (long on) and SparkLEDs @Full (short flash). Keep all colors strobes, intensities as set by DMX.
	22	22	Alternate SparkLED 2	Reverse, Stop, Forward	Strobes between RGBW Pixel at Full (short, then off) and SparkLEDs @Full (short, then off). Keep all colors strobes, intensities as set by DMX.
	23	23	Burst RGBW	Reverse, Stop, Forward	Toggles between RGBW Pixel at Full (short flash) and SparkLEDs @Full (long on). Keep all colors strobes, intensities as set by DMX.
	24	24	Lens/SparkLED alternate	Reverse, Stop, Forward	Random Lens @ Full, then different Random Strobe section of 4pixels @ Full. Keep all colors strobes, intensities as set by DMX.
	25	25	Alternate StrobeLED	Reverse, Stop, Forward	Alternate evenly (tick/tock/tick/tock) between RGBW Pixel at Full and Strobeline @Full. Keep all colors strobes, intensities as set by DMX.
	26	26	Burst StrobeLED	Reverse, Stop, Forward	Toggles between RGBW Pixel at Full (long on) and Strobeline @Full (short flash). Keep all colors strobes, intensities as set by DMX.
	27	27	Alternate StrobeLED 2	Reverse, Stop, Forward	Strobes between RGBW Pixel at Full (short, then off) and Strobelines @Full (short, then off). Keep all colors strobes, intensities as set by DMX.
	28	28	Burst RGBW	Reverse, Stop, Forward	Toggles between RGBW Pixel at Full (short flash) and Strobelines @Full (long on). Keep all colors strobes, intensities as set by DMX.

# RGBW PIXEL FX TABLE

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
	29	29			
	30	30			
	31	31			
	32	32			
	33	33			
	34	34			
	35	35			
	36	36			
	37	37			
	38	38			
	39	39			
	40	40			
	41	41			
	42	42			
	43	43			
	44	44			
	45	45			
	46	46			
	47	47			
	48	48			
	49	49			
	50	50			
Intensity	51	51			
	52	52			
	53	53			
	54	54			
	55	55			
	56	56			
	57	57			
	58	58			
	59	59			
	60	60			
	61	61			
	62	62			
	63	63			
	64	64			
	65	65			
	66	66			
	67	67			
	68	68			
	69	69			
	70	70			
	71	71			
	72	72			
	73	73			
	74	74			
	75	75			

# RGBW PIXEL FX TABLE

Features subject to change without notice					
Type	Slot	DMX	Name	FX Adjustment	Notes/Steps
Intensity	76	76			
	77	77			
	78	78			
	79	79			
	80	80			
	81	81			
	85	85			
	86	86			
	87	87			
	88	88			
	89	89			
	90	90			
	91	91			
	92	92			
	93	93			
	94	94			
	95	95			
	96	96			
	97	97			
	98	98			
	99	99			
	100	100			
Colors	101	101	RGBW Cells	Reverse, Stop, Forward	Every Pixel Randomly picks a Red, Green, Blue or White on every step
	102	102	RGBWCMY Cells	Reverse, Stop, Forward	Every Pixel Randomly picks a Red, Green, Blue, White, Cyan, Magenta, Yellow on every step
	103	103	Color Wheel Cells	Reverse, Stop, Forward	Every Pixel Randomly picks a color from the color wheel on every step
	104	104	Red White Cells	Reverse, Stop, Forward	Every Cell Randomly picks White or Red on every Step
	105	105	Green White Cells	Reverse, Stop, Forward	Every Cell Randomly picks White or Green on every Step
	106	106	Blue White Cells	Reverse, Stop, Forward	Every Cell Randomly picks White or Blue on every Step
	107	107	Red Green Cells	Reverse, Stop, Forward	Every Cell Randomly picks Red or Green on every Step
	108	108	Red Blue Cells	Reverse, Stop, Forward	Every Cell Randomly picks Red or Blue on every Step
	109	109	Blue Green Cells	Reverse, Stop, Forward	Every Cell Randomly picks Blue or Green on every Step
	110	110	Random White Cell	Reverse, Stop, Forward	RGBW @ Full randomly is set to one cell at a time over the currently mixed color
	111	111	White Flash	Reverse, Stop, Forward	RGBW @ Full flashes once over the current mixed color on all Cells
	112	112	Red Flash	Reverse, Stop, Forward	Red @ Full flashes once over the current mixed color on all Cells
	113	113	Green Flash	Reverse, Stop, Forward	Green @ Full flashes once over the current mixed color on all Cells
	114	114	Blue Flash	Reverse, Stop, Forward	Blue @ Full flashes once over the current mixed color on all Cells
	115	115	Color Wheel Flash	Reverse, Stop, Forward	Current Color Wheel Color @ Full flashes once over the current mixed color on all Cells
	116	116	Alternate Color	Reverse, Stop, Forward	Alternates between mixed color and Color Wheel Color on all cells

# RGBW PIXEL FX TABLE

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
Colors	117	117			
	118	118			
	119	119			
	120	120			
	121	121			
	123	123			
	124	124			
	125	125			
	126	126			
	127	127			
	128	128			
	129	129			
	130	130			
	131	131			
	132	132			
	133	133			
	134	134			
	135	135			
	136	136			
	137	137			
	138	138			
	139	139			
	140	140			
	141	141			
	142	142			
	143	143			
	144	144			
	145	145			
	146	146			
	147	147			
	148	148			
	149	149			
	150	150			
	151	151			
	152	152			
	153	153			
	154	154			
	155	155			
	156	156			
	157	157			
	158	158			
	159	159			
	160	160			
	161	161			
	162	162			
	163	163			
	164	164			
	165	165			
	166	166			
	167	167			
	168	168			
	169	169			
	170	170			

# RGBW PIXEL FX TABLE

Features subject to change without notice


TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
Colors	171	171			
	172	172			
	173	173			
	174	174			
	175	175			
	176	176			
	177	177			
	178	178			
	179	179			
	180	180			
	181	181			
	182	182			
	183	183			
	184	184			
	185	185			
	186	186			
	187	187			
	188	188			
	189	189			
	191	191			
	192	192			
	193	193			
	194	194			
	195	195			
	196	196			
	197	197			
	198	198			
	199	199			
	200	200			
	201	201			
	202	202			
	203	203			
	204	204			
	205	205			
	206	206			
	207	207			
	208	208			
	209	209			
	210	210			
	211	211			
	212	212			
	213	213			
	214	214			
	215	215			
	216	216			
	217	217			
	218	218			
	219	219			
	220	220			

# RGBW PIXEL FX TABLE


Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
Colors	221	221			
	222	222			
	223	223			
	224	224			
	225	225			
	226	226			
	227	227			
	228	228			
	229	229			
	230	230			
	231	231			
	232	232			
	233	233			
	234	234			
	235	235			
	236	236			
	237	237			
	238	238			
	239	239			
	240	240			
	241	241			
	242	242			
	243	243			
	244	244			
	245	245			
	246	246			
	247	247			
	248	248			
	249	249			
	250	250			
	251	251			
	252	252			
	253	253			
	254	254			
	255	255			


# SPARKLED FX TABLE

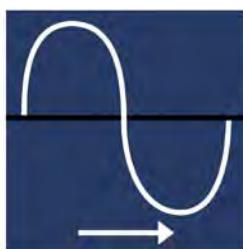


Sine Wave

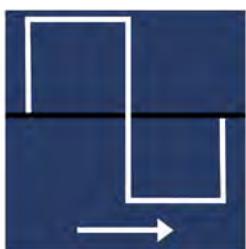


Step Wave (Square)

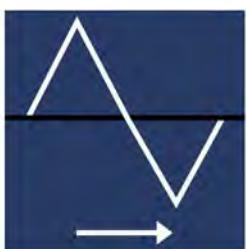

Sawtooth Wave

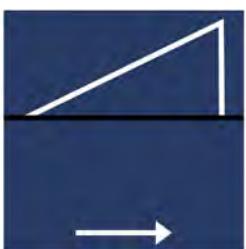

Ramp Up Wave

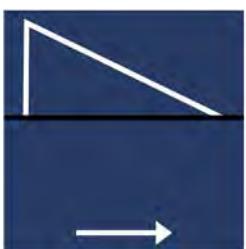

Ramp Down Wave

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
Waveform	1	1	Sinewave-Cross (default)		In and Out fade start at the same time
	2	2	Sinewave-Full		In fade completes, then out fade completes
	3	3	Sawtooth-Cross		In and Out fade start at the same time
	4	4	Sawtooth-Full		In fade completes, then out fade completes
	5	5	Ramp Up		
	6	6	Ramp Down		
	7	7	Steps		
	8	8			
	9	9			
	10	10			
SparkLED FX	11	11	Starfield	Reverse, Stop, Forward	Pixels randomly go on and off with random lengths of on and off times
	12	12	1 Pixel	Reverse, Stop, Forward	Random 1 Pixel per step
	13	13	2 Pixels	Reverse, Stop, Forward	Random 2 Pixel per step
	14	14	3 Pixels	Reverse, Stop, Forward	Random 3 Pixel per step
	15	15	4 pixels	Reverse, Stop, Forward	Random 4 Pixel per step
	16	16	5 pixels	Reverse, Stop, Forward	Random 5 Pixel per step
	17	17	7 pixels	Reverse, Stop, Forward	Random 7 Pixel per step
	18	18	8 pixels	Reverse, Stop, Forward	Random 8 Pixel per step
	19	19	Single Row	Reverse, Stop, Forward	One single row per step
	20	20	Single Column	Reverse, Stop, Forward	Single column per step
	21	21	3 Column	Reverse, Stop, Forward	Three columns per step
	22	22	Pixel Ring Chase	Reverse, Stop, Forward	In every RGBW lens one Sparkled at a time. E.g. Lens 1, Sparkled 1,8,19,7 at the same time Lens 2, 2,10,20,9
	23	23	Pixel Row Chase	Reverse, Stop, Forward	In every RGBW pixel one Sparkled at a time. E.g. Lens 1, Sparkled 1, 3+4, 8 at the same time Lens 2, 2, 5+6, 10
	24	24	Pixel Ring Chase 2	Reverse, Stop, Forward	For one RGBW pixel after another turn on one SparkLeds per step, e.g. Lens 1, 1,4,8,3, then Lens 2, 2,6,10,5 etc....
	25	25	Center Out	Reverse, Stop, Forward	Turn on all Sparkleds in Lens 3+4, then step from the center out to the edge
	26	26	Fireworks	Reverse, Stop, Forward	Replicate an exploding firework rocket
	27	27	Ring	Reverse, Stop, Forward	
	28	28	Row	Reverse, Stop, Forward	
	29	29	Snake	Reverse, Stop, Forward	
	30	30			
	31	31			
	32	32			
	33	33			
	34	34			
	35	35			
	36	36			
	37	37			
	38	38			

# SPARKLED FX TABLE

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
	39	39			
	40	40			
	41	41			
	42	42			
	43	43			
	44	44			
	45	45			
	46	46			
	47	47			
	48	48			
	49	49			
	50	50			
	51	51			
	52	52			
	53	53			
	54	54			
	55	55			
	56	56			
	57	57			
	58	58			
	59	59			
	60	60			
	61	61			
	62	62			
	63	63			
	64	64			
	65	65			
	66	66			
	67	67			
	68	68			
	69	69			
	70	70			
	71	71			
	72	72			
	73	73			
	74	74			
	75	75			
	76	76			
	77	77			
	78	78			
	79	79			
	80	80			
	81	81			
	82	82			
	83	83			
	84	84			
	85	85			
	86	86			
	87	87			
	88	88			
	89	89			
	90	90			

# SPARKLED FX TABLE

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
SparkLED Lens Combos	91	91			
	92	92			
	93	93			
	94	94			
	95	95			
	96	96			
	97	97			
	98	98			
	99	99			
	100	100			
Full Lens Patterns (all SparkLED in the lens # turn on together)	101	101	Single	Reverse, Stop, Forward	1,2,3,4,5,6,7,8,9,10,11,12
	102	102	Single Bounce	Reverse, Stop, Forward	1,2,3,4,5,6,7,8,9,10,11,12,11,10,9,8,7,6,5,4,3,2
	103	103	Fill Row	Reverse, Stop, Forward	1, 1+2, 1+2+3, 1+2+3+4, ..., 1+2+3+4+5+6+7+8+9+10+11+12, 1+2+3+4+5+6+7+8+9+10+11, ..., 1+2+3+4, 1+2+3, 1+2, 1
	104	104	2 Pixels	Reverse, Stop, Forward	Any two random pixels per step
	105	105	3 Pixels	Reverse, Stop, Forward	Any three random pixels per step
	106	106	4 Pixels	Reverse, Stop, Forward	Any four random pixels per step
	107	107	1,2,3 pixels	Reverse, Stop, Forward	Pick randomly 1, then 2, then 3 pixels
	108	108			
	109	109			
	110	110			
	111	111			
	112	112			
	113	113			
	114	114			
	115	115			
	116	116			
	117	117			
	118	118			
	119	119			
	120	120			
	121	121			
	122	122			
	123	123			
	124	124			
	125	125			
	126	126			
	127	127			
	128	128			
	129	129			
	130	130			
	131	131			
	132	132			
	133	133			
	134	134			
	135	135			
	136	136			
	137	137			
	138	138			
	139	139			
	140	140			
	141	141			
	142	142			
	143	143			
	144	144			
	145	145			

# SPARKLED FX TABLE

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
	146	146			
	147	147			
	148	148			
	149	149			
	150	150			
	151	151	Out	disabled	1+2+11+12
	152	152	Mid	disabled	3+4+9+10
	153	153	Center	disabled	5+6+7+8
	154	154	Set 1	disabled	1+7
	155	155	Set 2	disabled	2+8
	156	156	Set 3	disabled	3+9
	157	157	Set 4	disabled	4+10
	158	158	Set 5	disabled	5+11
	159	159	Set 6	disabled	6+12
	160	160	Block 2-1	disabled	1+2
	161	161	Block 2-2	disabled	3+4
	162	162	Block 2-3	disabled	5+6
	163	163	Block 2-4	disabled	7+8
	164	164	Block 2-5	disabled	9+10
	165	165	Block 2-6	disabled	11+12
	166	166	Block 3-1	disabled	1+2+3
	167	167	Block 3-2	disabled	4+5+6
	168	168	Block 3-3	disabled	7+8+9
	169	169	Block 3-4	disabled	10+11+12
	170	170			
	171	171			
	172	172			
	173	173			
	174	174			
	175	175			
	176	176			
	177	177			
	178	178			
	179	179			
	180	180			
	181	181			
	182	182			
	183	183			
	184	184			
	185	185			
	186	186			
	187	187			
	188	188			
	189	189			
	190	190			
	191	191			
	192	192			
	193	193			
	194	194			
	195	195			
	196	196			
	197	197			
	198	198			
	199	199			
	200	200			


Full Lens Patterns (all SparkLED in the lens # turn on together)

# SPARKLED FX TABLE


Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
Sparkled Pattern	201	201	Row 1	disabled	
	202	202	Row 2	disabled	
	203	203	Row 3	disabled	
	204	204	Column 1	disabled	
	205	205	Column 2	disabled	
	206	206	Column 3	disabled	
	207	207	Column 4	disabled	
	208	208	Column 5	disabled	
	209	209	Column 6	disabled	
	210	210	Column 7	disabled	
	211	211	Column 8	disabled	
	212	212	Column 9	disabled	
	213	213	Column 10	disabled	
	214	214	Column 11	disabled	
	215	215	Column 12	disabled	
	216	216	Column 13	disabled	
	217	217	Column 14	disabled	
	218	218	Column 15	disabled	
	219	219	Column 16	disabled	
	220	220	Column 17	disabled	
	221	221	Column 18	disabled	
	222	222	Column 19	disabled	
	223	223	Column 20	disabled	
	224	224	Column 21	disabled	
	225	225	Column 22	disabled	
	226	226	Column 23	disabled	
	227	227	Column 24	disabled	
	228	228	Column 25	disabled	
	229	229	Column 26	disabled	
	230	230	Column 27	disabled	
	231	231	Column 28	disabled	
	232	232	Column 29	disabled	
	233	233	Column 30	disabled	
	234	234	Column 31	disabled	
	235	235	Column 32	disabled	
	236	236	Column 33	disabled	
	237	237	Column 34	disabled	
	238	238	Column 35	disabled	
	239	239	Column 36	disabled	
	240	240	Lens 1	disabled	
	241	241	Lens 2	disabled	
	242	242	Lens 3	disabled	
	243	243	Lens 4	disabled	
	244	244	Lens 5	disabled	
	245	245	Lens 6	disabled	
	246	246	Lens 7	disabled	
	247	247	Lens 8	disabled	
	248	248	Lens 9	disabled	
	249	249	Lens 10	disabled	
	250	250	Lens 11	disabled	
	251	251	Lens 12	disabled	
	252	252			
	253	253			
	254	254			
	255	255			


# STROBESCREEN FX TABLE

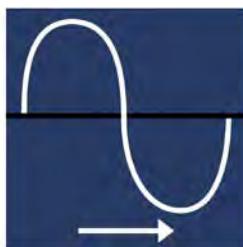


Sine Wave

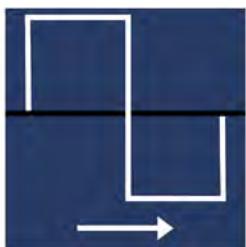


Step Wave (Square)

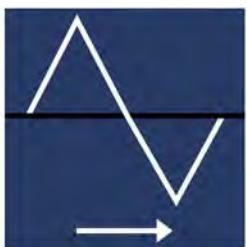

Sawtooth Wave

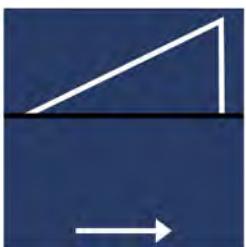

Ramp Up Wave

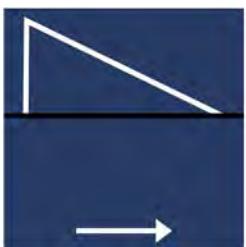

Ramp Down Wave

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
Waveform	1	1	Sinewave-Cross (default)		In and Out fade start at the same time
	2	2	Sinewave-Full		In fade completes, then out fade completes
	3	3	Sawtooth-Cross		In and Out fade start at the same time
	4	4	Sawtooth-Full		In fade completes, then out fade completes
	5	5	Ramp Up		
	6	6	Ramp Down		
	7	7	Steps		
	8	8			
	9	9			
	10	10			
StrobeLineFX	11	11	Starfield	Reverse, Stop, Forward	Pixels randomly go on and off with random lengths of on and off times
	12	12	Inverse Starfield	Reverse, Stop, Forward	Pixels randomly go on and off with random lengths of on and off times
	13	13	1 Pixel	Reverse, Stop, Forward	Random 1 Pixel per step
	14	14	2 Pixels	Reverse, Stop, Forward	Random 2 Pixel per step
	15	15	3 Pixels	Reverse, Stop, Forward	Random 3 Pixel per step
	16	16	4 pixels	Reverse, Stop, Forward	Random 4 Pixel per step
	17	17	5 pixels	Reverse, Stop, Forward	Random 5 Pixel per step
	18	18	7 pixels	Reverse, Stop, Forward	Random 7 Pixel per step
	19	19	8 pixels	Reverse, Stop, Forward	Random 8 Pixel per step
	20	20	Single Row	Reverse, Stop, Forward	One single row per step
	21	21	Single Column	Reverse, Stop, Forward	Single column per step
	22	22	Mirror	Reverse, Stop, Forward	
	23	23	Mirror Circle	Reverse, Stop, Forward	
	24	24	Knight Rider	Reverse, Stop, Forward	
	25	25	Marque	Reverse, Stop, Forward	
	26	26	Center Out	Reverse, Stop, Forward	
	27	27	Fireworks	Reverse, Stop, Forward	Replicate an exploding firework rocket
	28	28	Ring	Reverse, Stop, Forward	
	29	29	Row	Reverse, Stop, Forward	
	30	30			
	31	31			
	32	32			
	33	33			
	34	34			
	35	35			
	36	36			
	37	37			
	38	38			
	39	39			
	40	40			

# STROBELINE FX TABLE

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
StrobeLineFX	41	41			
	42	42			
	43	43			
	44	44			
	45	45			
	46	46			
	47	47			
	48	48			
	49	49			
	50	50			
	51	51			
	52	52			
	53	53			
	54	54			
	55	55			
	56	56			
	57	57			
	58	58			
	59	59			
	60	60			
	61	61			
	62	62			
	63	63			
	64	64			
	65	65			
	66	66			
	67	67			
	68	68			
	69	69			
	70	70			
	71	71			
	72	72			
	73	73			
	74	74			
	75	75			
	75	75			
	76	76			
	77	77			
	78	78			
	79	79			
	80	80			
	81	81			
	82	82			
	83	83			
	84	84			
	85	85			
	86	86			
	87	87			
	88	88			
	89	89			
	90	90			

# STROBELINE FX TABLE

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
StrobeLineFX	91	91			
	92	92			
	93	93			
	94	94			
	95	95			
	96	96			
	97	97			
	98	98			
	99	99			
	100	100			
	101	101	Single	Reverse, Stop, Forward	
	102	102	Single Top / Bottom	Reverse, Stop, Forward	Top Row chases first, then bottom row
	103	103	1/4	Reverse, Stop, Forward	
	104	104	1/4 Top / Bottom	Reverse, Stop, Forward	
	105	105	1/8	Reverse, Stop, Forward	
	106	106	1/8 Top-Bottom	Reverse, Stop, Forward	
	107	107	Single Bounce	Reverse, Stop, Forward	
	108	108	Fill Row	Reverse, Stop, Forward	
	109	109	1/4 Bounce	Reverse, Stop, Forward	
	110	110	1/4 Bounce Single	Reverse, Stop, Forward	
	111	111			
	112	112			
	113	113			
	114	114			
	115	115			
	116	116			
	117	117			
	118	118			
	119	119			
	120	120			
	121	121			
	122	122			
	123	123			
	124	124			
	125	125			
	126	126			
	127	127			
	128	128			
	129	129			
	130	130			
	131	131			
	132	132			
	133	133			
	134	134			
	135	135			
	136	136			
	137	137			
	138	138			
	139	139			
	140	140			
	141	141			
	142	142			
	143	143			
	144	144			
	145	145			

# STROBELINE FX TABLE

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
StrobeLineFX	146	146			
	147	147			
	148	148			
	149	149			
	150	150			
	151	151			
	152	152			
	153	153			
	154	154			
	155	155			
	146	146			
	147	147			
	148	148			
	149	149			
	150	150			
	151	151			
	152	152			
	153	153			
	154	154			
	155	155			
	156	156			
	157	157			
	158	158			
	159	159			
	160	160			
	161	161			
	162	162			
	163	163			
	164	164			
	165	165			
	166	166			
	167	167			
	168	168			
	169	169			
	170	170			
	171	171			
	172	172			
	173	173			
	174	174			
	175	175			
	176	176			
	177	177			
	178	178			
	179	179			
	180	180			
	181	181			
	182	182			
	183	183			
	184	184			
	185	185			
	186	186			
	187	187			
	188	188			
	189	189			
	190	190			

# STROBELINE FX TABLE

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
Sparkled Pattern	191	191	Row 1	disabled	
	192	192	Row 2	disabled	
	193	193	Quarter 1	disabled	
	194	194	Quarter 2	disabled	
	195	195	Quarter 3	disabled	
	196	196	Quarter 4	disabled	
	197	197	1/8	disabled	
	198	198	2/8	disabled	
	199	199	3/8	disabled	
	200	200	4/8	disabled	
	201	201	5/8	disabled	
	202	202	6/8	disabled	
	203	203	7/8	disabled	
	204	204	8/8	disabled	
	205	205	Column 1	disabled	
	206	206	Column 2	disabled	
	207	207	Column 3	disabled	
	208	208	Column 4	disabled	
	209	209	Column 5	disabled	
	210	210	Column 6	disabled	
	211	211	Column 7	disabled	
	212	212	Column 8	disabled	
	213	213	Column 9	disabled	
	214	214	Column 10	disabled	
	215	215	Column 11	disabled	
	216	216	Column 12	disabled	
	217	217	Column 13	disabled	
	218	218	Column 14	disabled	
	219	219	Column 15	disabled	
	220	220	Column 16	disabled	
	221	221	Column 17	disabled	
	222	222	Column 18	disabled	
	223	223	Column 19	disabled	
	224	224	Column 20	disabled	
	225	225	Column 21	disabled	
	226	226	Column 22	disabled	
	227	227	Column 23	disabled	
	228	228	Column 24	disabled	
	229	229	Column 25	disabled	
	230	230	Column 26	disabled	
	231	231	Column 27	disabled	
	232	232	Column 28	disabled	
	233	233	Column 29	disabled	
	234	234	Column 30	disabled	
	235	235	Column 31	disabled	
	236	236	Column 32	disabled	

# STROBELINE FX TABLE

Features subject to change without notice

TYPE	SLOT	DMX	NAME	FX ADJUSTMENT	NOTES/STEPS
Sparkled Pattern	237	237	Lens 1	disabled	Strobe LEDs above and below the lens
	238	238	Lens 2	disabled	Strobe LEDs above and below the lens
	239	239	Lens 3	disabled	Strobe LEDs above and below the lens
	240	240	Lens 4	disabled	Strobe LEDs above and below the lens
	241	241	Lens 5	disabled	Strobe LEDs above and below the lens
	242	242	Lens 6	disabled	Strobe LEDs above and below the lens
	243	243	Lens 7	disabled	Strobe LEDs above and below the lens
	244	244	Lens 8	disabled	Strobe LEDs above and below the lens
	245	245	Lens 9	disabled	Strobe LEDs above and below the lens
	246	246	Lens 10	disabled	Strobe LEDs above and below the lens
	247	247	Lens 11	disabled	Strobe LEDs above and below the lens
	248	248	Lens 12	disabled	Strobe LEDs above and below the lens
	249	249			
	250	250			
	251	251			
	252	252			
	253	253			
	254	254			
	255	255			

# REMOTE DEVICE MANAGEMENT (RDM)

**NOTE: In order for RDM to work properly, RDM enabled equipment must be used throughout the entire system, including DMX data splitters and wireless systems.**

Remote Device Management (RDM) is a protocol that sits on top of the DMX512 data standard for lighting, allowing the DMX systems of the device to be managed, modified, and monitored remotely (hence, remote device management). This protocol is ideal for fixtures installed in locations that are not easily accessible.

With RDM, the DMX512 system becomes bi-directional, allowing a compatible RDM enabled controller to send out a signal to devices on the wire, as well as allowing the fixture to respond (known as a GET command). The controller can then use it's SET command to modify settings that would typically have to be changed or viewed directly via the unit's display screen, including the DMX Address, DMX Channel Mode, and Temperature Sensors.

## Fixture RDM Codes:

Model ID	RDM Code	Personality ID	Device ID
1756	0x6DC	Open	Open

**Please be aware that not all RDM devices support all RDM features**, and therefore it is important to check beforehand to ensure that the equipment that you are considering includes all of the features that you require.

The following parameters are accessible in RDM on this device:

Sensor Definition
Sensor Value
Device Model Description
Manufacturer Label
Device Label
DMX Personality
DMX Personality Description
Device Hours
Comms Status
Status ID Description
Clear Status ID
Device Power Cycles
Tilt Invert
Display Invert
Display Level
Realtime Clock
Power State
Preset Playback
Default Slot Value
Language
Language Capabilities
Boot Software Version Label
Boot Software Version ID
Product Detail ID List
Status Messages

## ERROR CODES

When power is applied, the unit will automatically enter a “**Reset/Test**” mode. This mode brings all the internal motors to a home position. If there is an internal problem with one or more of the motors an error code will flash in the display in the form of “**XXEr**” where XX will represent a function number. For example, when the display shows “**0Er**” it means there is some type of error with the Pan motor. If there are multiple errors during the start-up process they will all flash in the display. For example: if the fixtures has errors on **Channel 1, 2, and 5** all at the same time, you will see the error message “**01Er**”, “**02Er**”, and “**05Er**” flash repeated 5 times.

If an error does occur during the initial start-up procedure the fixture will self-generate a second reset signal and try to realign all the motors and correct the errors. If the error persists after a second attempt a third attempt will be made. If after a third attempt all the errors have not been corrected the fixture will make the following determinations:

- **3 or More Errors:** The fixture cannot function properly with three or more errors therefore the fixture will place itself in a stand-by mode until subsequent repairs can be made.
- **Less Than 3 Errors:** The fixture has less than 3 errors; therefore, most other functions will work properly. The fixture will attempt to operate normally until the errors can be correct by a technician. The errors in question will remain flashing in the display as a reminder of internal errors.

Error Codes subject to change without prior written notice	
ERROR CODES	DESCRIPTION
Lamp Temp High	
Lamp Temp Error	
Base Temp High	
Base Temp Error	
Head Temp High	
Head Temp Error	
Head Humity High	
Head Humity Warning	
Base Humity High	
Base Humity Warning	
Base Fan1 Error	
Base Fan2 Error	
Base Fan3 Error	
Base Fan4 Error	
3U2JB1 LEDFan1Error	
3U2JB2 LEDFan2Error	
3U2JB3 LEDFan3Error	
3U2JB4 LEDFan4Error	
3U2JB5 FogFan1Error	
3U2JB6 FogFan2Error	
3U2JB7 FogFan3Error	
2U01 Com Fail	
3U01 Com Fail	
3U02 Com Fail	
3U03 Com Fail	
4U01 Com Fail	
5U01 Com Fail	
5U02 Com Fail	

# MAINTENANCE GUIDELINES



**DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!**

## CLEANING

Frequent cleaning is recommended to insure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics. Clean the external lens surface at least every 20 days with a soft cloth to avoid dirt/debris accumulation.

NEVER use alcohol, solvents, or ammonia-based cleaners.

## MAINTENANCE

Regular inspections are recommended to insure proper function and extended life.

There are no user serviceable parts inside this fixture, please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from an authorized Elation dealer.

Please refer to the following points during routine inspections:

- A detailed electric check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Lose screws may fall out during normal operation resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue or sediments.
- **NEVER** remove the ground prong from the power cable.

## Fixture Disassembly

The following points should be observed after performing any maintenance procedure that requires disassembly of the unit:

- After the unit has been reassembled, open the valve, and allow the light to run for approximately 2 hours to dry out any moisture that has been trapped inside the fixture. The process should continue until indicated humidity drops below 15% for the head and 30% for the base.
- Once this has been achieved, the light can be switched off, but the unit should remain connected to power so that the cooling fan can cool down the unit. Please note that allowing cool down time should **ALWAYS** be done after lamp operation.
- Some units may require partial disassembly in order to gain access to the valve. Please contact Elation service for information regarding the location and access procedure for the valve on your specific unit model.

# SPECIFICATIONS

## SOURCE

(12) 60W Osram RGBW LEDs

(48) 2W White SparkLED™

(256) 1W Strobe LED

50,000 Hour Average LED Life\*

\*Test lab conditions. May vary depending on several factors including but not limited to:

Environmental Conditions, Power/Voltage, Usage Patterns (On-Off Cycling), Control, and Dimming.

## PHOTOMETRIC DATA

11,000 Total Lumen Output (RGBW)

CRI 80

Zoom Range 6° - 45°

Colortemperature SparkLED 4000K

Colortemperature Strobe Line 6500K

## EFFECTS

Motorized Zoom

Linear Color Temperature Presets (2700-8000K)

RGBW Color Mixing and Pixel Control

White SparkLED Lens Effect

Dual White Strobe Lines (128 pixels per side)

Color Presets and Macros

Electronic Strobe and Variable Dimming Curves

16-bit Dimming

Tilt Angle: 192°

## CONTROL / CONNECTIONS

4 DMX Channel Modes (28/76/140/188 channels)

Pixel controlled Wash, SparkLED and Strobe LED

DMX Adjustable Refresh Rate (900 -25000 Hz)

(6) Button Touch Panel

Full Color 180° Reversible LCD Menu Display

RDM Support

IP65 5pin XLR DMX In/Out

IP65 RJ45 Ethernet In/Out (Art-Net, sACN)

IP65 Locking Power Cable In

## SIZE / WEIGHT

Length: 39.5 in (1004mm)

Width (Base): 7.6 in (194mm)

Width (Head): 6.1 in (155mm)

Height (head up): 13.2 in (336mm)

Height (head 90 degree): 11.3in (288mm)

Weight: 72.7 lbs. (33kg)

## ELECTRICAL / THERMAL

AC 100-240V 50/60Hz

1400W Max Power Consumption

## APPROVALS / RATINGS


CE | cETLus | IP65



Specifications and documentation subject to change without notice.


# DIMENSIONS-FIXTURE

\*Drawings not to scale. Specifications and improvements in the design of this unit and this manual are subject to change without notice.

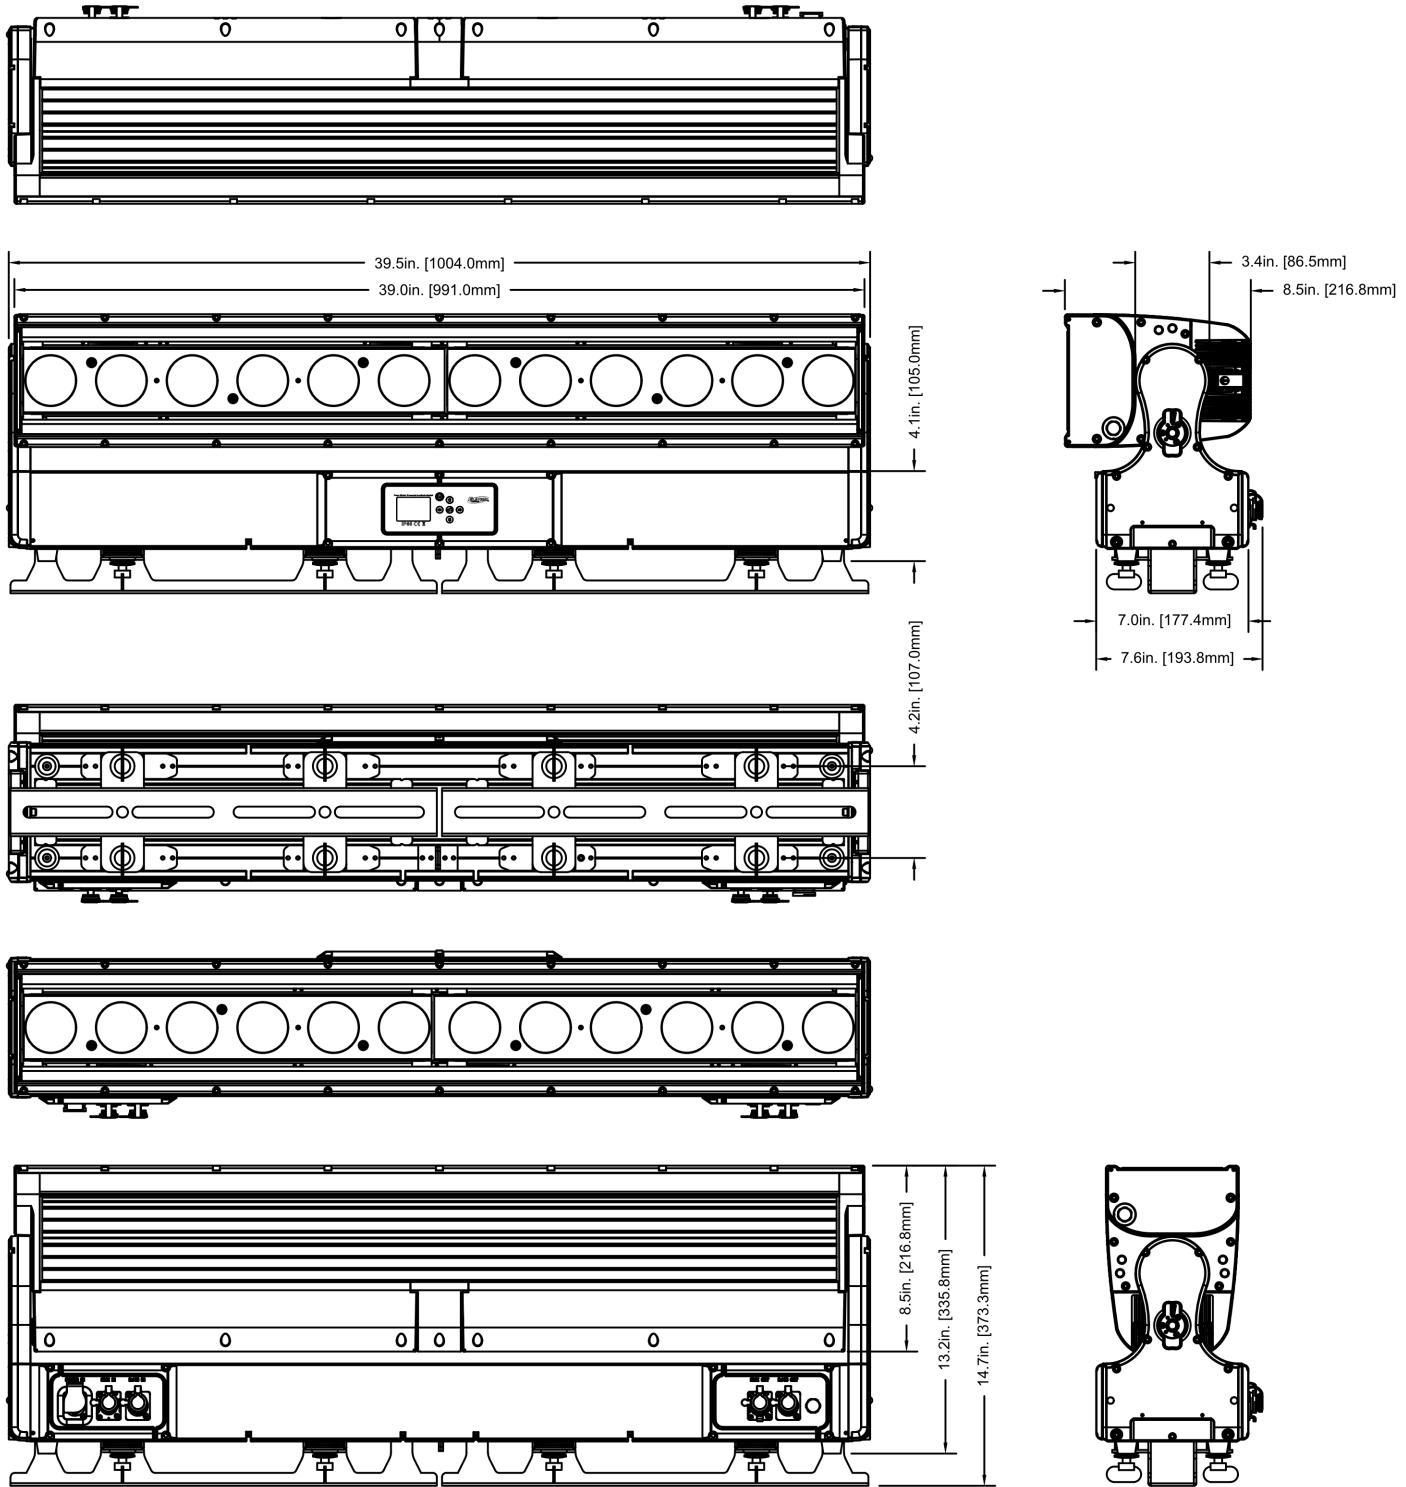

# DIMENSIONS-FIL

\*Drawings not to scale. Specifications and improvements in the design of this unit and this manual are subject to change without notice.

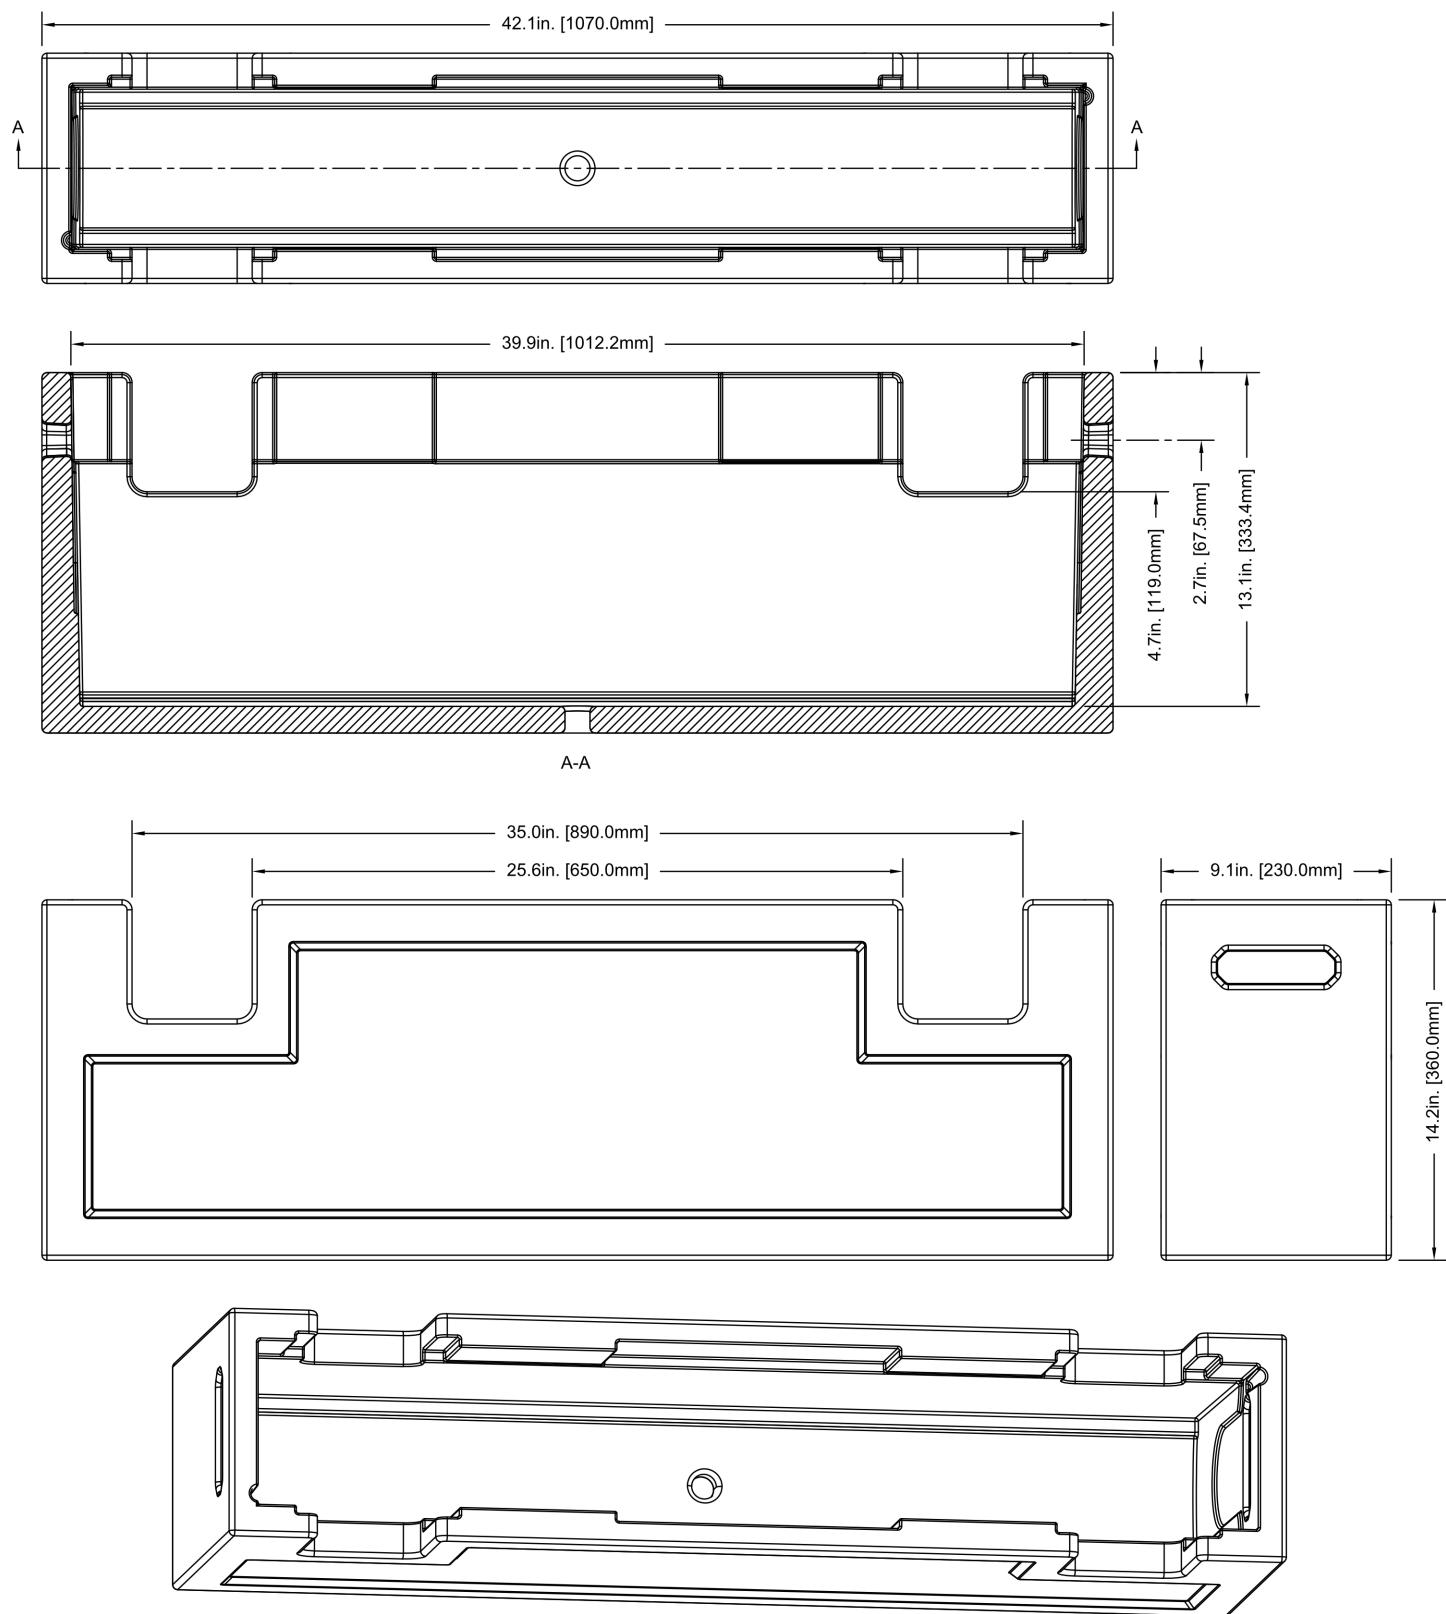

## OPTIONAL ACCESSORIES

ORDER CODE	ITEM
TRIGGER CLAMP	Heavy Duty Wrap Around Hook Style Clamp
SIP126	5 ft. (1.5m) IP65 Power Link Cable
AC5PDMX5PRO	5 ft. (1.5m) 5pin PRO DMX Cable
	Additional Cable Lengths Available

### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC RADIO FREQUENCY INTERFERENCE WARNINGS & INSTRUCTIONS

This product has been tested and found to comply with the limits as per Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device uses and can radiate radio frequency energy and, if not installed and used in accordance with the included instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following methods:

- Reorient or relocate the device.
- Increase the separation between the device and the receiver.
- Connect the device to an electrical outlet on a circuit different from which the radio receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!



